

Thank you for choosing this
PLAYSKOOL product!

Adult assembly required.

Phillips/cross head screwdriver
(not included) needed for assembly.

ages &
stages®

OVER
9
months



Includes: Play set, monkey and palm tree
snap-in piece, 3 balls, 3 stacking pieces,
instructions.

NOTE: Adult should remove and discard
plastic fasteners and all packaging materials.

x4 1.5VD or
LR20 size
**ALKALINE
BATTERIES
REQUIRED
NOT INCLUDED**

Phillips/cross head
screwdriver (not included)
needed to insert batteries.


busy
basics™


busy
ball-tivity
center™

PLAYSKOOL

believe in PLAY™


TO INSTALL BATTERIES

Use a Phillips/cross head screwdriver (not included) to loosen screws in battery compartment door. Screws remain attached to door. Remove door and insert 4 x 1.5V fresh "D" or LR20 size alkaline batteries. Fit door into unit then tighten screws.

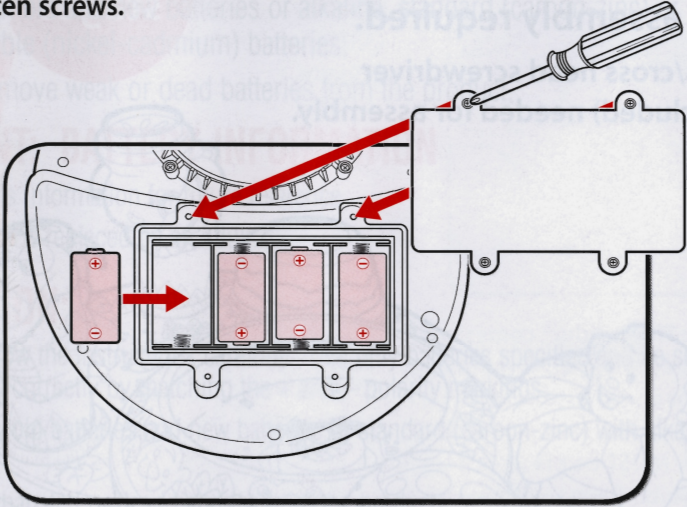


TO ASSEMBLE

1. Snap the monkey and the palm tree piece straight down into the hole. Be sure to align in proper orientation.

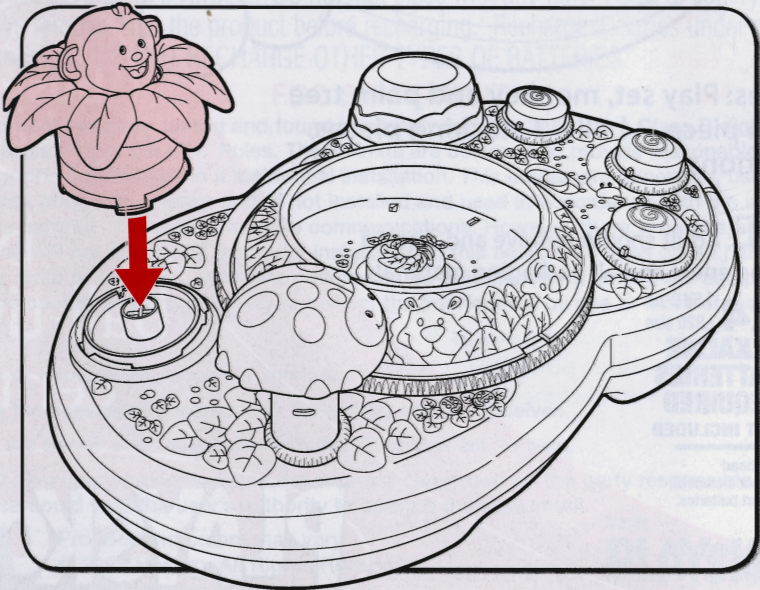


TO PLAY


The **BUSY BALL-TIVITY CENTER** toy features air-powered, poppin' droppin' musical fun!

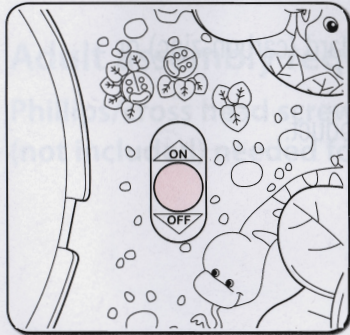

1. Slide ON/OFF switch on the right hand side of the **BALL-TIVITY CENTER** to "ON" position to activate.

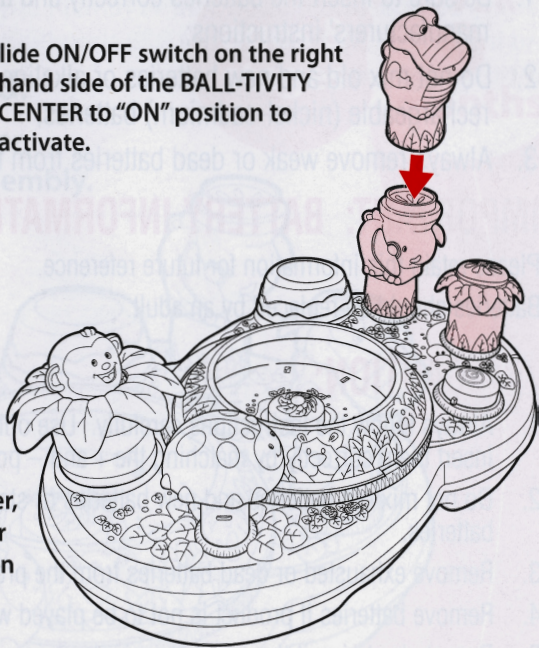

NOTE: This product comes with three stackable pieces: palm tree, elephant and alligator. When stacking pieces on top of each other, alligator **MUST** be placed on top for best results. Palm tree spins best on its own port or as the top piece of any stack.

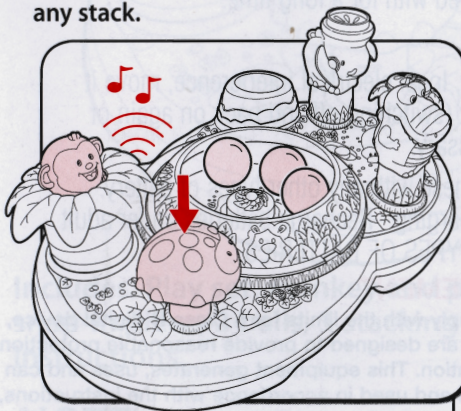

2. Pressing the ladybug causes monkey to pop out of tree and activates air flow as well as music and animal sounds. When music and sounds stop, tap on the ladybug to re-activate them.
3. Swirling ball pool with 3 balls for put 'n take play.

4. Ball floats to top of "volcano".
5. Place the stackable pieces on the three ports to watch them come to life.



NOTE: When storing toy, turn the ON/OFF switch to OFF to prevent accidental activation. If batteries begin to lose power, activities will weaken. For best results, replace batteries when this starts to happen.

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.
© 2007 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.
U.S. Pat. No. 6672930.
09406 PN 6767460000



Visit
PLAYSKOOL
.com

Questions? Call 1-800-PLAYSKL

 
PLAYSKOOL

believe in PLAY™


busy ball-tivity center™

TO ASSEMBLE

Align tab on monkey/palm tree piece with notch in base (see illustration).

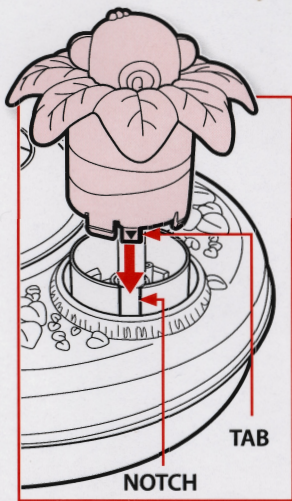

 Press down on leaves (do not press on monkey's head) until you hear an audible snap. Pull up on monkey/palm tree piece to make sure it is securely snapped in place.

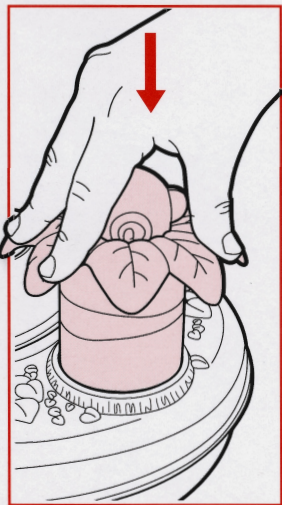

Product and colors may vary.
 © 2007 Hasbro. All Rights Reserved.
 TM & ® denote U.S. Trademarks.
 U.S. Pat. No. 6672930.
 09406 PN 6822570000

Visit
PLAYSKOOL
 .com

Questions? Call 1-800-PLAYSKL