

NERF


AGES 8+

VORTEX PRAXIS




CAUTION:

Do not aim at eyes or face. TO AVOID INJURY: Use only discs designed for this product. Do not modify discs or disc blaster.

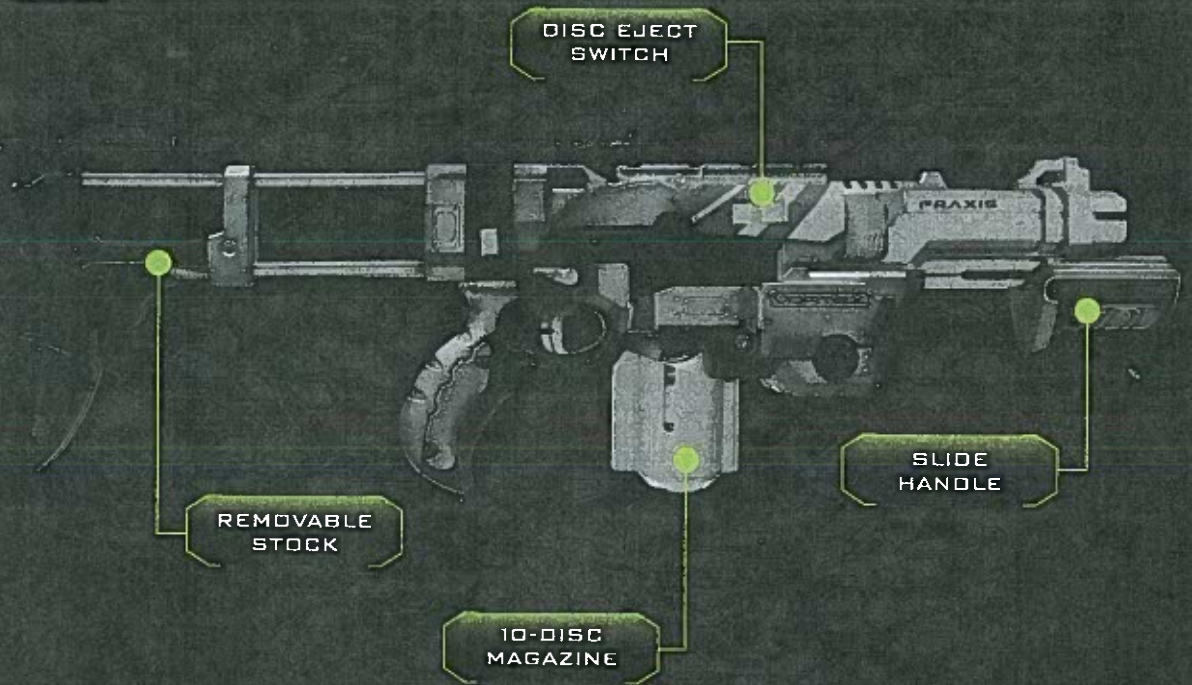


Be sure to read and follow all instructions carefully before using this product.

ASSEMBLY

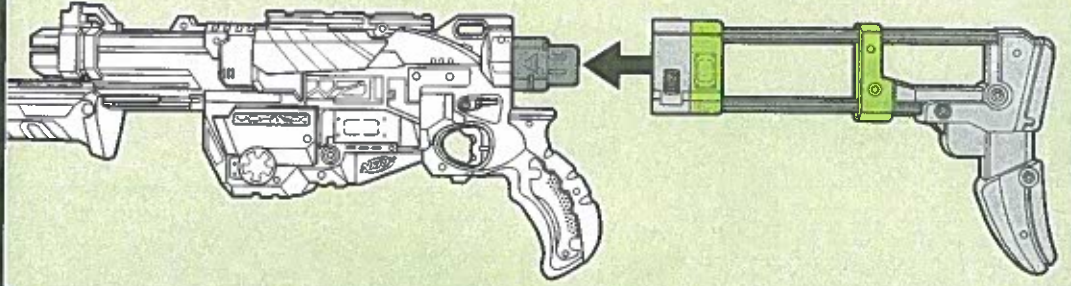


1

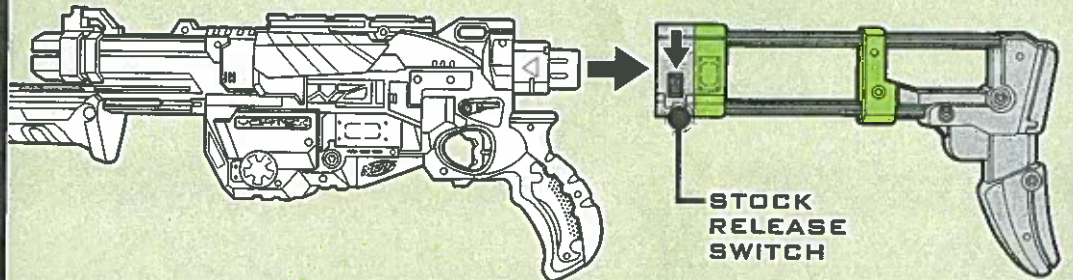

2

Slide down STOCK RELEASE SWITCH to remove stock.

LOADING AND FIRING

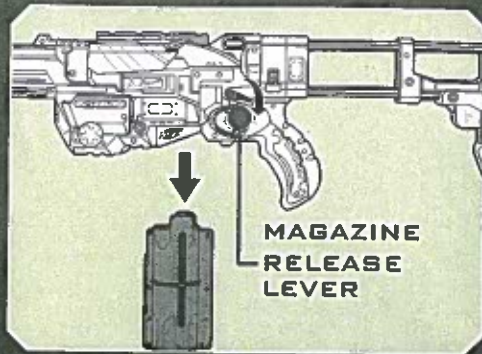


- 1 Push down the **MAGAZINE RELEASE LEVER** and pull out the 10-DISC MAGAZINE.

NOTE:


Make sure the NERF® logo is facing up. Do not load DISCS upside down.




- 2 One at a time, load up to 10 DISCS into the 10-DISC MAGAZINE. Do not load DISCS upside down. Do not load more than 10 DISCS.

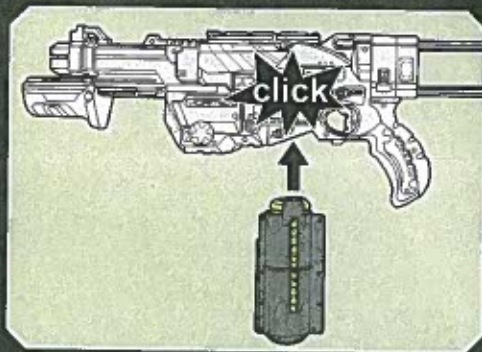

- 3 The 10-DISC MAGAZINE should slide easily into place. It only fits in one direction. Do not force it.

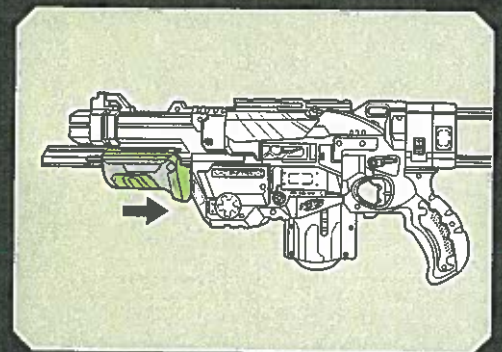

- 4 Pull **SLIDE HANDLE** all the way back, then slide it all the way forward to cock.

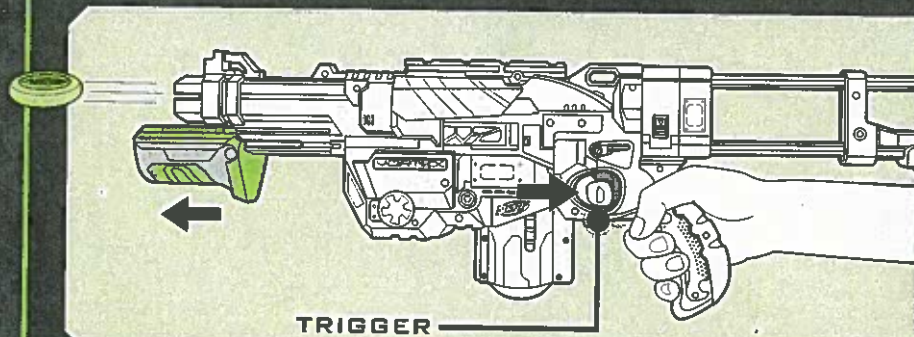


NOTE:

Single fire only. You must release the trigger before pulling the **SLIDE HANDLE** back to avoid jams.

- 5 Pull trigger to fire.

CLEARING A JAM

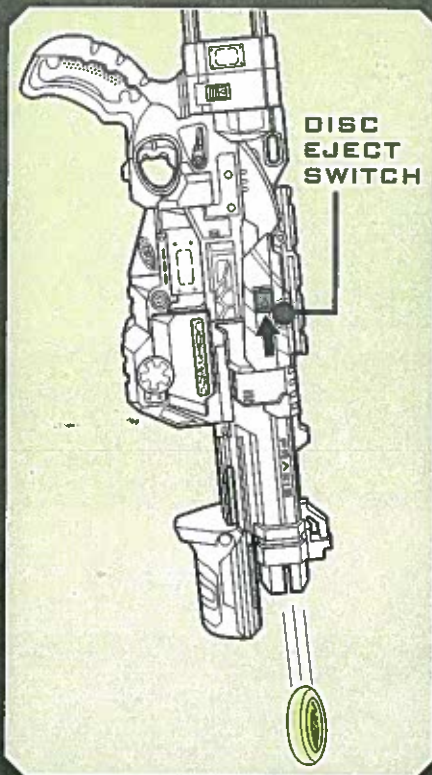

If the blaster is loaded but will not fire, it may be jammed.

- 1 Remove the 10-DISC MAGAZINE following the loading instructions.
- 2 Press and hold the DISC EJECT SWITCH backward.
- 3 Point the blaster at the ground. The jammed DISC will fall out.

Hey NERF Nation!

Join us online and keep up with the latest and greatest news from NERF!



NERF.COM



Ask a parent before going online.

Questions? Call 1-800-327-8264

Product and colors may vary.

32216
PN 7167970000



YouTube and the YouTube logo are trademarks of Google Inc. ® and/or TM. © 2011 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks. Reg. Des. No. EM0012-1509-0003 & patents pending.