

AS MOBILE – from birth to 5 months

AS SOOTHER – from birth +








Phillips/cross head screwdriver (not included) needed to insert batteries.

Adult assembly required. Phillips/cross head screwdriver (not included) required.


#### $\Lambda$

## WARNING:

Possible entanglement injury. Keep out of baby's reach. Remove mobile from crib or play pen when baby begins to push up on hands and knees.

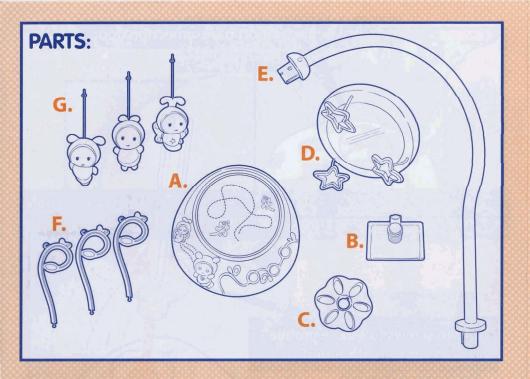

#### **INSERT BATTERIES BEFORE ASSEMBLING:**

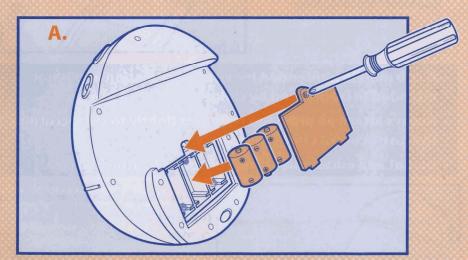

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door. Insert 3 x 1.5V C or LR14 size batteries. Alkaline batteries required. Replace door and tighten screw.

### IMPORTANT: BATTERY INFORMATION




- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always
  remove from the product before recharging. Recharge batteries under adult supervision.
  DO NOT RECHARGE OTHER TYPES OF BATTERIES.


#### **ASSEMBLY:**





For soother mode only, stop here.

# Continue Assembly instructions for full mobile

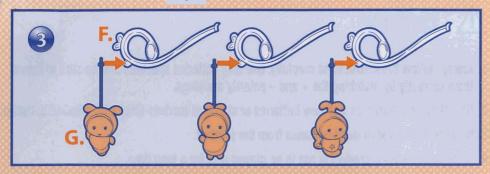

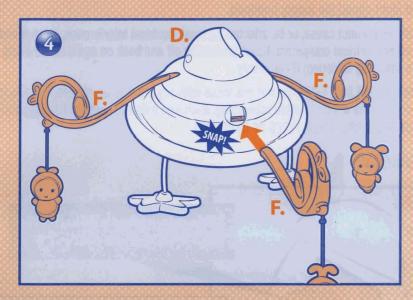

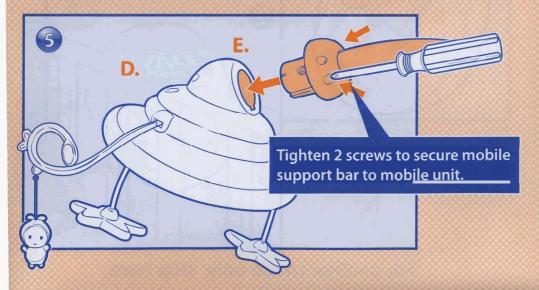

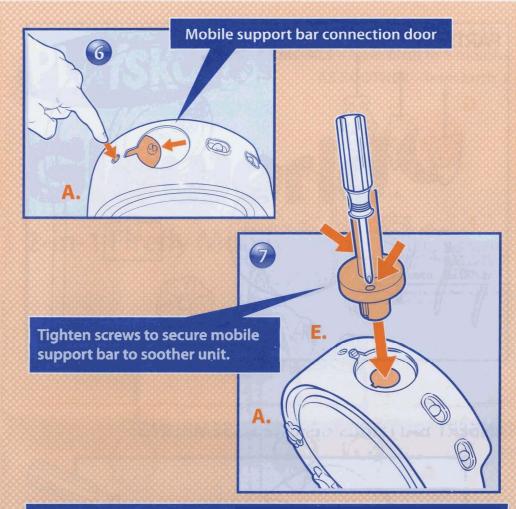

- A crib mobile is intended for visual stimulation and is not intended to be grasped by child.
- Always attach all provided fasteners tightly to crib according to the instructions. Check frequently.
- Do not add additional strings or straps to attach to crib.



**NOTE** Push button and slide crib mount panel to access battery compartment.

#### **FEATURES:**

Volume switch: Off () / Low () / High ())




**Mode switch** 





Mobile motion 🚺 / Lights only 🕎 / Lights and mobile motion 🕦



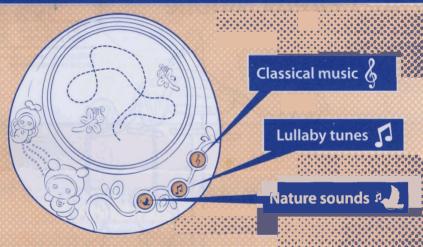

#### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

 
CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately abyonal oral war recycling centre. Do not dispose of in your household waste bin.



© 2010 Hasbro. All Rights Reserved. TM & \* denote U.S. Trademarks.



01443/013930000 Asst.

