


M ACTION MAN[®]

SKY DIVER INSTRUCTIONS


PLEASE READ INSTRUCTIONS BEFORE USE.
TO ACHIEVE SUFFICIENT HEIGHT FOR THE PARACHUTE
TO OPEN, ADULT ASSISTANCE MAY BE REQUIRED.

AGES 4 AND UP

Use only on soft grassy surfaces. Use only in wide open spaces without obstacles, such as cars, trees and overhead cables. DO NOT throw at people or animals. Make sure that the parachutist does not land upon yourself or other people.

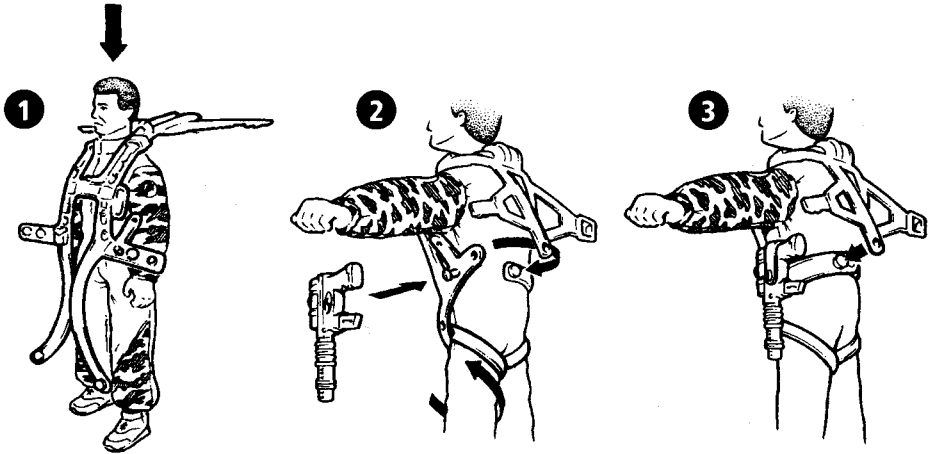


Make sure that the parachute is prepared as per instructions prior to launch in order to maximise performance.

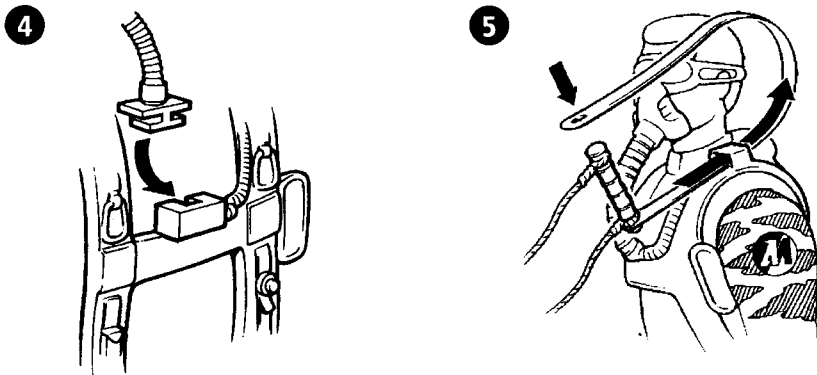


6

Allow figure to rotate to untwist strings.

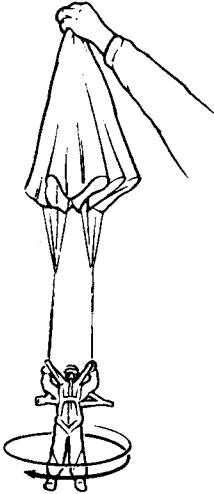


7

Fold parachute in half.

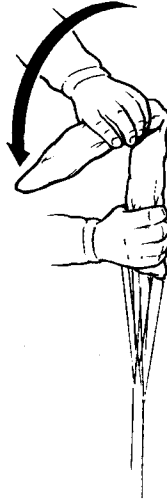

8

And in half again.

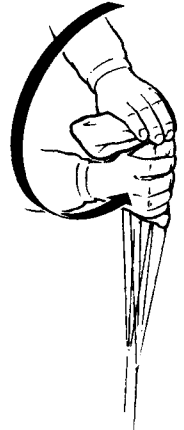


9

Hold parachute against Action Man, ensuring his arms are raised and gripping handles. Launch at around 45° to the ground, to a height of 4m or more.



10

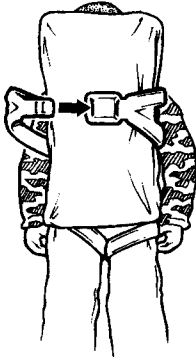

When parachute is not in use, re-fold and close strap to hold it in place.



© 1999 HASBRO, INC. Pawtucket, Rhode Island 02862. All Rights Reserved. Made in China.

568922-0000