

AM ACTION MAN

POLAR MISSION INSTRUCTIONS

PLEASE READ INSTRUCTIONS BEFORE USE.
ADULT ASSISTANCE MAY BE REQUIRED.

AGES 4 AND UP

1


TO CHANGE BATTERIES.

Requires two A76 or LR44 or equivalent
button cell batteries.


a




b

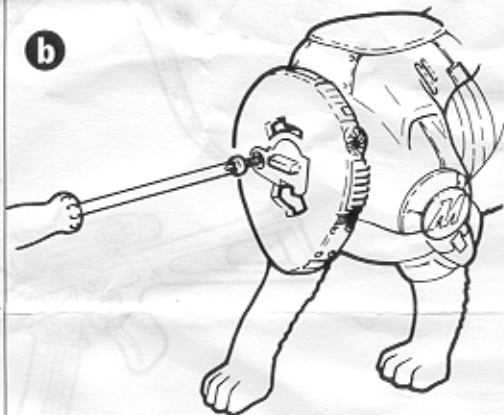

c

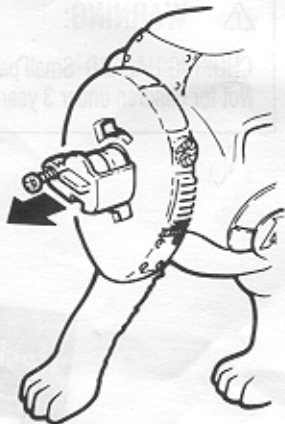


d

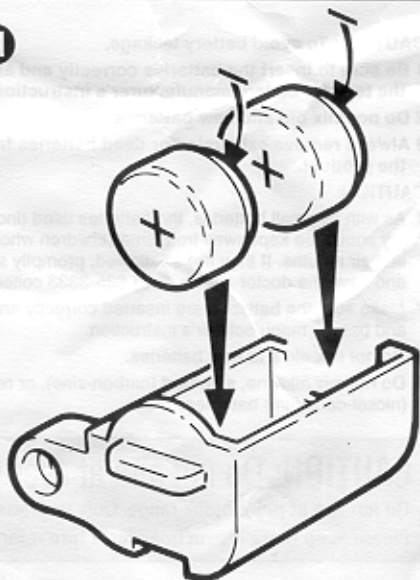

2**TO LOAD MISSILES.**

Align groove correctly
as shown and push in firmly.

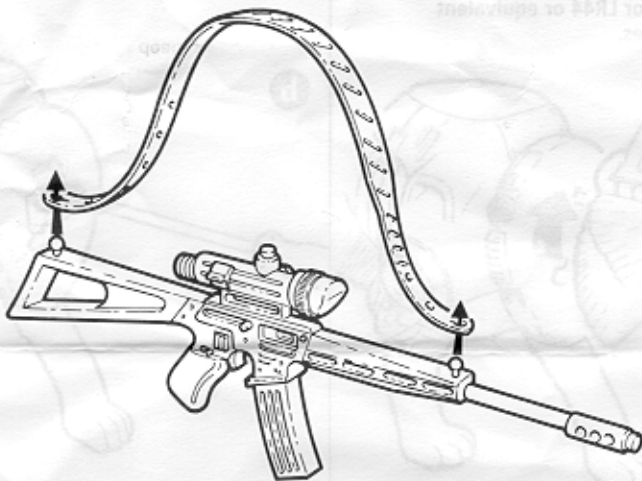**3****CAUTION: To avoid battery leakage,**

1 Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions.

2 Do not mix old and new batteries.

3 Always remove exhausted or dead batteries from the product.

CAUTION:

1. As with all small batteries, the batteries used (included) with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.

2. Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instruction.

3. Do not mix old and new batteries.

4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

**WARNING:**

**CHOKING HAZARD - Small parts.
Not for children under 3 years.**

CAUTION: Do not aim at eyes or face.

Do not fire at point blank range. Only use missiles provided.

Please keep these instructions for future reference.



© 1999 HASBRO, INC. Pawtucket,
Rhode Island 02862.
All Rights Reserved.
Made in China.

568920-0100