

OVER 6 months

6186

PLAYSKOOL®

Air-tivity®

Whirl Around™

Thank you for buying this PLAYSKOOL product!


Includes 2 x 1.5V "C"/RI4 batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) required for battery replacement



TO PLAY

The AIR-TIVITY WHIRL AROUND toy provides a totally unique way for your child to enjoy stimulating sight and sound play!

- A press of either button activates bright beads that rattle and pop and colorful balls that fly 'round and 'round - all on a cushion of air!

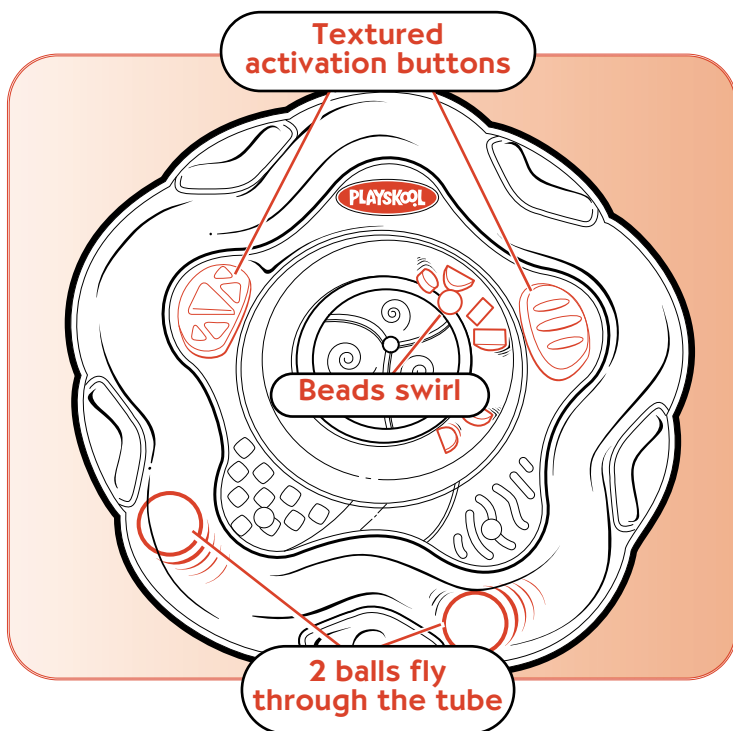


Give the toy a whirl...it spins and rocks like a top!



TO REPLACE BATTERIES

Use a Phillips/cross head screwdriver to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove old batteries. Insert 2 x 1.5V "C"/LR 14 alkaline batteries. Replace cover and tighten screw.

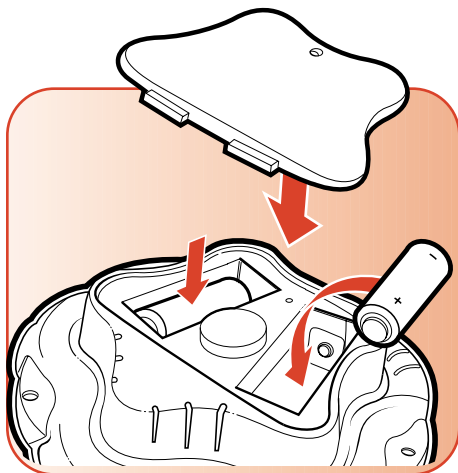

CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

At Playskool, we want to do all we can to help ensure that children thrive developmentally. That's why we have partnered with the National Campaign for Hearing Health to provide you with this Hearing Checklist for babies.

Your Baby's Hearing Checklist

Provided by
National Campaign for Hearing Health
1050 17th Street NW, Suite 701
Washington, DC 20036



Talk to your doctor if you answer NO to any of these questions:

- | YES | NO | Birth to 3 Months |
|--------------------------|--------------------------|--|
| ☐ | ☐ | Reacts to loud sounds |
| ☐ | ☐ | Is soothed by your voice |
| ☐ | ☐ | Turns head to you when you speak |
| ☐ | ☐ | Seems to know your voice and quiets down if crying |
| | | |
| YES | NO | 3 to 6 Months |
| ☐ | ☐ | Looks upward or turns toward a new sound |
| ☐ | ☐ | Responds to "no" and changes in tone of voice |
| ☐ | ☐ | Enjoys rattles and other toys that make sounds |
| ☐ | ☐ | Becomes scared by a loud voice |

The National Campaign for Hearing Health is sponsored by the Deafness Research Foundation. It is a public outreach, professional education and government relations initiative whose goal is to educate the public about hearing health.

Call the National Campaign for Hearing Health at **1.800.535.3323** or visit www.hearinghealth.net for more information.

Based on NIDCD/NIH infant hearing checklist.

