


OBJECT


Have fun! Make your ants jump into SpongeBob's pants! Finish first and you'll be the winner!

GET READY!

- 1. Remove the plastic ants from the bag. Discard the bag.
- 2. Feet: Take any 2 foot sections and snap them together. Repeat this step with the remaining 2 foot sections. There are 2 sock labels (Label A). Wrap one label around each leg. See Figure 1.

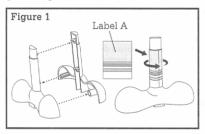

3. Pants: There are 4 pants labels—2 long (Label B) and 2 short (Label C). First apply each Label B, then apply each Label C to the pants as shown in Figure 2.

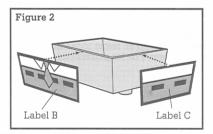

Note: Match center notch on labels with raised notch on plastic pants.



Not suitable for children under 3 years because of small parts – choking hazard.



HASBRO.COM

© 2005 Viacom International Inc. All rights reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc.

The HASBRO, MILTON BRADLEY and MB names and logos and ANTS IN THE PANTS are ® and © 2005 Hasbro, Pawtucket, RI 02862. All Rights Reserved. TM and © denote Reg. US Pat. & TM Office. 42582-I

4. Insert the legs into the base of the pants, one leg at a time and slide the cardboard SpongeBob into the slots inside the pants as shown in Figure 3.



GET SET!

- 1. Place SpongeBob in the middle of a table or on the floor.
- 2. Choose a set of 4 matching color ants. Each player chooses a different color set: red, yellow, green or blue. Place your ants in front of you and you're ready to play. All players do the same. NOTE: You can play from either side of SpongeBob.

GO!

One player calls out "Go" and all of you try to make your ants jump into the pants. Here's how: Press your finger down on the tail of the ant. As your finger slips off, your ant will jump up and, hopefully, into his pants.

YOU WIN!

If you're the first to get all 4 of your ants into the pants, you win the game!

We will be happy to hear your questions or comments about this

game. US consumers please write to: Hasbro Games, Consumer

Affairs Dept., P.O. Box 200, Pawtucket, RI 02862. Tel: 888-836-7025 (toll free). Canadian consumers please write to: Hasbro

Canada Corporation, 2350 de la Province, Longueuil, QC Canada,

J4G 1G2. European consumers please write to: Hasbro UK Ltd., Hasbro Consumer Affairs, P.O. BOX 43, Caswell Way, Newport, Wales, NP194YD, or telephone our Helpline on 00 800 2242 7276.

