AQUAPACH DEUASTATOR™ Backpack Instructions



Place backpack straps over both shoulders as you would a standard backpack.



Adjust both straps until snug.

 


Snap together chest strap until it firmly clicks into place.

Water Supply Instructions



Undo attached strap.



Place end of standard garden hose into Quick Fill Cap. Press down and fill with clean, clear water.



Carefully watch Water Gauge to determine when backpack is full.



Once the Water Gauge has reached Put attached strap back. its maximum capacity, remove hose from Quick Fill Cap.



Blaster Instructions



Pump 20 to 25 times to pressurize.



Pull trigger to blast out powerful constant streams of water.

Body Target Instructions



Remove Body Target paper backing and dispose of properly.



Stick adhesive side of Body Target onto your body and blast away!

IMPORTANT: SUPER SOAKER SOAKERTAG ELITE Body Targets have been thoroughly tested. However, as with cosmetics, some individuals may experience minor irritation. If irritation occurs, rinse with water and discontinue use.