


Arthur is the main character in Marc Brown's popular series of books for children. The Arthur book series is all about growing up, exploring the world and finding your place in it. Read all about Arthur in Marc Brown's books, and see him in his own animated TV show on PBS!

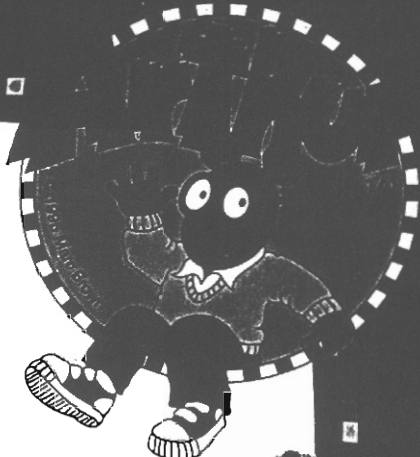

### Operating Instructions



### Viewing the Displays

**10:07** Viewing the Time Press button B1 until the display shows the hour and minute digits separated by a blinking colon.

**6 26** Viewing the Date Press button B1 once to show the month and date digits. Note the display will return to the normal time display after 2-3 seconds.

**40** Viewing the Seconds Press button B1 twice to show the second digits. To return to the normal time display, press button B1 once.

Viewing the Alternating Time & Calendar Press button B2 once and the display will automatically alternate between the normal time display and the date display. To return to the normal time display, press button B2 five times.

### Setting the Time and Calendar

Setting the Month: Press button B2 twice. The display will show the month digits on the left. Press button B1 repeatedly to advance the months digits. Rapid advance may be used by holding in button B1.


Setting the Date: Press button B2 once. The display will show the date digits on the right. Press button B1 repeatedly to advance the date digits. Rapid advance may be used.

Setting the Hours: Press button B2 once. The display will show the hour digits, a colon and an "A" or "P" (AM/PM) symbol. Press button B1 repeatedly to advance the hour digits. Check for proper AM/PM symbol. Rapid advance may be used.

Setting the Minutes: Press button B2 once. The display will show the minute digits and a colon. Press button B1 repeatedly to advance the minute digits. Rapid advance may be used.

Return to the Time: To return to the normal time display, press button B2 once. (If colon is not blinking, press button B1 once.)

Replacing the Battery: Using a Phillips screwdriver, remove the 4 screws on back of band to remove watch. Remove back plate from watch. Discard exhausted battery and insert a fresh new SP302 alkaline battery or equivalent. Replace back plate and screw watch back onto band.

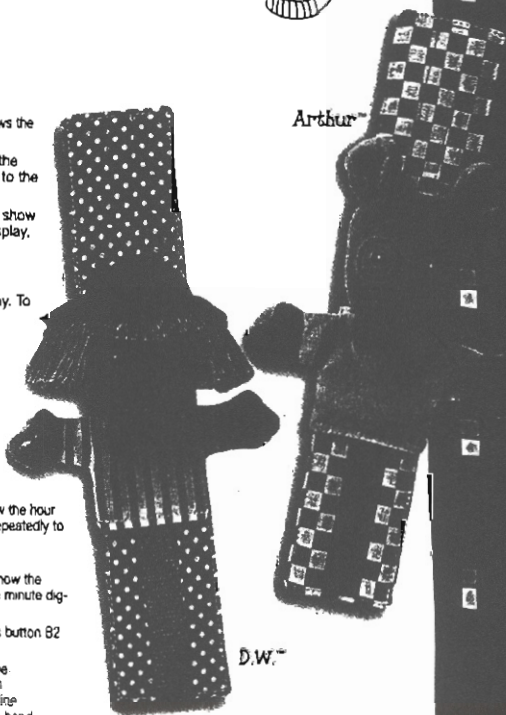

FILLING: ALL NEW MATERIALS: 100% POLYESTER FIBER  
REG. NO. PA-282

Product and colors may vary.

© 1997 Marc Brown. © 1997 Hasbro, Inc., Pawtucket, RI 02862 USA.

All Rights Reserved. ® denotes Reg. U.S. Pat. & TM Office.

MADE IN CHINA P/N47599200 C-015B

