




Welcome to Cranium Giggle Gear

Wonderwish Wand

Two-in-one wand with bubble top and swirling fairy-globe!

GET STARTED

- 1 Take out the wand, bubble top, fairy-globe, bubble tray, and bubble solution.
- 2 Choose which topper you want to put on.
- 3 Put the topper into the wand and turn it clockwise a quarter turn.

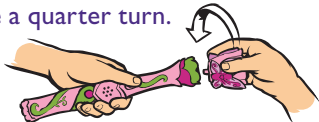

- 4 If you choose the bubble top...
 - Put bubble solution into the bubble tray.
 - Dip the wand and topper into the tray.
 - Press the button for beautiful bubbles and magical sounds!



- 5 If you choose the fairy-globe...
 - Press the button to swirl glittery pieces and hear magical sounds.



- 6 Now go and make someone giggle. Have fun!

Activity Guide

- Draw bubble shapes in the air.
- Do a pixie glitter dance!
- Sing a fairy song as you make bubbles.
- Have a fairy bubble party!

For even more fun, visit cranium.com!

TROUBLESHOOTING

Are you having trouble with your Wonderwish Wand?

If your Wonderwish Wand won't make sounds, blow bubbles, or swirl, try installing four new AAA batteries.

If you've tried this step and you're still having trouble...

In the U.S., go to cranium.com/support or call **1-877-CRANIUM**
Outside the U.S., go to cranium.com/worldwidesupport

We value your input and we'll do our best to help!

CHANGING THE BATTERIES

Need to change the batteries? Ask an adult to get four new AAA batteries and follow these instructions.

1. Turn over your wand and unscrew the battery cover.
2. Insert the batteries as indicated.
3. Replace the battery cover and tighten the screw.

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules and EMC regulations. Conforms to the requirements of EN 50088. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

BATTERY SAFETY

- Do not put the batteries in backwards. Positive (+) and negative (-) ends must be inserted in the correct directions following the polarity (+/-) diagram in the battery compartment.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix old and new batteries.
- Rechargeable batteries must be removed before recharging.
- Rechargeable batteries must be recharged by an adult only.
- Batteries must be installed and removed by an adult only.
- Remove exhausted batteries and dispose of them properly.
- Do not try to recharge non-rechargeable batteries.
- The supply terminals are not to be short-circuited.



WARNING: TO AVOID BATTERY LEAKAGE

Please follow these battery usage instructions. Failure to follow these instructions can result in battery acid leakage that may cause burns, personal injury, and property damage.

After you've finished playing, wash the bubble topper under cold water and allow it to air dry. Do not let the bubble solution dry on the topper, as it will affect the motor. If bubble solution does dry on the topper, soak the topper in clean water. Refill the bubble tray with bubble solution as needed.

CAUTION

Never let children play without adult supervision. Do not let them drink the bubble solution, misuse the toy, or injure others. Do not wave bubbles directly in the face of people or animals. If bubble solution gets into your child's eyes, wash with lots of clean water. If bubble solution is swallowed, drink lots of clean water. Seek medical help if problems persist. The bubble solution may stain some materials—protect your clothes and furniture while playing.



WARNING:
CHOKING HAZARD — Small parts.
Not for children under 3 years.

© 2007 CRANIUM, INC. ALL RIGHTS RESERVED. CRANIUM CHARACTER ILLUSTRATIONS © 1998, 2001 **BASEMAN™** THE FOLLOWING ARE TRADEMARKS OR REGISTERED TRADEMARKS OF CRANIUM, INC. IN THE U.S. AND/OR OTHER JURISDICTIONS: CRANIUM, CREATIVE CAT, DATA HEAD, EVERYONE SHINES, GIGGLE GEAR, STAR PERFORMER, WORD WORM, THE CRANIUM LOGO, AND THE BRAIN LOGO. WE PACK EVERY CRANIUM TOY WITH A VARIETY OF OUTRAGEOUS ACTIVITIES. IT'S UP TO YOU TO USE CAUTION, PLAY IT SMART, AND HAVE FUN.

For even more fun, visit cranium.com!