

Rock★tivity™



Note to Consumer: This toy is packaged in DEMO mode. When you bring the toy home, activate its full range of features by moving its DEMO/PLAY switch to the PLAY position.

X2 **ALKALINE BATTERIES REQUIRED**
1.5VAA **DEMO BATTERIES INCLUDED**

PLAYSKOOL

Mix n' Crawl n' Ball™

SHOW 9 OVER DEMO

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.

- RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Questions? Call 1-800-PLAYSKOOL
© 2012 Hasbro. All Rights Reserved. TM & ® denote U.S. Trademarks.
A0963 PN 7294890000

Visit
PLAYSKOOL
.com

 


TO PLAY: Turn toy on by sliding the switch to the LO or HI position. Slide switch to OFF position when not in use to help conserve battery power.


BEFORE YOU PLAY: Adult conversion required. Complete and check that the ball is secured in the desired mode before giving it to your child.

SIT:

To convert to Sit Mode, press tabs together and let ball unfold.

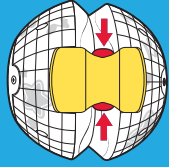


 Release tabs to lock ball in open position.

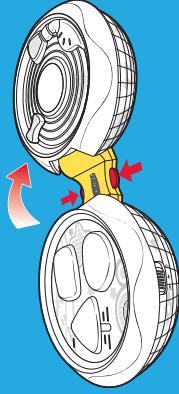


Press, slide or toggle one of the control panel switches to start the music. Interact with the other switches to layer on or remove more instrument sounds from the music track.

 
Slide back and forth for scratchin' DJ sounds

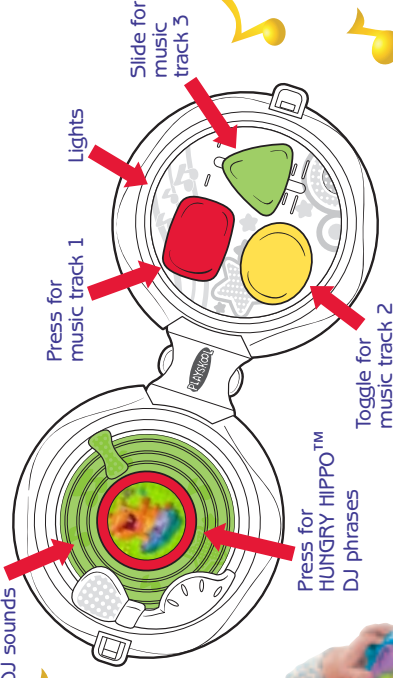

CRAWL:

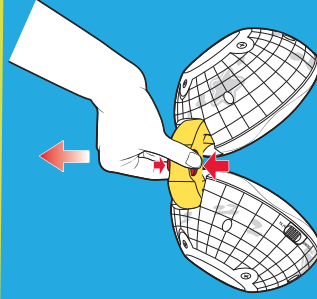 


 Place MIX 'N CRAWL DJ BALL toy face down. Squeeze tabs together and lift up on ball.

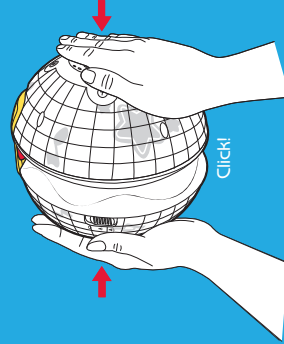

While holding tabs in, lift up until toy folds shut. Press the two sides together until you hear the latch "click" securing the two sides together.

 Roll the ball on the floor for rockin' tunes and flashing lights!

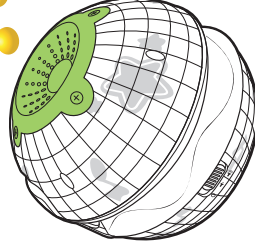

To Replace Batteries:

Replace demo batteries with alkaline batteries. Phillips/cross head screwdriver (not included) needed to insert batteries. Loosen screws in battery compartment door (screws remain attached to door). Remove door. Replace with 2 x 1.5V fresh AA alkaline batteries. Replace door and tighten screws.

