

 
ALSO INCLUDES:

AGES 3+



Sippy cup contains magnet.

BABY ALIVE doll juice is nontoxic and made of food-grade ingredients, but it is **not intended for human consumption**. If accidentally ingested, however, it is not harmful. Use only BABY ALIVE doll juice with your BABY ALIVE doll.

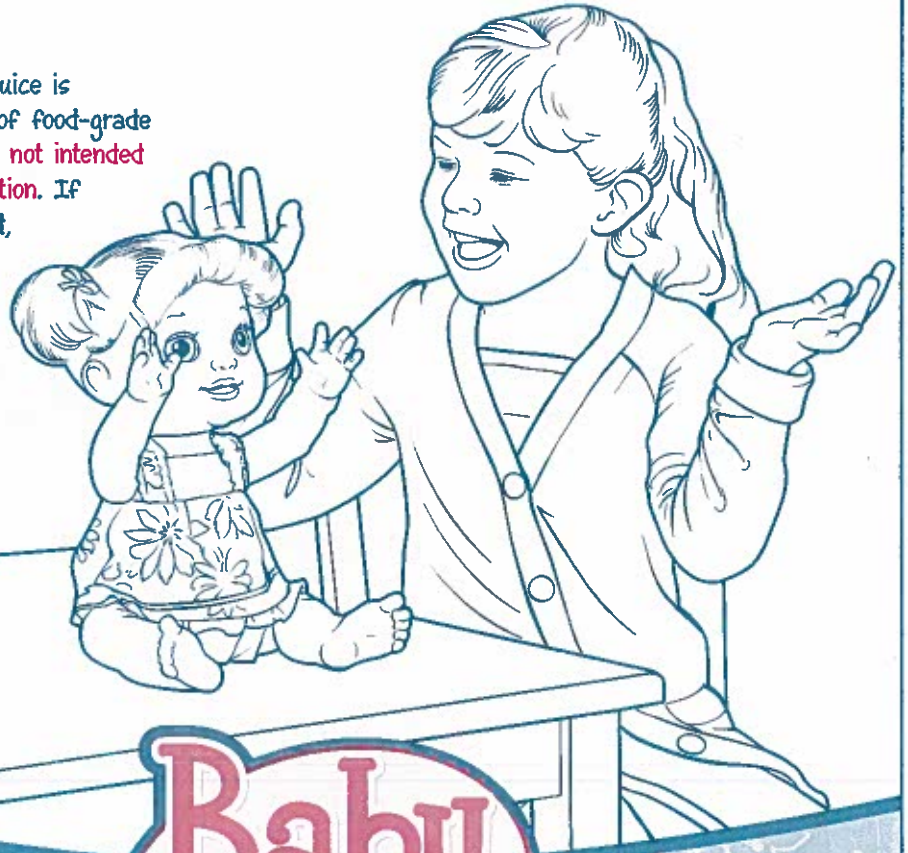

 **x4** 1.5V AA
ALKALINE
BATTERIES
REQUIRED
DEMO BATTERIES
INCLUDED

 
**Baby
Alive®**

Real As Can Be Baby®

TO PLAY



First make sure her ON/OFF/TRY ME switch is set to **ON**.

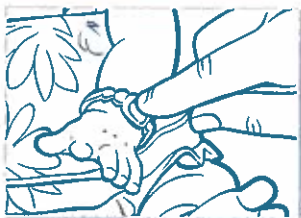

Press the **button** on your doll's bracelet again and again to play with her! She talks, sings, and loves hugs, kisses and tickles! Listen to what she says and then activate her sensors to interact with her!

A sensor is a part of the toy that responds to your touch.

Feeding

When she says, "I'm thirsty," place the sippy cup in her mouth. To feed her using BABY ALIVE doll juice mix or water, read Feeding Time instructions.

Hugs

She is ready for a hug when she raises her arms!

NOTE:

To conserve batteries, turn switch to "OFF" when doll is not to be played with for extended periods of time.



Kisses

You can give her a kiss on either cheek!

Tickles

Tickle her tummy—she giggles!

Quiet Mode

Want to play without sounds? Press her bracelet for about 3 seconds and she'll go into quiet mode. Press bracelet again to turn sounds on again.

Sleep Mode

 
If you don't play with your baby doll for about a minute, she'll go into sleep mode. Just press her bracelet to wake her up to play.

FEEDING TIME

NOTE: Be sure to use only plain water or water mixed with doll juice mix with your baby doll. Do not use Baby Alive® Doll Food (sold separately); it is not intended for use with this doll.

Before you feed your doll, make sure she's wearing a diaper that's securely fastened.

1. Fill sippy cup with **cold, clean water** and a packet of BABY ALIVE doll juice mix.
2. Tighten the sippy cup top securely.
3. Hold your doll in a reclining position. Make sure her head is higher than her tummy.
4. Place the sippy cup in the doll's mouth, and give the sippy cup **small, gentle squeezes**. The doll will raise her arms and make sucking sounds.
5. After you take the sippy cup out of the doll's mouth, she will either say that she is "all done" or ask for more. If you want your doll to fall asleep, keep the sippy cup in her mouth until she yawns and closes her eyes.

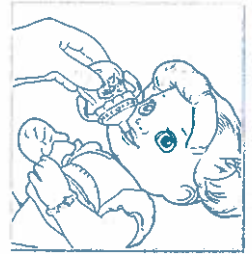


Do not feed doll more than one sippy cup of doll juice mix or water before changing her diaper. Feeding the doll less than one sippy cup is okay.

Do not use real juice or other beverages besides cold, clean water.

STAIN ADVISEMENT: BABY ALIVE® Doll Juice Mix may stain some surfaces. Adult supervision recommended. If spilled, wash with soap and water.

DIAPER TIME

 After feeding your doll, you'll need to change her diaper!

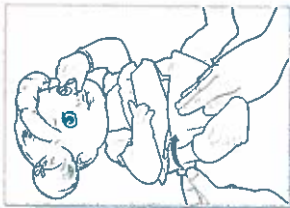

To change diaper:

1. Remove diaper and wipe doll clean with a soft, damp cloth or paper towel.
2. If you have fed the doll using doll juice, follow cleaning instructions.
3. Put on a new diaper and fasten securely.
 - **ALWAYS** change your doll's diaper and clean her after she drinks.
 - **NEVER** let your doll sit with a wet diaper.
 - Discard wet diapers; they cannot be washed or reused.

TO CLEAN

If using BABY ALIVE® Doll Juice Mix, it is important to rinse doll with cold, clean water immediately after each use. If any doll juice mix remains in the doll, it can become difficult to clean.

- To clean doll after feeding her doll juice mix, give her a sippy cup full of cold, clean water until any remaining juice mix has been rinsed away and the water runs clear (it's best to do this over a sink). Use a soft, damp cloth or paper towel to wipe away any juice mix on doll's mouth. Allow doll to dry.
- Clean doll's face and body by wiping gently with a soft, damp cloth.
Do not rub.
- **Do not submerge doll in water; it is not intended for bath-time play.**
- Do not place any foreign objects in doll's mouth or any other opening.
- Doll's clothes are machine-washable (mild detergent, cold water, gentle cycle, no bleach); they can also be spot-cleaned with a cool damp cloth; hang to dry.
- Hand-wash sippy cup with mild dish soap and water; it is **not** dishwasher-safe.

 


TROUBLESHOOTING

- If the doll is unresponsive, or if movement and sounds become erratic, the battery power may be low. Replace batteries.
- If your doll is unresponsive and the doll's arms seem to be in the wrong position, manually adjust arms until they both click into place.

TO REPLACE BATTERIES

Replace demo batteries with alkaline batteries. Use a Phillips screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove and discard demo batteries. Replace with 4 x 1.5V AA alkaline batteries. Replace cover and tighten screw.

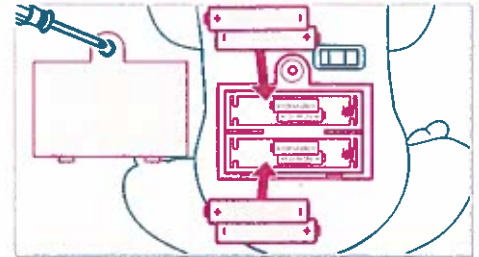

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE

- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- c. Remove exhausted or dead batteries from the product.
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals.
- f. **RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Product and colors may vary.

© 2012 Hasbro. All Rights Reserved.
TM and ® denote U.S. Trademarks.

A0600, A0601

PN 7287950000

BabyAlive.com

Questions? Call 1-800-327-8264