TO INSTALL NEW BATTERIES

- Open back seam to locate battery compartment. With Phillips screwdriver, loosen screw in battery compartment door. Remove door (screw remains attached to door).
- Discard old batteries. Insert 2 fresh "AA" alkaline batteries into compartment as shown. Replace door and tighten screw.





CAUTION: TO AVOID BATTERY LEAKAGE

- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- Do not mix old and new batteries or alkaline, standard (carbonzinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.

www.bobthebuilder.com




P/N 6134140000

© HIT Entertainment PLC and Keith Chapman 2001
*®, *™ & © 2001 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.
6925/6809 Asst.
6932/6809 Asst.

PLAYSKOOL.COM FOR NEW PRODUCTS AND OFFERS

NOTE: Adult should remove and discard plastic fasteners. SURFACE WASHABLE ONLY. FILLING: ALL NEW MATERIALS: 100% - POLYESTER FIBER, PLASTIC STIFFENER REG. NO. PA – 282 AGES 2+ 6925/6809 Asst. 6932/6809 Asst.

ra.

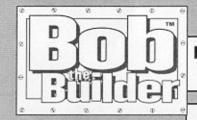

Bob the Builder™ Talking Plush

Wendy™ Talking Plush



Thank you for choosing this huggable BOB THE BUILDER friend!

Includes 2 "AA" batteries. Phillips screwdriver (not included) required for battery replacement.



