

AGES 3+
6590

 
Bob
THE
Builder

**Adventure
Scoop™**

PLAYSKOOL

**Thank you for choosing ADVENTURE
SCOOP, the fun loving motorized truck
from BOB THE BUILDER™!**

**Includes 2 "AA" batteries. Phillips screwdriver (not
included) required for battery replacement.**

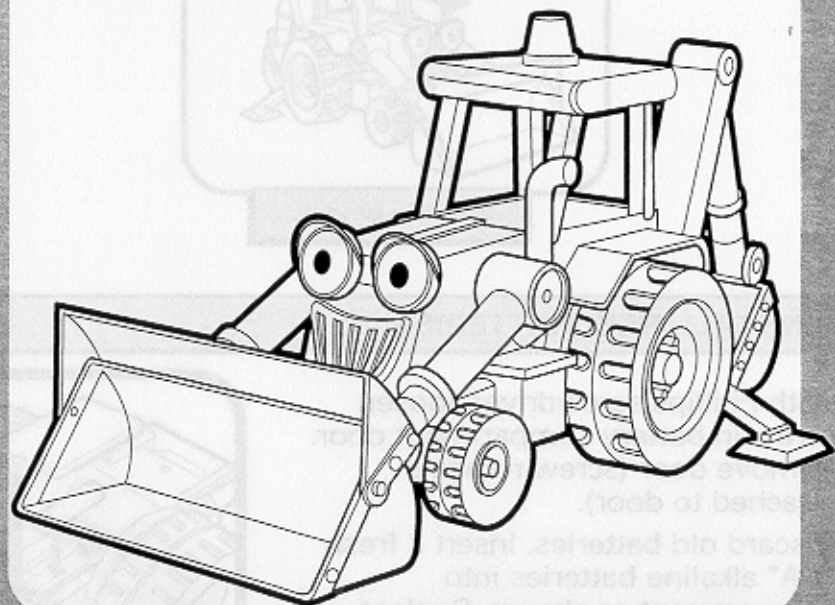

www.bobthebuilder.com

 


©HIT Entertainment PLC and Keith Chapman 2001
Music composed by Paul K. Joyce.
Music published by Hit Entertainment PLC/EMI Blackwood Music Inc.
*®, **™ & © 2001 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Off.
6590 P/N 6118130000


PLAYSKOOL.COM
FOR NEW PRODUCTS AND OFFERS

TO PLAY


- ADVENTURE SCOOP features voice, sounds and music from the Bob the Builder™ show!
- To hear ADVENTURE SCOOP:

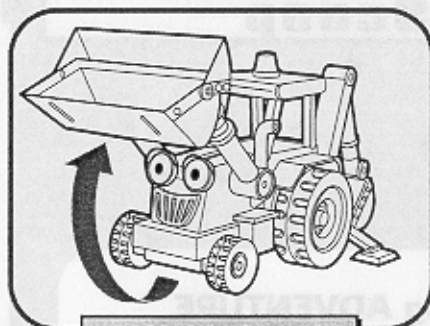

Lift his front bucket

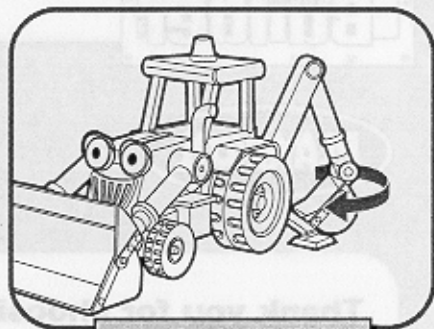 


Move his backhoe from side to side

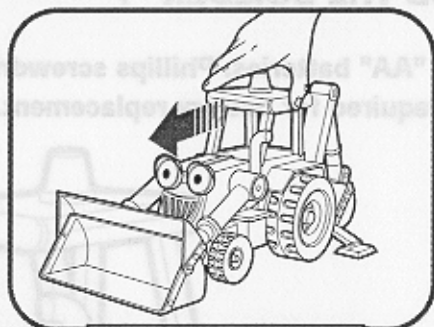 

Roll his wheels

 - Place an ADVENTURE BOB figure on his cab platform to hear Bob and Scoop talk to each other. (Figure not included.)

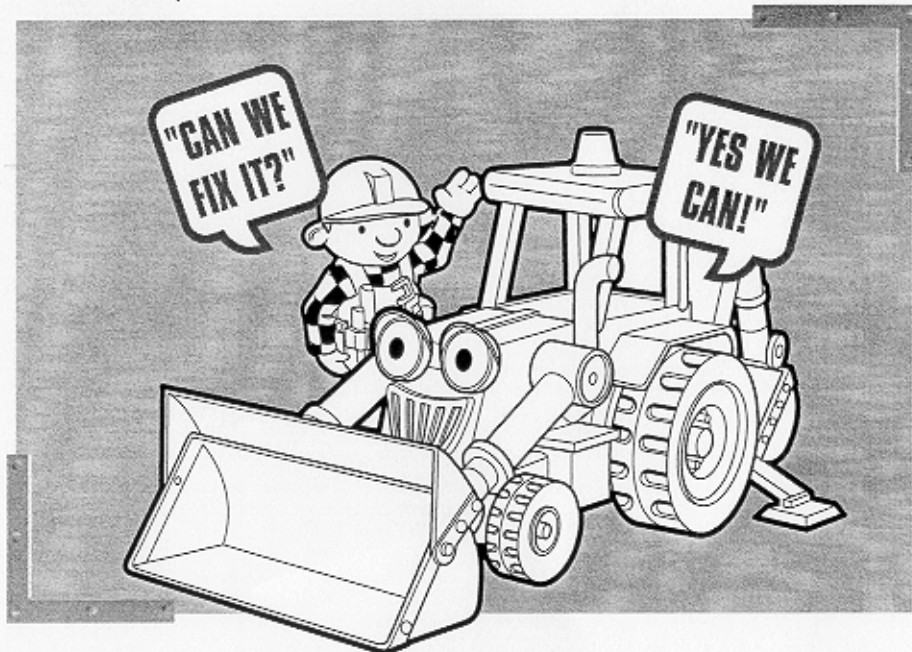

SHUT-OFF

After approximately 10 seconds of inactivity, ADVENTURE SCOOP will prompt the play to continue by saying "I am ready to go." After 5 additional seconds of inactivity, the toy will automatically shut off.

TO INSTALL NEW BATTERIES

1. With Phillips screwdriver, loosen screw in battery compartment door. Remove door (screw remains attached to door).
2. Discard old batteries. Insert 2 fresh "AA" alkaline batteries into compartment as shown. Replace door and tighten screw.



⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.