

AGE 2+

6115



**Lumberjack Bob™\***



**Thank you for choosing  
Lumberjack Bob™\*!**

Includes 3  
"AA"/LR6 (1.5V)  
alkaline batteries.  
Phillips/crosshead  
screwdriver  
(not included)  
required for  
battery  
replacement.




## TO PLAY

### Start the Saw!

Pull the cord once for a fun phrase...pull again to start up the "engine"!


### Trim the Tree!

Press the blade against a surface for phrases, tree-cutting sounds and vibrations!

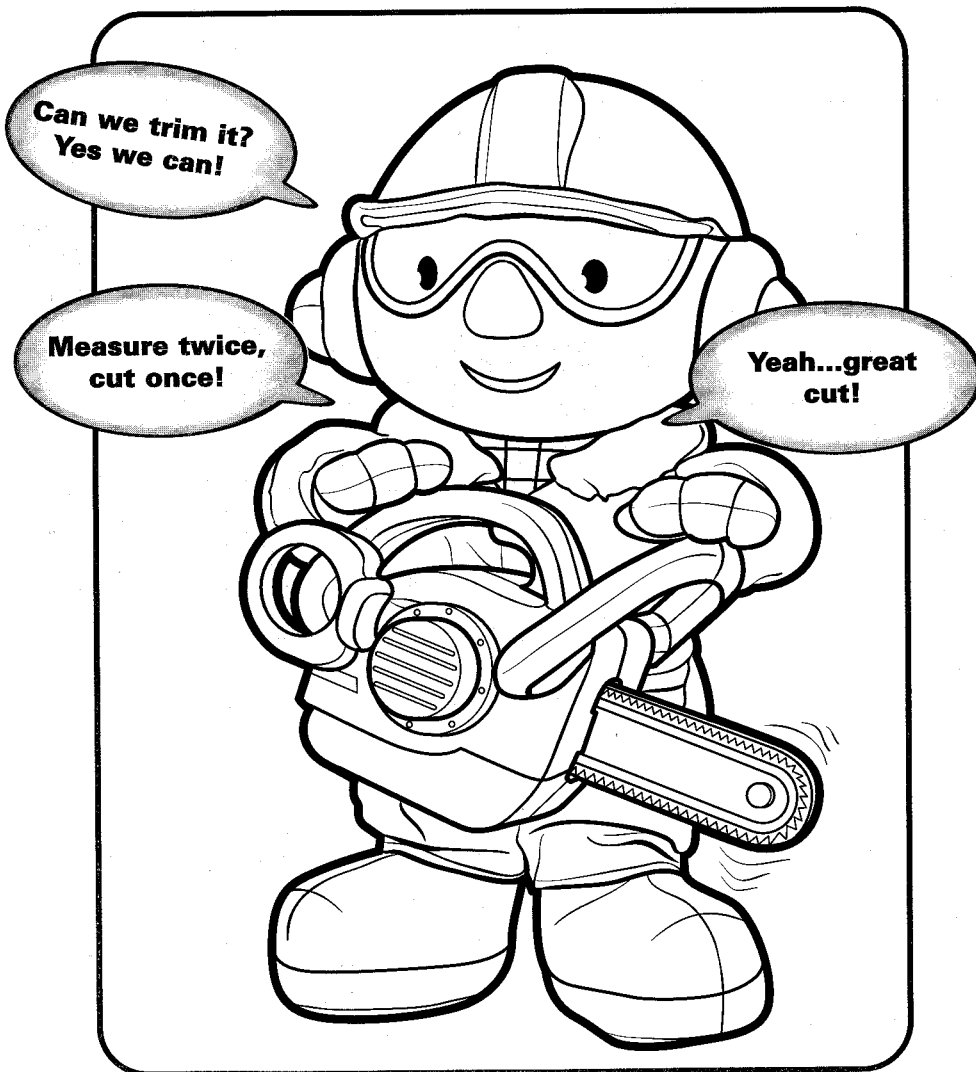

## TO REPLACE BATTERIES

1. Open seam on back of figure to locate battery compartment. Loosen screw in battery compartment door using a Phillips/crosshead screwdriver. Remove door (screw remains attached to door).
2. Remove and discard old batteries and replace with 3 fresh "AA"/LR6 (1.5V) alkaline batteries.
3. Replace door, retighten screw, and refasten seam.

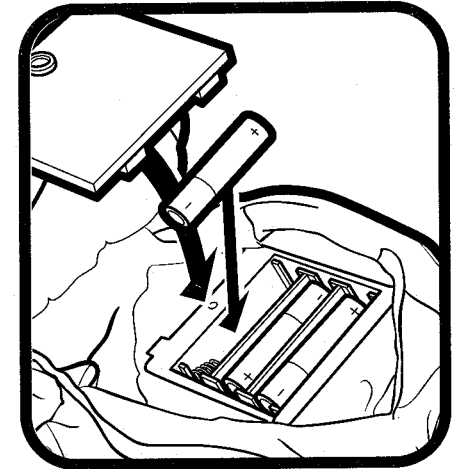

### ⚠ CAUTION: TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
- 3) Always remove weak or dead batteries from the product.


### IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.  
Batteries should be replaced by an adult.

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERY.**

# Join the

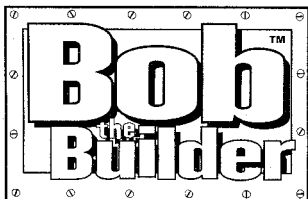

## FAN CLUB

Be a part of Bob's crew by joining the Bob the Builder™ Fan Club! As a member, you'll receive 8 issues of the Bob the Builder Fan Club News filled with fun activities, the latest news and advance information on special events, a mini-poster of Bob and his friends, and your very own Bob the Builder construction hat! All this for only \$9.99\* for a 2-year membership!

You can join online at [www.bobthebuilder.com](http://www.bobthebuilder.com), or you can call 1-888-956-8762 in the U.S. and Canada.

\*Texas (8.25%) and California (8.25%) customers must add sales tax. If you live outside of the United States, the price is \$14.99 to join in U.S. funds. You will receive your Welcome Packet in 6-8 weeks, followed by 8 newsletters mailed to your home over the next 2 years.

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

[www.bobthebuilder.com](http://www.bobthebuilder.com)



© HIT Entertainment PLC and Keith Chapman 2002  
® and/or TM\* & © 2002 Hasbro. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office  
6115 P/N 6184350000

SURFACE WASHABLE ONLY.  
FILLING: ALL NEW MATERIALS: 100%  
POLYESTER FIBER  
REG. NO. PA - 282



Questions? Call: 1-800-PLAYSKL