

Notes:

Ages: 3 & Up

1. You may need to adjust the temperature of the water to make the messes appear and disappear. If the messes do not appear, add more ice to the water to make it colder, and try again. If the messes do not disappear, try again with warmer water.

2. Due to temperature changes during transit, the messes may appear on the doll's face, hand or bib. If they do, please follow the "Cleaning Up Baby" instructions below to make the messes

Please Have These Ready When You Play with Baby Oh No!:


Ice cream cone Cup

Washcloth


Bowl of ice in water (not included) Bowl of warm water (not included) Small towel (not included)

Contents: Dressed doll. ice cream cone, cup and washcloth.

# Feeding Ice Cream to Baby

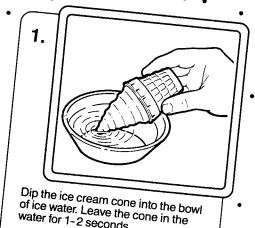

"Feed" the ice cream cone to baby make sure you touch her face with the cone. Oh no! A chocolate-colored mess appears on her face!

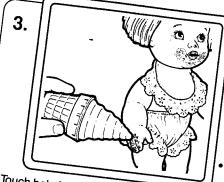

Touch baby's right hand with the ice cream cone - a chocolate-colored mess appears there, too.

# Giving Baby a Drink

water for 1-2 seconds.




Remove lid from cup and fill cup with ice water and an ice cube. Replace lid.



Give baby a big drink. Oh no! A chocolate-colored mess appears on her face.

3.

Let some of the drink fall on her right hand, and a chocolate-colored mess appears there.

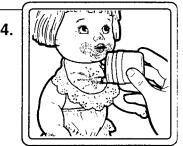

If the drink spills on her bib, you'll see a chocolate-colored mess

appear. (Note: The bib also changes color when the ice cream cone touches it.)

#### Hints

- · Keep a bowl of ice nearby to refill the bowl of water.
- · Refill the cup or dip the cone into ice water every time you use them - this helps the chocolate color appear more easily.

## Cleaning Up Baby

- 1. Dip the washcloth into the bowl of warm
- 2. Wipe baby's face, hand or bib with the washcloth to make the chocolate-colored messes disappear.

### **Notes**

- To clean the fabric on the ice cream cone, remove the top of the cone, then remove the fabric. Hand wash the fabric with water and let it air dry. Replace the fabric and the top of the cone.
- If the messes don't appear on the face, hand or bib, the water isn't cold enough. Just add more ice and
- If the messes remain after you try to wipe them away, the water isn't warm enough. Try using warmer water. DO NOT USE HOT WATER.
- Baby Oh No! works best at room temperature (about 68°-75° Fahrenheit).
- The color-changing messes will last longer if you do not expose the doll to direct sunlight or intense heat



©1991 Hasbro, Inc., Pawtucket, RI 02862 U.S.A. All Rights Reserved. 9007 & 9008 P/N 42383000















