

Baby WannaWalk™

Instructions

Ages:
3 & Up



Please save these instructions for future reference.

Phillips® screwdriver needed for assembly (not included).

 
Includes:
Doll with outfit and brush.

NOTE TO PARENTS:


Do not let your child play with Baby Wanna Walk in water. If she gets wet, let her dry completely, inside and out, before using her again.

BATTERY INSERTION:

1. Open back of doll's outfit. Be sure the on/off switch is in the "off" position. Loosen screw in battery compartment cover (about 10 complete turns to the left) using a Phillips® screwdriver. (Note: the screw cannot be removed from the cover.) Remove battery compartment cover.

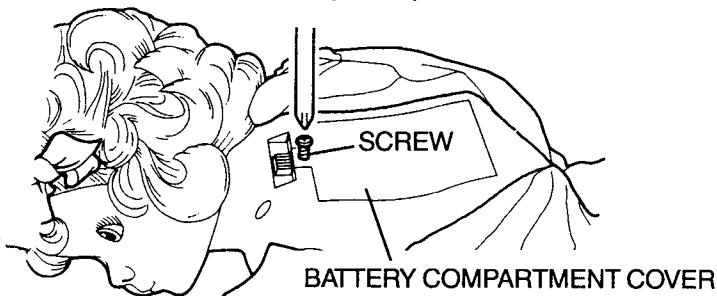

 2. Insert 3 fresh "C" alkaline batteries into battery compartment as shown. Close cover and replace screw.

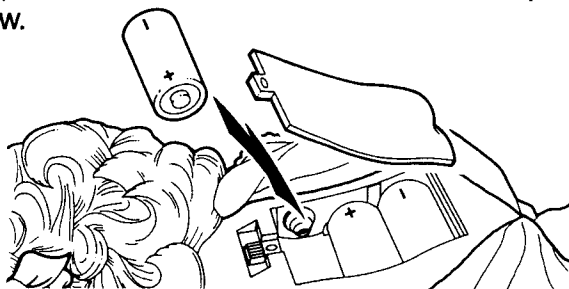


CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturer's instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.

HOW TO MAKE HER WALK:



 1. Tilt the doll's head forward. Swing her arms straight down or out in front of her. Her legs should be straight. Move the on/off switch to the "on" position.

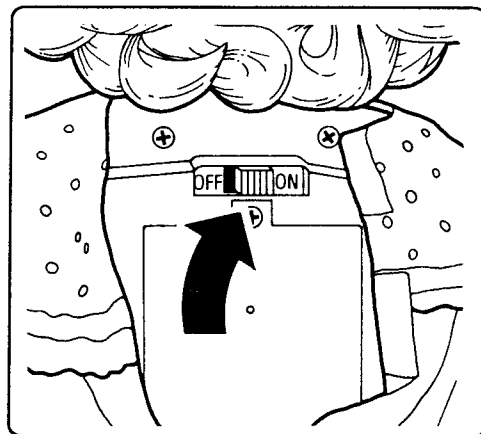


2. Stand the doll on any hard, smooth, flat surface. You may need to hold her hand and guide her along for the first few steps. Be sure to turn the doll off when playtime is over. For best results, make sure her outfit doesn't get caught at her hips and shoulders.
3. When you turn off the doll, one leg may be raised higher than the other so that she doesn't stand straight. If this happens, turn the doll on and off until both legs are in the same position.




HOW TO MAKE HER CRAWL:

 1. Lay the doll flat on her back. Swing both legs straight up. Bend both legs at the knees as shown. Swing her arms straight out in front of her. Tilt her head back and turn her head to one side.

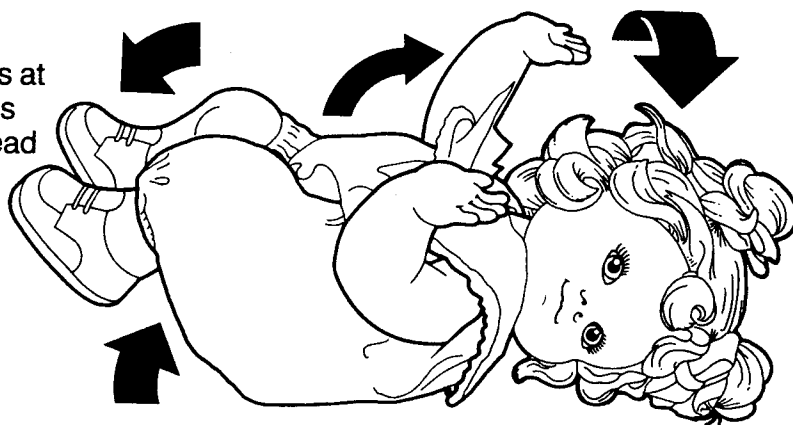


 2. Turn the doll over and place her on any hard, smooth, flat surface. Move the on/off switch to the "on" position. Be sure to turn the doll off when playtime is over. For best results, make sure her outfit doesn't get caught at her hips, knees and shoulders.

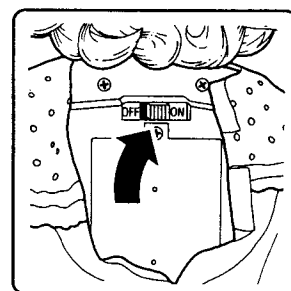

NOTE TO PARENTS:

 Baby Wanna Walk's legs are specially designed to detach when you pull too hard on them. To reassemble, remove outfit and snap hole in leg over post on hip.

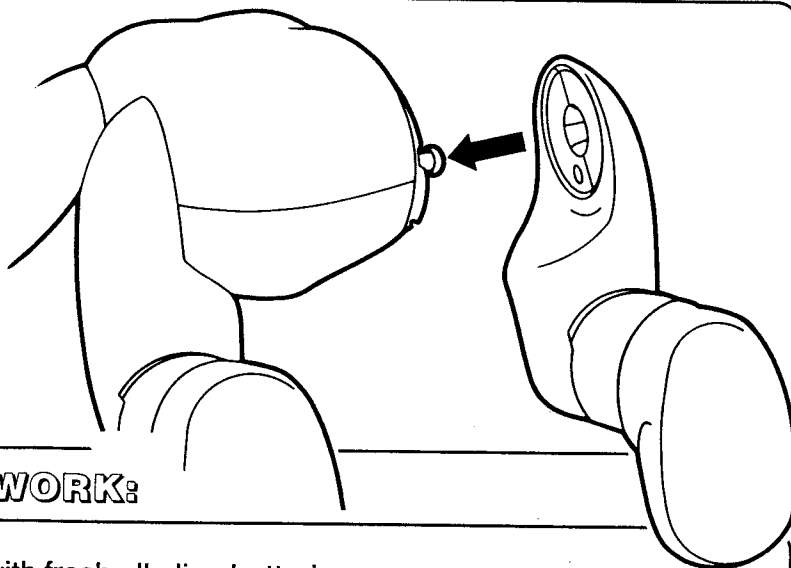

IF BABY WANNA WALK DOESN'T WORK:

1. Remove old or weak batteries and replace them with fresh alkaline batteries.
2. Be sure batteries are inserted correctly.
3. Outfit is caught at hips, shoulders or knees. Untangle outfit and try again.

WASHING INSTRUCTIONS:

Baby Wanna Walk is surface washable only. Do not play with Baby Wanna Walk in water. If she gets wet, let her dry completely, inside and out, before using her again. Remove outfit from doll before washing. Baby Wanna Walk's outfit is machine washable and dryer safe. Wash outfit in cold water on gentle cycle using mild detergent, NO BLEACH. Tumble dry at low heat setting.