 



## Thank you for purchasing this product!

Note: This toy was designed with your child's safety in mind. Twinken has a child-resistant mechanism that must be removed and installed by an adult. Please be aware of this and follow the directions carefully. During shipment, the filling may shift and cause Twinken's light to stay on. If this occurs, simply distribute the filling evenly throughout the body until the light goes on only when activated.

## HOW TO REMOVE MECHANISM FOR INSTALLING BATTERIES:

- 1. Unfasten back of toy. To remove mechanism, twist it 1/4 turn in a counterclockwise direction, and pull out completely.
- 2. Using a Phillips head screwdriver, remove screw located near tip of mechanism. (If you lose the screw, replace with a 4mm screw that can be purchased in most hardware stores.)

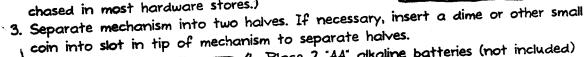


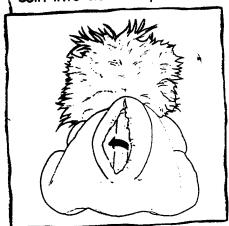

- 4. Place 2 "AA" alkaline batteries (not included) into bottom half of mechanism. Make sure batteries are positioned property. (Twinken comes with a light bulb; if you need to replace it, use a PR-3 or PR-6 light bulb. To replace bulb, remove old one and discard it immediately. Place new bulb in mechanism.)
- 5. To put mechanism together again, place slots on activating handle over tabs on bottom half of mechanism. Insert tab into slot at tail end of mechanism halves and close mechanism. Replace

## CAUTION: TO AVOID BATTERY LEAKAGE

- 1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- 2. Do not mix old batteries and new batteries.
- 3. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
- 4. Always remove exhausted or dead batteries from the product.

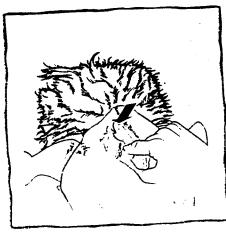

- 6. Fold fabric away from neck ring on Twinken to expose neck ring completely. Insert mechanism into neck ring, with arrows on mechanism and ring aligned point to point.
- 7. Push mechanism into neck ring as far as it will go. Twist mechanism 1/4 turn in a clockwise direction to lock mechanism firmly inside Twinken's head. Make sure fabric does not get caught between mechanism and neck ring.
- 8. Tuck rest of mechanism inside Twinken. Fasten back closed. Press tummy to make sure head glows brightly.

Product and colors may vary SURFACE WASHABLE ONLY!

. 1097 The Lyons Group. At highes reserved. The Barney, Baby Bop, BJ and Twinken names and characters, the evenageing class leading and the Barney and Star logo are trademarks of The Lyons Group, Barney 30 and 113 Samey and Star logo are Reg. U.S. Pat. § TM Office.

원교교 : 한 denotes Reg. US (Fax. : 한 기가 기가 기가 기가 가 27829600 ు. వే. . - నే 1997 Hasbro. <sup>In వ</sup>

