

Barney[™]

PLAYSKOOL


Thank you for purchasing this Playskool® toy!

In the US: Includes 3 "AA" batteries.

In the UK: Includes 3 x 1.5v (4.5v)


"AA"/"LR6" batteries.

(Phillips screwdriver required when
replacing batteries.)

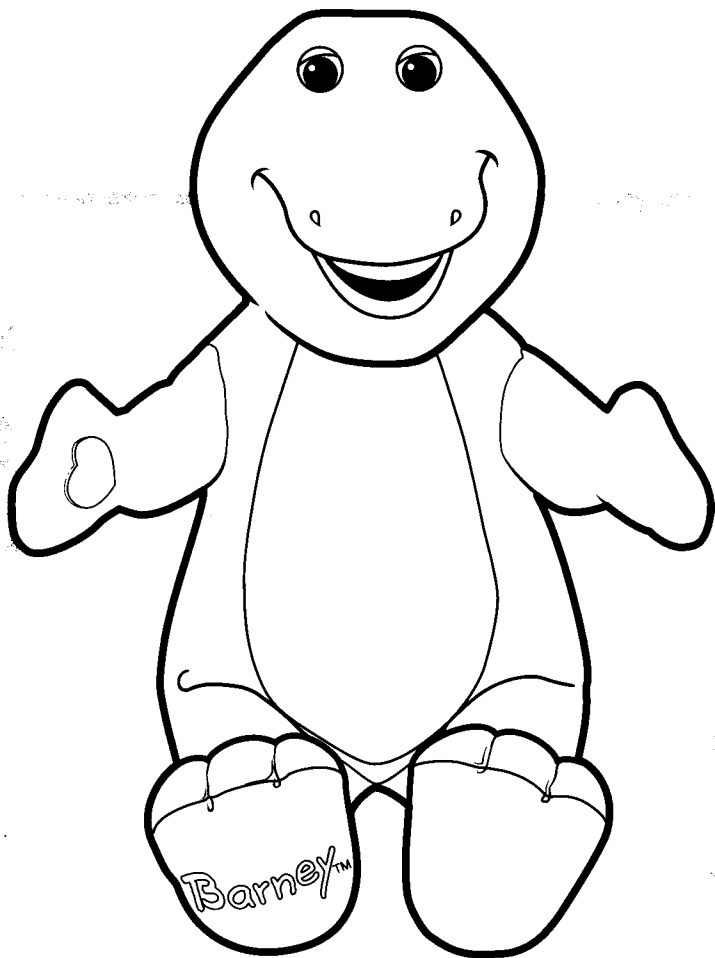

Play Along Barney[™]

Play Along Barney™ is in DEMO stage, which allowed you to try the toy in the package. DEMO stage is not used for normal operation. Before giving Play Along Barney to your child, switch the toy to STAGE 1, STAGE 2 or STAGE 3. Read the descriptions below to choose the age-appropriate stage for your child.

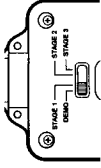

Open back of toy and slide switch on battery box to chosen stage.

(approximately 12-24 months old): For Barney's youngest fans, who have not yet developed the hand coordination to activate the toy by themselves. Play Along Barney goes through one or more activities each time parents squeeze either hand.

(approximately 2-3 years old): For children who can activate Play Along Barney on their own. Kids take part in the fun as Play Along Barney asks them to squeeze his right hand to start each activity.

(approximately 3 years & up): Takes the activities to a more advanced level for older children. Kids squeeze Play Along Barney's right hand to start each activity.

In All Three Stages:

TO ACTIVATE Play Along Barney:

Press his tummy.

TO RESPOND TO "PROMPTS" from

Play Along Barney (to start an activity): Press the heart on his right hand.

TO HEAR ENCOURAGING STATEMENTS from Play Along Barney

(such as "I like playing with

you"): Press his tummy

while he is "on." If you

press his tummy when he

is in the middle of an

activity, he will say an

encouraging statement, then

immediately continue the

activity at the point where he

was interrupted.


After you activate Play Along Barney, he asks you to squeeze his hand (squeeze either hand). He will go through one or more complete activities. The number of activities depends on the length of each activity. When he finishes, he will ask you to squeeze his hand to continue. Note: His hands will not respond to squeezes while he is in the middle of activities; this allows the complete group of activities to play without accidentally being interrupted.

After children activate Play Along Barney, he will suggest an activity and ask them to press the heart on his **RIGHT HAND** to begin. After completing the activity, he will suggest another activity. Children have to squeeze Play Along Barney's right hand each time they want to start a new activity.

To skip to the next activity at any time (before, during or after an activity), press his left hand (the hand without the heart).

Automatic Shut-Off: If not in use, Play Along Barney will automatically shut off after approximately 25 seconds. At the end of that time, he will sign off with a "good-bye" phrase.

Manual Shut-Off: Squeeze either hand. While continuing to squeeze his hand, press and release his tummy.

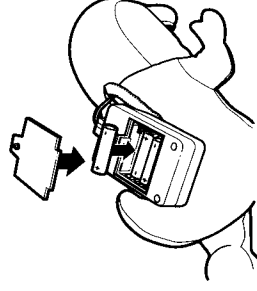

Open back of toy and remove battery compartment. Loosen screw in battery compartment door. Remove door (screw remains attached to door).

Discard old batteries. Insert fresh batteries into compartment as shown. Replace door and tighten screw.

Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.

Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

Always remove weak or dead batteries from the product.

In the UK:

Please retain this information for future reference.

Batteries should be replaced by an adult.

Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the '+' and '-' polarity markings.

Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.

Remove exhausted or dead batteries from the product.

Remove batteries if product is not to be played with for a long time.

Do not short-circuit the supply terminals.

Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment.

RECHARGEABLE BATTERIES: do not mix these with any other types of battery. Always remove from the product before recharging.

Recharge batteries under adult supervision.

DO NOT RECHARGE OTHER TYPES OF BATTERY.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To join the Barney Fan Club or subscribe to
Barney Magazine, call

1-800-TO-BARNEY or 1-800-862-2763

In the UK, call 01935 817117



© 1998 Lyons Partnership, L.P. All rights reserved. The Barney, Baby Bop and BJ names and characters, and the overlapping dino spots and Barney and star logos are trademarks of Lyons Partnership, L.P. Barney, BJ and the Barney and star logo are Reg. U.S. Pat. & Tm. Off.

Product and colors may vary.

®, * TM & © 1998 Hasbro, Inc. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office

P/N 4814120000



HELPLINE NOT AVAILABLE IN THE UK.