 


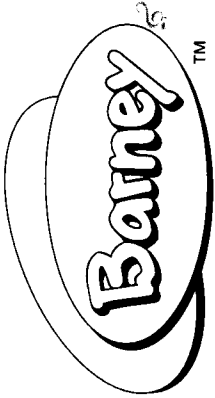

Ages 2 & UP  
5758





# SongLight Rainbow™

  Thank you for purchasing this Playskool® toy!

SongLight Rainbow is recommended for indoor use, away from direct sunlight, which interferes with the toy's light technology.

Includes 4 "AA" batteries. (Phillips screwdriver is required when installing new batteries.)  
PARENTS: REMOVE AND DISCARD WIRE TIE AND PACKAGING MATERIAL ATTACHED TO BOTTOM OF TOY, BEFORE GIVING TOY TO CHILD.

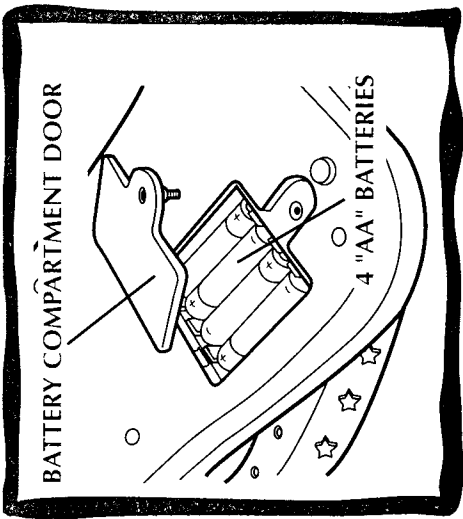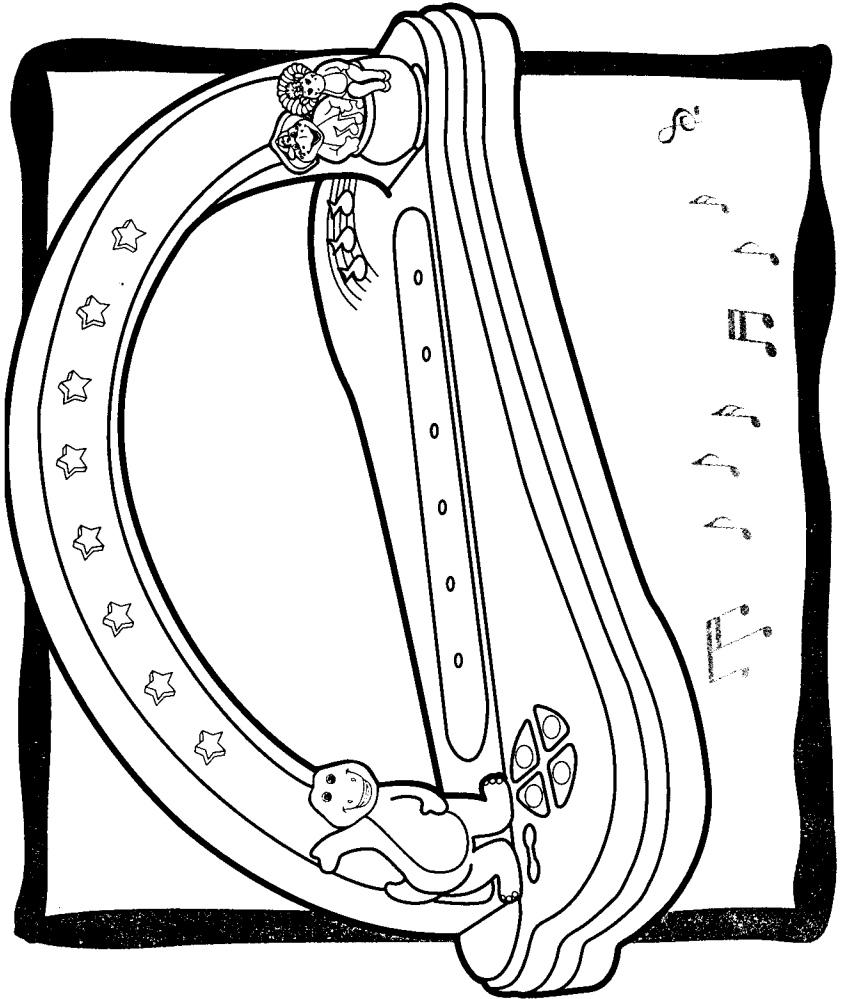

## TO INSTALL NEW BATTERIES

1. Loosen screw in battery compartment door. Remove door. (Screw will remain attached to door).
2. Discard old batteries. Insert 4 fresh "AA" batteries into compartment as shown. Replace door and tighten screw.

## CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries.
3. Do not mix alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
4. Always remove exhausted or dead batteries from the product.

## FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product and colors may vary.  
© 1997 The Lyons Group. All rights reserved. The Barney, BJ and Baby Bop names and characters and the overlapping dino spots logo are trademarks of The Lyons Group. Barney and BJ are Reg. U.S. Pat. & TM Office.

© 1997 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.  
® denotes Reg. U.S. Pat. & TM Office. U.S. Patent Pending. **MADE IN CHINA.** P/N 47190400

## ACTIVATION AND PLAY FEATURES

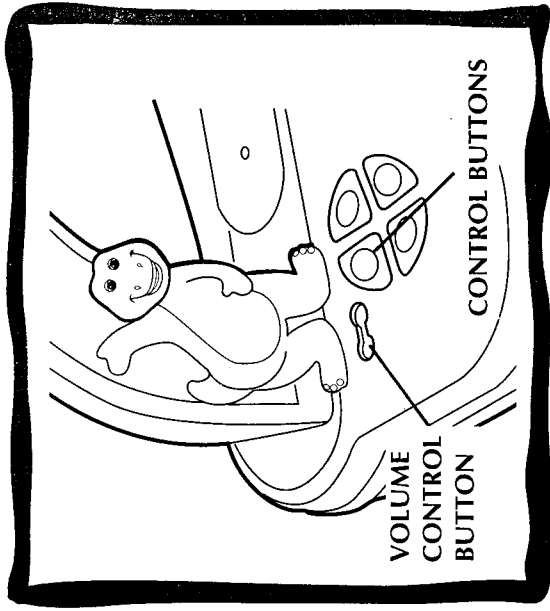

NOTE: While toy is in package, it plays a small sample of its features. After toy is removed from package, "sample" mode is deactivated. The toy will now perform its complete, normal modes, as described below:

### VOLUME CONTROL BUTTON

- To decrease volume: Press and release left side ( - ) of button.
- To increase volume: Press and release right side ( + ) of button.

### TO ACTIVATE

 
- To activate toy, press any of the three colored Control Buttons (purple, green or yellow). The stars will light and blink to indicate toy is activated.
- Pressing the gray Control Button will NOT activate the toy. This button is only for selecting instrument sounds in the "Magical Sounds" mode and "Play-Along Songs" mode.

### PLAY MODES

The toy has 3 play modes. Select a mode by pressing the appropriate Control Button.

#### Magical Sounds Mode

- To select this mode, press purple button.
  - Select an instrument sound (2 ways to select):
    - Choose a sound from the instrument symbols illustrated on the base (purple section of label). Wave your hand over the hole closest to the symbol you chose. (Note: There are 18 different instrument sounds in all, but you can select only 6 of them from the illustrations on the base. To select sounds not shown on the keypad, you must use the gray button, as described next).
    - Wave your hand anywhere under the rainbow. Then, press the gray button and wave your hand under the rainbow to hear a different instrument sound. Continue pressing the gray button and waving your hand under the rainbow to select your favorite sound.
- Note: You must press the gray button every time you want to change the instrument sound.

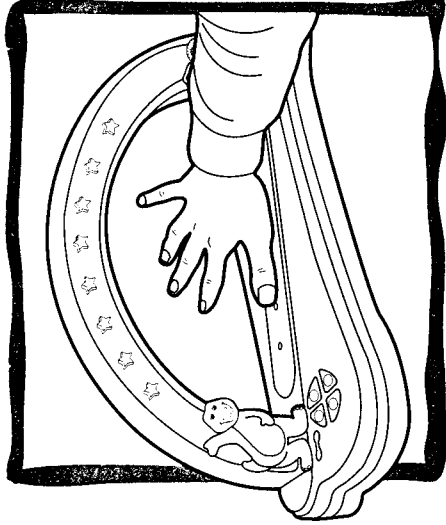

**Instrument Sounds:** 1. Flute 2. Piano 3. Taiko drum 4. Banjo 5. Saxophone 6. Bells 7. Marimba 8. Organ 9. "Doot" 10. Steel drum 11. Electric guitar 12. Pizzicato strings 13. Orchestra hit 14. Muted guitar 15. Crash cymbal 16. Synthesizer "wa" 17. Synthesizer "drum" 18. Wood drum

### Play-Along Songs Mode

- To select this mode, press green button.
  - To select a song, find the song symbol illustrated on the base (green section of label). Then, wave your hand over the hole closest to the symbol you chose.
 

**Songs:** 1. Yankee Doodle 2. Twinkle Twinkle Little Star 3. London Bridge 4. Old MacDonald 5. Row Row Row Your Boat 6. Barney's "I Love You" Song
  - You can play along with the songs by playing musical notes with different instrument sounds.
    - Select an instrument sound by pressing the gray button.
    - Wave your hand under the rainbow as in the "Magical Sounds" mode to play the 6 musical notes.
- (Please note: Some instrument/song combinations sound better than others. In general, select an instrument different from those in the song, so that the instrument won't "blend into" the song. Try different combinations to find the ones you prefer.)

### Sing Me To Sleep Mode

- To select this mode, press yellow button.
- This is an automatic mode. The 6 songs will play, then the volume will decrease; this will repeat for about 9 minutes, then the toy will automatically shut off.
 

(Please note: You cannot select instrument sounds in this mode. The gray button and the instrument/song symbols on the base are not active in this mode.)

### CHANGING MODES

Press appropriate Control Button to select a different mode. If you press a Control Button while a song is playing, the song will immediately stop. The new mode you selected is now active.

**AUTOMATIC SHUT-OFF** Toy automatically shuts off after 30 seconds of inactivity.