 


Barney

**INSTRUCTION
MANUAL**

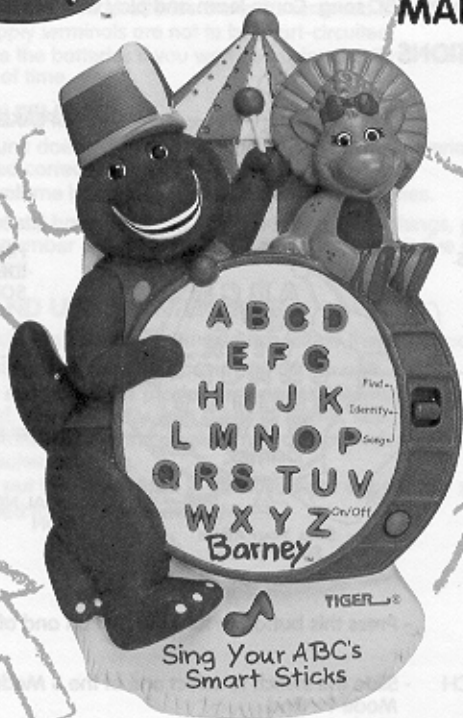

Sing Your ABC's
Smart Sticks

Sing Your ABC's Smart Sticks

 
TIGER
ELECTRONICS, LTD.

Ages 2 and Up
Model 87-502

INTRODUCTION

The Barney™ Sing Your ABC's Smart Stick is a hand held electronic learning aid for preschoolers that helps teach the letters of the alphabet using the popular ABC song. Come learn and play with Barney!

KEY FUNCTIONS

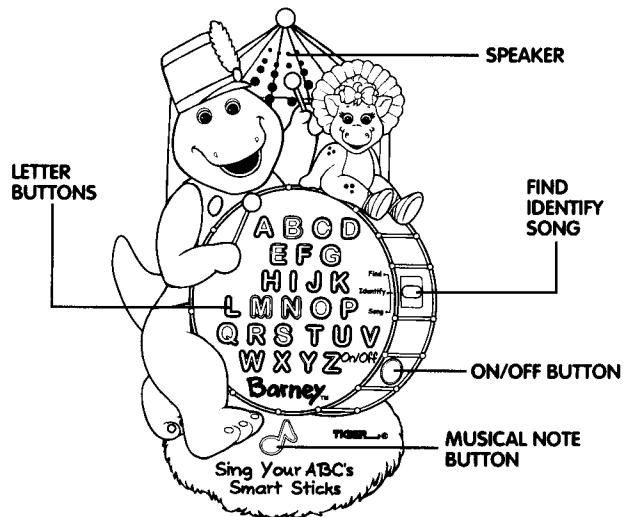

ON/OFF
BUTTON

- Press this button to turn the unit on and off.

MODE SWITCH

- Slide the switch to select one of the 3 Modes of play:
Mode 1 : Find
Mode 2 : Identify
Mode 3 : Song

LETTER BUTTONS

- Press these buttons to select the desired letter.

MUSICAL NOTE
BUTTON

- Press this button to hear Barney sing the Alphabet Song.

1

HOW TO PLAY

Note: The unit will AUTOMATICALLY shut off after 3 minutes of non-use.

1. To activate your Smart Stick, press the ON/OFF button. You will hear Barney say, "Hello!"
2. Your Smart Stick will begin play in the mode selected. If you wish to play a different mode, slide the MODE SWITCH to another mode. You can change modes at any time during play.

The 3 modes are: Mode 1 : Find
Mode 2 : Identify
Mode 3 : Song

MODE 1 - FIND

- Slide the MODE SWITCH to the FIND position. (top)
- Barney will ask your child to find a specific letter.
- Your child enters the answer by pressing one of the letter buttons. Barney will respond by identifying the letter pressed and provide your child with a verbal reward. This will continue until your child changes modes or until the unit automatically shuts off after 3 minutes of non-use.
- If an incorrect button is pressed, Barney will identify the letter that was pressed and then will repeat the original question. If your child guesses incorrectly three times, Barney will automatically ask the child to find a different letter.

MODE 2 - IDENTIFY

- Slide the MODE SWITCH to the IDENTIFY position. (middle)
- Your child can press any letter button and Barney will say that letter.

MODE 3 - SONG

- Slide the MODE SWITCH to the SONG position. (bottom)
- Barney will start to sing the ABC song but will randomly stop. The child must enter the next letter. For example, Barney may sing "A, B, C...." The child needs to press the D button. Barney will then continue to sing the song from that point stopping randomly again. This continues until the mode is changed.
- If an incorrect button is pressed, Barney will say "try again" and sing the same portion of the song over again stopping in the same place.
- After 3 incorrect tries, Barney provides the letter and continues to sing until he stops again.

2

SONG BUTTON

Pressing this button lets the child hear Barney sing the entire Alphabet Song without stopping.

REPLACING THE BATTERIES

ILLUSTRATION 1


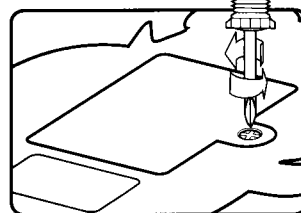 


ILLUSTRATION 2

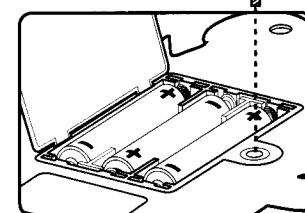 

NOTE: Battery installation should be done by an adult. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries.

1. Open the battery compartment door on the back of the unit using a UNIVERSAL HEAD SCREWDRIVER. (Illustration 1)
2. Insert 3 "AAA" / UM4 / LR03 batteries. Be sure to match the "+" and "-" symbols as shown. (Illustration 2)
3. Close the battery compartment door and replace the screw using a UNIVERSAL HEAD SCREWDRIVER.

CAUTION

To ensure proper function and avoid battery leakage:

- Do not mix old and new batteries
- Do not mix alkaline, standard or rechargeable batteries
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision. (if removable).

3

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, and follow the toy and battery manufacturer's instruction.
- Exhausted or dead batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Remove the batteries if you won't be using the Smart Stick for a long period of time.

TROUBLESHOOTING

1. If the unit does not work, please check that the batteries have been inserted correctly.
2. If the volume is too low, please install new batteries.

If you are still having trouble after checking these things, please call our toll-free number at 1-800-TIGER ED and a representative will be happy to help you.

CARE AND USE/MAINTENANCE

To protect Sing Your ABC's Smart Stick follow these instructions:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe it gently with a barely damp, soft cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker opening.
- Do not put the Smart Stick in direct sunlight or near any source of heat.
- Designed for children 2 and up.

90- DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (TIGER) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER.

Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of U.S. \$4.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.

All product returned must be shipped prepaid and insured for loss or damage to:

TIGER REPAIR DEPARTMENT
1000 N. Butterfield Road, Unit 1023,
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tiger toys.com

TIGER
ELECTRONICS, LTD.



© 1999 Lyons Partnership, L.P.

All rights reserved. The Barney, Baby Bop and BJ names and characters, and the overlapping dino spots and Barney and star logos are trademarks of Lyons Partnership, L.P. Barney, BJ and the Barney and star logo are Reg. U.S. Pat. & Tm. Off.

®, TM, & © 1999 Tiger Electronics, Ltd. All Rights Reserved.
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.

PRINTED IN CHINA

875020001IWT-01