
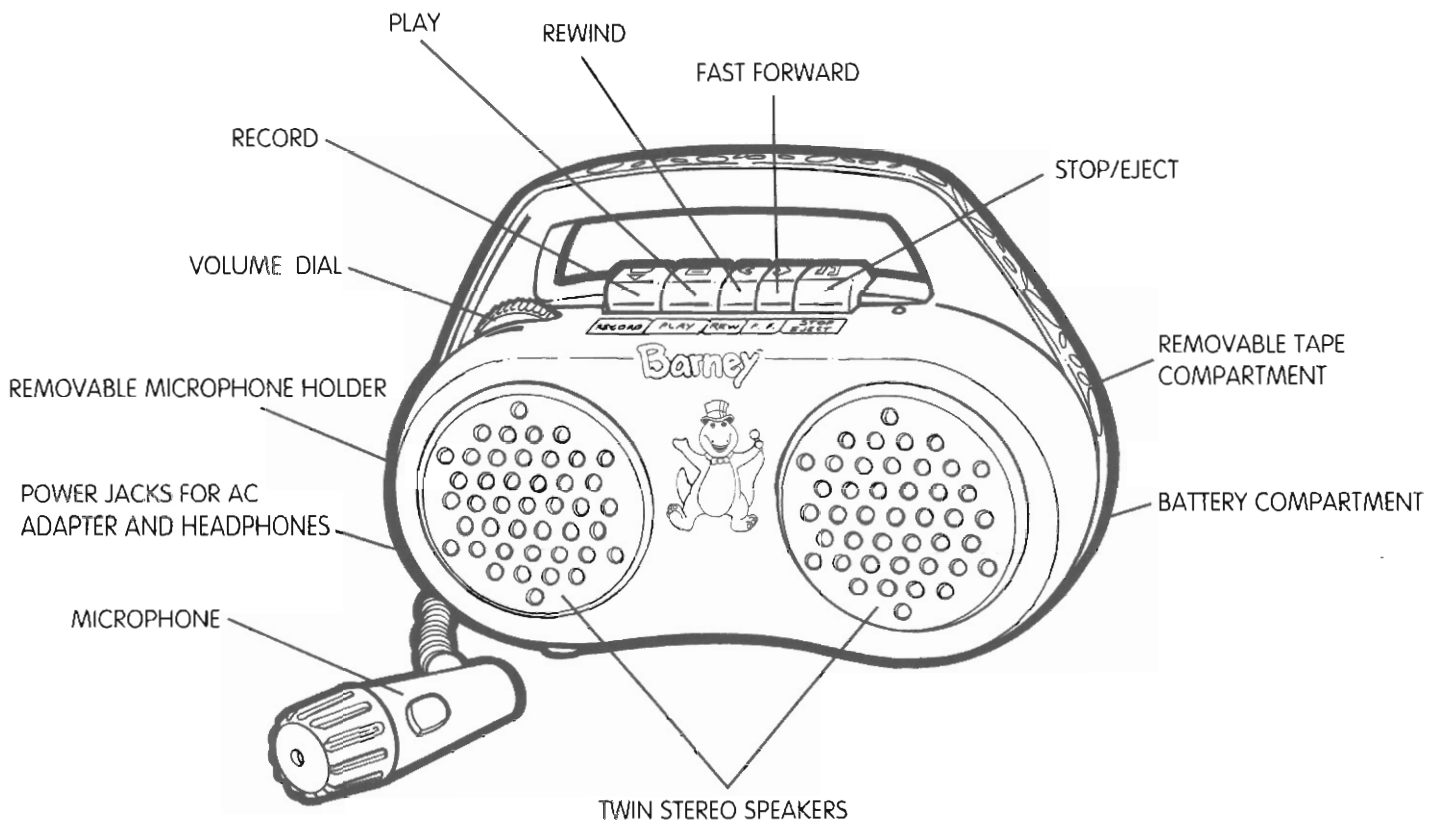


Tape Recorder with Stereo Sound

Ages 3 & Up

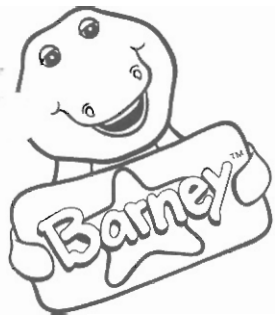

**4 "C" BATTERIES REQUIRED - ALKALINE RECOMMENDED (NOT INCLUDED).
PHILLIPS® SCREWDRIVER REQUIRED FOR BATTERY INSTALLATION.**

CAUTION:

NOT TO BE USED BY CHILDREN UNDER THREE YEARS OLD. THIS TAPE RECORDER IS AN ELECTRIC PRODUCT AND PROPER SAFETY MEASURES MUST BE OBSERVED TO PREVENT ELECTRIC SHOCK IF USED WITH AN AC ADAPTER. ONLY UL/CSA ADAPTERS SHOULD BE USED.

BATTERY INSTALLATION

*With Phillips screwdriver, loosen screw on battery compartment cover and remove cover. Insert 4 "C" batteries into compartment as indicated. Replace battery compartment cover and retighten screw.

* CAUTION: TO AVOID BATTERY LEAKAGE

- Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- Never mix old batteries with new batteries, or standard (carbon-zinc) with alkaline batteries.
- Always remove exhausted or dead batteries from the product.
- Remove batteries if storing product for a long period of time.

HOW TO USE THE TAPE RECORDER

* VOLUME LIMITER SWITCH

The volume limiter switch is located in the battery compartment. It allows you to limit the volume by turning the switch to the ON position. (Switch in OFF position allows volume to be controlled with volume dial.)

* MICROPHONE

Press button on the side of the microphone to amplify your voice (volume is controlled by volume dial and/or volume limiter switch).

* STOP/EJECT

To stop tape, press STOP/EJECT button; to open tape door, depress button completely.

* RECORD

To record, open tape door and insert a standard blank cassette tape into the slots on the door. Close door and press RECORD. The microphone button must be held in to record.

* FAST FORWARD

Press the FAST FORWARD button to move a tape forward quickly.

* REWIND

Press the REWIND button to rewind a tape.

* PLAY

To play a tape, press STOP/EJECT button down completely to open tape door, and insert a cassette tape. Press play button so that it remains in down position and tape will begin to play.

* AC ADAPTER (NOT INCLUDED)

The Barney Tape Recorder can also operate on electrical power when an AC adapter (not included) is used. The AC adapter, which uses 120-volt AC household current, must have an output rating of 6 volts DC (direct current) 200 MA (milli-amps)

minimum. Adapter output lead requires a 5mm OD coaxial plug for insertion into the power jack, located in the back of the tape recorder. Use only an AC adapter approved by a testing agency such as Underwriters Laboratories. Do not use an extension cord with the AC adapter.

Note: AC adapter polarity must match the tape recorder power jack center terminal, which is positive.

WARNING: WHEN USING AN AC ADAPTER, DO NOT OPERATE TAPE RECORDER NEAR BATHING AREAS, OUTDOORS OR IN OTHER POTENTIALLY WET PLACES.

DO NOT use AC adapter other than specified above. An improper output could be dangerous to users and harm the tape recorder. Product warranty is void if improper AC adapter is used.

*HEADPHONES (NOT INCLUDED)

For added enjoyment, a standard set of headphones can be used with the tape recorder. Headphones jack is located in the back of the tape recorder.

IF THERE'S A PROBLEM...

- * Change batteries if tape recorder does not record or play.
- * Change batteries if there is no sound or sound becomes distorted. (Note: Dirty magnetic heads may also be to blame for sound distortion. If necessary, clean magnetic heads by using tape head cleaning cassette.)
- * If RECORD, REWIND, and PLAY buttons fail to work, check to be sure cassette is loaded properly and that correct tape is being used (do not use metal, high bias or chromium dioxide (CrO₂) tapes.)

If a problem cannot be solved after trying the steps above, please see the warranty below.

ONE YEAR WARRANTY

Kid Dimension, Inc. warrants to the original purchaser of this product that the product will be free of defects in material or workmanship for one year from the date of original purchase. If proved defective, it will be replaced or repaired at our option at no charge, if forwarded PREPAID to our Consumer Services Department during the warranty period. The address is:

Consumer Returns - Barney Tape Recorder
c/o Kid Dimension, Inc.
60 Delta Drive, Lower Level
Pawtucket, RI 02862

This warranty does not cover damage resulting from accidents, unreasonable use, neglect, improper service or other causes not arising out of defects in material and workmanship. Kid Dimension, Inc. will not be liable for loss of the product or other incidental or consequential costs, expenses, or damages incurred by the original purchaser. Any implied warranties are limited in duration to the one year period from the original date of purchase. Any replaced or repaired product will not be subject to further warranty. Some states do not allow the exclusion or limitation of warranties set forth above, so the above exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. The electronic components are not designed for consumer repair. Evidence of any attempt at consumer repair will void the warranty. Please do not include batteries when returning the tape recorder.