
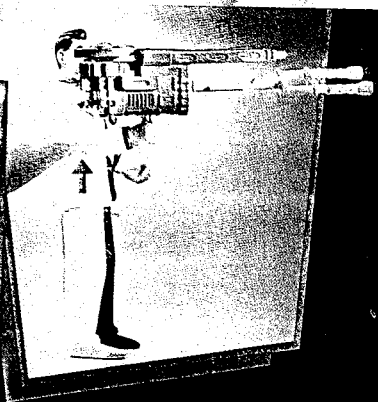
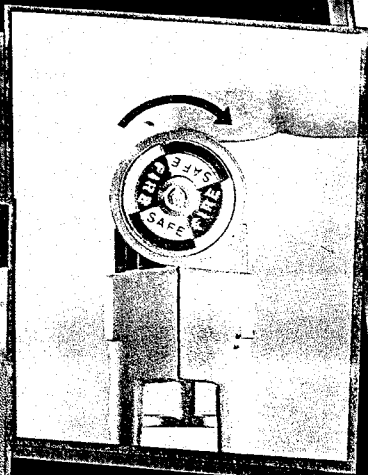


BATMAN

The Animated Series

Two-Face™

ACTION FIGURE

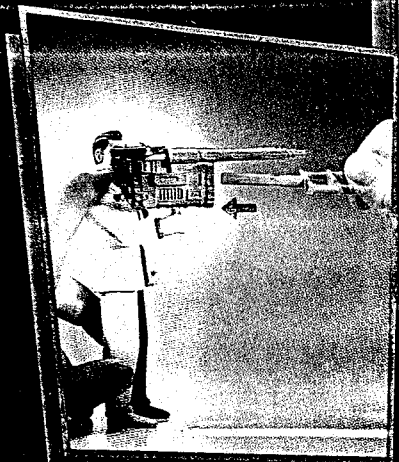

INSTRUCTIONS

1. Load roulette wheel gun as shown.

2. Spin dial on gun for a chance to fire ("Fire" position) or to not fire ("Safe" position).

3. When roulette wheel lands on "Fire", push up on lever to fire double headed missile.

