




AERODISC SHOOTER™

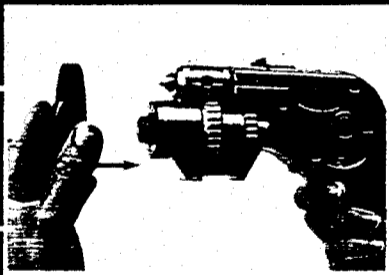

1. Place disc onto front of weapon.

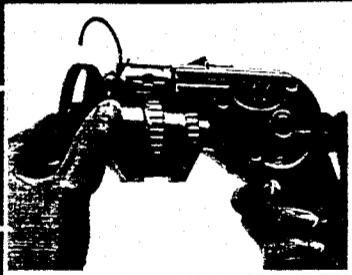

2. Turn disc clockwise 3 times.

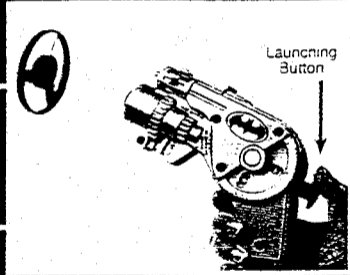

3. Press launching button to send disc flying.