

BATMAN™

The Animated Series

WALKIE TALKIE INSTRUCTIONS

AGES: 5 & UP

TO INSERT BATTERIES:

1. Remove battery compartment door.
2. Insert one 9-volt alkaline battery into battery compartment as shown.
3. Replace battery compartment door.

TO OPERATE WALKIE TALKIES:

1. Turn the On/Off and Volume Control dial to the "On" position.
2. Press the Transmit button to send messages. Speak clearly in a normal voice, holding the walkie talkie about 4" from your mouth.
3. Release the Transmit button to receive messages.
4. Hold the antenna in a vertical position for the best transmission and reception.

TO USE MORSE CODE FUNCTION:

1. To transmit a signal, turn the On/Off and Volume Control dial to the "On" position.
2. Press the Transmit button and **AT THE SAME TIME** press the Morse Code button to send signals to the other walkie talkie.
3. To receive a signal, release the Transmit and Morse Code buttons, and adjust the Volume Control dial to the desired listening level.

CAUTION: TO AVOID BATTERY LEAKAGE:

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if product is stored for a long period of time.
5. Alkaline batteries recommended.

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

BATMAN and all related elements are the property of DC Comics Inc. TM & © 1994 DC Comics. All Rights Reserved. Distributed by Kid Dimension, Inc., a subsidiary of Hasbro, Inc., Pawtucket, RI 02862 USA. © 1994 Kid Dimension, Inc. ® denotes Reg. U.S. Pat. & TM Office. **MADE IN CHINA.**