



# Beddy Bright™ Ernie


Rubber Duckie Lights Up When You Hug Ernie!




## Instructions

What's Needed: Small Phillips' Screwdriver, 2 "AA" Batteries (alkaline recommended).  
**FOR BEST RESULTS, SQUEEZE ERNIE'S SIDES TO MAKE RUBBER DUCKIE LIGHT UP.**


### TO INSERT BATTERIES

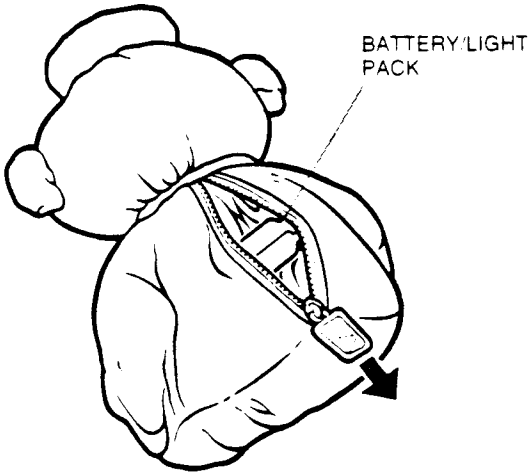


1. Unzip back of Ernie and locate battery/light pack.

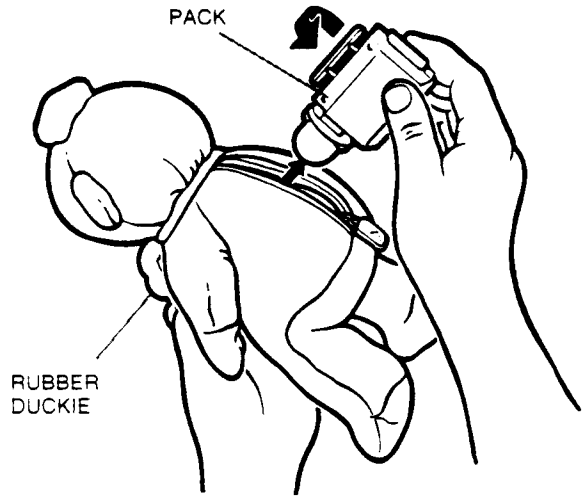

2. While holding rubber duckie, rotate pack 1/4 turn counterclockwise, then pull out to remove.

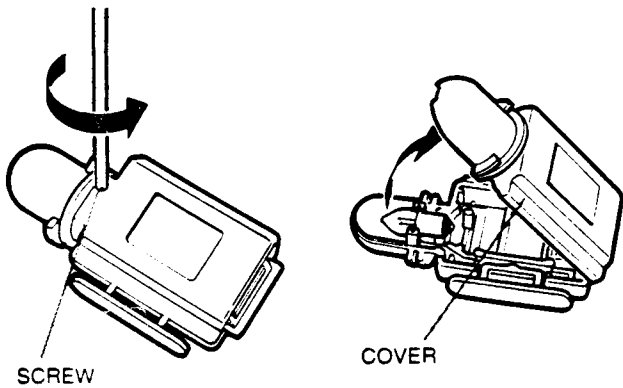

3. With small Phillips screwdriver, loosen screw from pack, then lift off cover. Note: Screw will remain attached to cover.

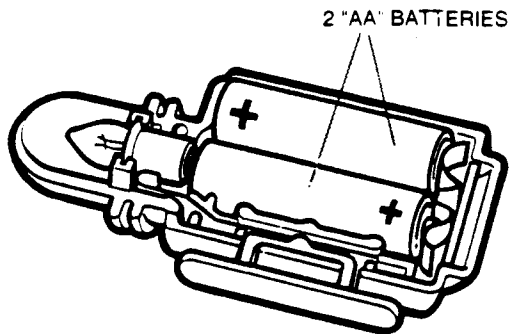

4. Place 2 "AA" batteries into pack as indicated by symbols in the pack.

#### CAUTION: TO AVOID BATTERY LEAKAGE


1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Never mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if product is stored for a long period of time.

### PLEASE SAVE LITERATURE FOR FUTURE REFERENCE




Questions? Call:  
**1-800-PLAYSKL**

For future reference, our toll-free consumer service number is also located on this product.

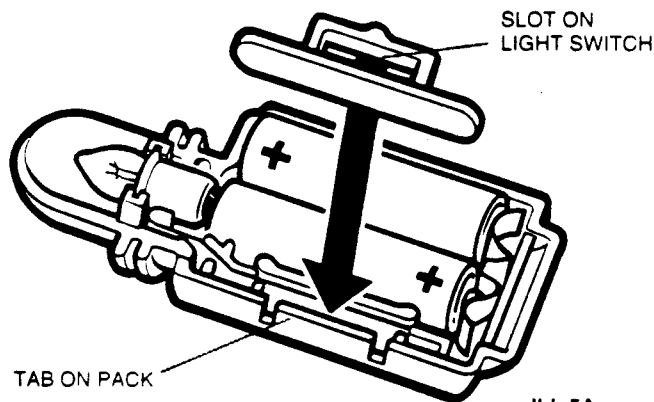



ILL 5A

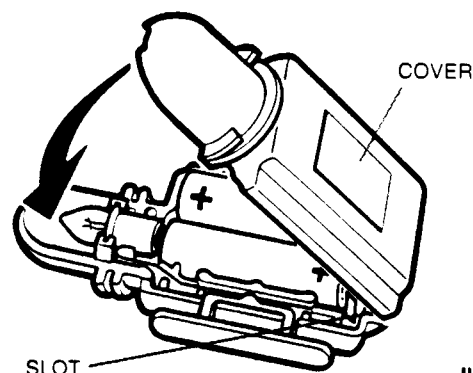

ILL 5B

**5. IMPORTANT NOTE:** Check to see that the light switch is still hooked onto side of the pack. If it has fallen off, fit back on by placing slot on switch over tab on pack as shown (ILL. 5A).

Fit tab on cover into slot on pack, then place cover onto pack and retighten screw (ILL. 5B).

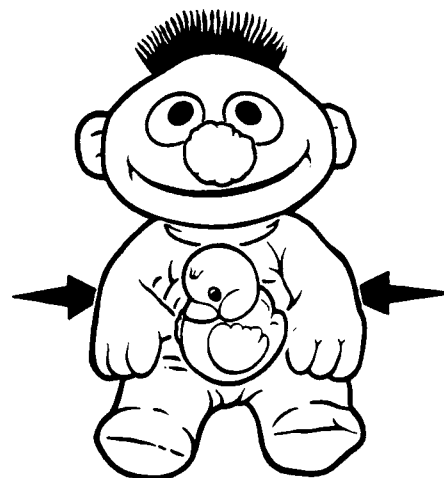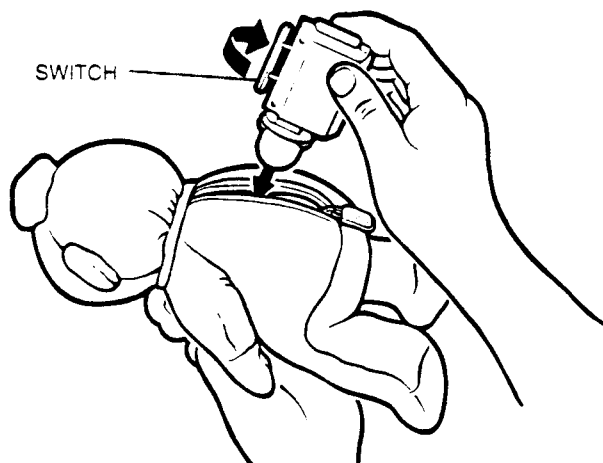


**6.** Gently spread apart stuffed liner in Ernie's back for easier access to hole for pack. Hold onto rubber duckie and push pack (switch facing up) into hole as far as it can go. Turn pack 1/4 turn clockwise to lock into place. Test to be sure pack is locked in place by pulling it outward.

**7.** Rezip back of Ernie. Now rubber duckie is ready to glow! Give Ernie a hug and watch his special friend light up. **FOR BEST RESULTS, SQUEEZE ERNIE'S SIDES.**

### TO REPLACE LIGHT BULB

Replace burnt out light bulb with a PR-4 bulb (available at hardware and electrical stores).

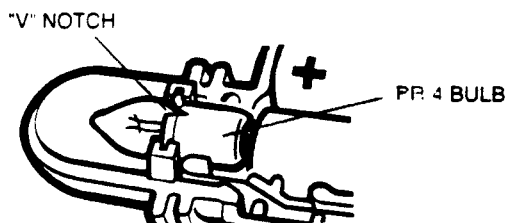

Follow steps 1-7 (except step 4) to replace bulb. For step 4, pull out old bulb and press new bulb into place, making sure the "V" notch in bulb lip is facing up as shown. Also, see "IMPORTANT NOTE" in step 5.

### TO WASH

- Unzip back of Ernie, remove light mechanism (see step 2) and rezip.
  - Place Ernie in pillow case and tie end closed.
  - Machine wash on gentle cycle, with cold water and mild detergent. Do not bleach.
  - Tumble dry in pillow case on low heat setting.
  - Unzip Ernie, clear an opening in stuffed liner, then reinsert light mechanism and rezip (see step 6).
- Note: If light stays on, you will need to redistribute stuffing to prevent it from pressing on the light switch.

© 1991 Children's Television Workshop. Ernie © 1991 Jim Henson Productions, Inc. Ernie is a trademark of Jim Henson Productions, Inc. Sesame Street and the Sesame Street Sign are trademarks and service marks of the Children's Television Workshop.  
 © 1991 Playskool, Inc., Pawtucket, RI 02862 USA, a subsidiary of Hasbro, Inc. All Rights Reserved  
 Made in China C-281  
 5011 P/N 42664900