

Includes unassembled BEYBLADE top, launcher, and ripcord.

Assembly required. A Phillips/cross head screwdriver (not included) is needed to assemble this top.


⚠ WARNING: Do not use BEYBLADE tops or BEYSTADIUM™ on tables or other elevated surfaces.

BEYBLADE tops/BEYSTADIUM are intended to be used on the floor. Do not lean over the stadium when BEYBLADE tops are in play. BEYBLADE tops may bounce up and hit eye or face.

- Before assembly and playing, please read instructions. Please keep these instructions for future reference.
- When removing parts from runner frame, ask an adult to help you trim off any excess plastic using scissors or other suitable tool.
- The frame is numbered. Please follow the numbers carefully and make sure you are assembling the right parts.
- Discard plastic bags immediately.

PARTS:

Runner Frame
Parts, Weight Disk,
Blade Base, Attack
Ring, Screw, Label
sheets, Ripcord,
Launcher.

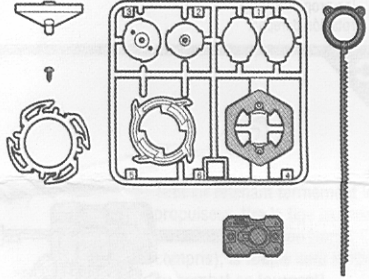

BEYSTADIUM sold separately.

BUILD:


1

Peel and apply labels as shown.




2

Put together 2 & 3 and use a Phillips/cross head screwdriver to fasten the screw to the Blade Base.

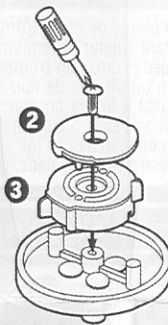


3

Set the Weight Disk on the assembled Blade Base.

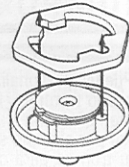


4

Apply a decal to the Bit Chip as shown in the diagram.

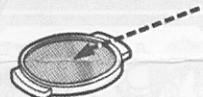


5

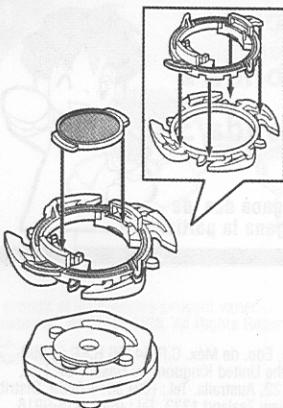


6

Place Attack Ring on Blade Base, aligning tabs on ring with grooves on Spin Gear. Turn ring left until it locks onto spin gear. To remove ring from gear, turn ring right.

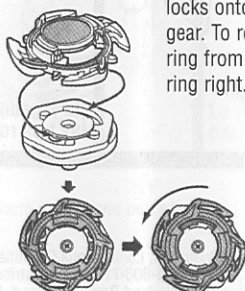

7


Your BEYBLADE top is now ready for battle!

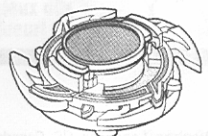

LAUNCH:


A

Insert ripcord into launcher as shown.

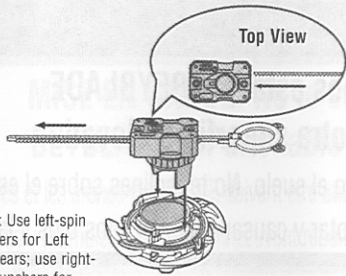


(NOTE: Use left-spin launchers for Left Spin Gears; use right-spin launchers for Right Spin Gears.)

B

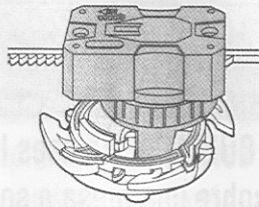


Insert posts on launcher into openings in BEYBLADE top, as shown. Launcher should stay attached to BEYBLADE top when inserted correctly.

C

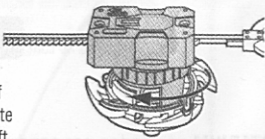

Hold lower half of launcher and rotate BEYBLADE top left to lock it in place.

D

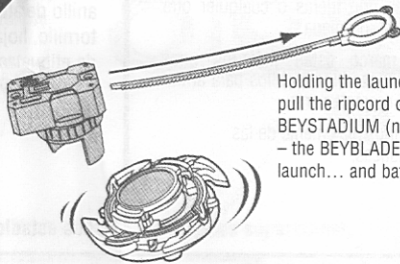

Holding the launcher securely, pull the ripcord over the BEYSTADIUM (not included) – the BEYBLADE top will spin... launch... and battle!

CUSTOMIZE FOR EACH BATTLE!

WHAT IS CUSTOMIZING?

Customizing is taking parts from different BEYBLADE tops and putting them together to create a new top. Why customize? Because you can change how your top will perform in battle. By switching parts, you can create a top that will perform a certain way. For example, if your opponent has an Attack Type top, you may want to change your top's parts to make it a Defense Type top, to help withstand your opponent's attacks.

Learn all the different types of Attack Rings, Weight Disks and Spin Gears that are available and that you have in your collection. Look at the star chart on the packages to see the strengths of each top's parts and check out the website beyblade.hasbro.com for more information!

TRIPLE SHOT You and your opponent each battle 3 BEYBLADE tops for triple the action!

1



Get your 3 BEYBLADE tops ready.


2



Decide the play order of your BEYBLADE tops.

3


▶ Round 1
Round 2
Round 3

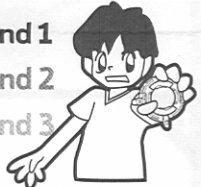

To start the game, players launch their first BEYBLADE top.

4

Play three rounds.

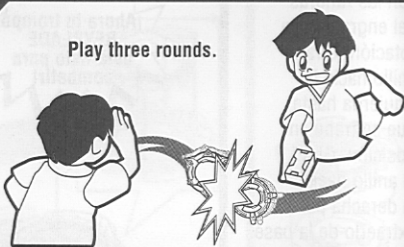

5

▶ Round 1
▶ Round 2
▶ Round 3



The player who wins two out of three rounds is the winner!



www.beyblade.com
beyblade.hasbro.com



Watch it on
abc family

Product and colors may v
©* and/or TM* & © 2003
© denotes Reg. U.S. Pat.
Manufactured under licens
©HUDSON SOFT/TAKARA
©Aoki Takao•BB3Project*
Licensed by d-rights Inc.
TM & © ABC Family Worl