



HIGH PERFORMANCE TOPS

Jumping Base™

AGE 8+

82591/82500 Asst.

13

Attack Type

Assembly required. Phillips/crosshead screwdriver needed (not included).


⚠ WARNING: Do not use BEYBLADE tops or Beystadium™ on tables or other elevated surfaces.

BEYBLADE tops/BEYSTADIUM are intended to be used on the floor. Do not lean over the stadium when BEYBLADE tops are in play. BEYBLADE tops may bounce up and hit eye or face.

- Before assembly and playing, please read instructions. Please keep these instructions for future reference.
- When removing parts from runner frame, ask an adult to help you trim off any excess plastic using scissors or other suitable tool.
- The frame is numbered. Please follow the numbers carefully and make sure you are assembling the right parts.
- Discard plastic bags immediately.

PARTS:

Runner Frame Parts, Screws, Spring, Attack Ring, Weight Disk, 3 Different Tips, Launcher, Ripcord

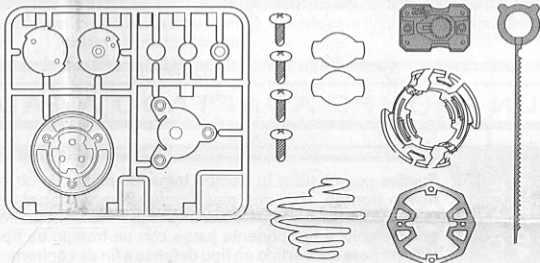

BEYSTADIUM sold separately.

BUILD:

1

Peel and apply labels as shown.

2

Assemble spin gear **1** and **2** to base **3** with the long screw.

Apply sticker to spin gear after screw is in place.

3

Attach spring to **4**. Attach to base with 3 short screws.

4

Place Weight Disk, Attack Ring, and Bit Chip on base. To attach Attack Ring to base, align tabs on ring with grooves on gear. Turn ring **LEFT** until it locks onto spin gear. (To remove ring from gear, turn ring right.)

LEFT TO LOCK

5

Attach one of the tips **(5-7)** to the base.

6

Your BEYBLADE top is now ready for battle!

LAUNCH:

A Insert ripcord into launcher as shown.

NOTE: Use left-spin launchers for Left Spin Gears; use right-spin launchers for Right Spin Gears.

B Insert posts on launcher into openings in BEYBLADE top, as shown.

C Hold lower half of LAUNCHER and rotate BEYBLADE top left to lock it in place.

D Holding the launcher securely, pull the ripcord over the BEYSTADIUM (not included) – the BEYBLADE top will spin... launch... and battle!

3 different tips for exciting battle strategies!

<p>ROUND TIP</p> <p>Helps provide better balance and endurance.</p>	<p>POINTED TIP</p> <p>Helps provide better stability; helps reduce chance of bouncing out of ring.</p>	<p>FLAT TIP</p> <p>Helps increase speed and mobility.</p>
--	---	--

CUSTOMIZE FOR EACH BATTLE!

WHAT IS CUSTOMIZING?

Customizing is taking parts from different BEYBLADE tops and putting them together to create a new top. Why customize? Because you can change how your top will perform in battle. By switching parts, you can create a top that will perform a certain way. For example, if your opponent has an Attack Type top, you may want to change your top's parts to make it a Defense Type top, to help withstand your opponent's attacks.

Learn all the different types of Attack Rings, Weight Disks and Spin Gears that are available and that you have in your collection. Look at the star chart on the packages to see the strengths of each top's parts and check out the website beyblade.hasbro.com for more information!

TRIPLE SHOT You and your opponent each battle 3 BEYBLADE tops for triple the action!

1 Get your 3 BEYBLADE tops ready.

2 Decide the play order of your BEYBLADE tops.

3 ▶ Round 1
Round 2
Round 3

To start the game, players launch their first BEYBLADE top.

4 Play three rounds.

5 ▶ Round 1
▶ Round 2
▶ Round 3

The player who wins two out of three rounds is the winner!



BEYBLADE.COM
BEYBLADE.HASBRO.COM



Product and colors may ®* and/or TM* & © 2004
Manufactured under license
© HUDSON SOFT/TAKARA
TM & © ABC Family World