



AGES 8+

82593/82500 Asst.

Knight Dranzer™

39


Combination Type

Includes unassembled BEYBLADE top, launcher, and ripcord.
Assembly required. No tools needed.

⚠ WARNING: Do not use BEYBLADE tops or Beystadium on tables or other elevated surfaces.


BEYBLADE tops/Beystadium are intended to be used on the floor. Do not lean over the stadium when BEYBLADE tops are in play. BEYBLADE tops may unexpectedly fly off surface and cause eye or facial injury.

- Before assembly and playing, please read instructions. Please keep these instructions for future reference.
- When removing parts from runner frame, ask an adult to help you trim off any excess plastic using scissors or other suitable tool.
- The frame is numbered. Please follow the numbers carefully and make sure you are assembling the right parts.
- Discard plastic bags immediately.

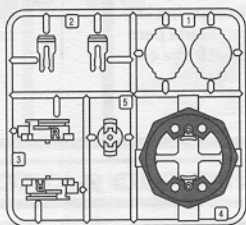


PARTS:
Runner Frame Parts,
Blade Base, Launcher,
Ripcord

 BEYSTADIUM sold separately.



BUILD:

1 Peel and apply labels as shown.

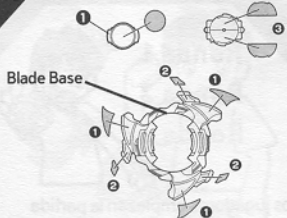

NOTE! Apply stickers to smooth sides of Bit Chips.

2 Metal Weight Gear

Place Metal Weight Gear on shaft (5).



3

Snap both halves of (3) Right Spin Gear around gear, enclosing Metal Weight Gear.

4

Insert Attachments (2) into Blade Base until the tips are just past the knobs. Do not insert attachments all the way in at this time.

5

Place Right Spin Gear into Blade Base.

6


Snap Attachments all the way into Blade Base to secure Right Spin Gear.

7


Place Weight Disk (4) on Blade Base.

8

Attach Bit Chip to Attack Ring.

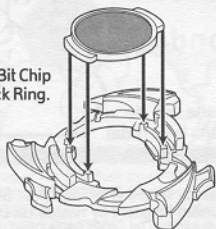

9

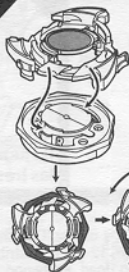


Attach Attack Ring to base, aligning tabs on ring with grooves on gear. Turn Attack Ring LEFT until it locks onto spin gear. (To remove ring from gear, turn ring right.)





LEFT TO LOCK

10

Your BEYBLADE top is now ready for battle!

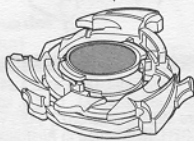

LAUNCH:

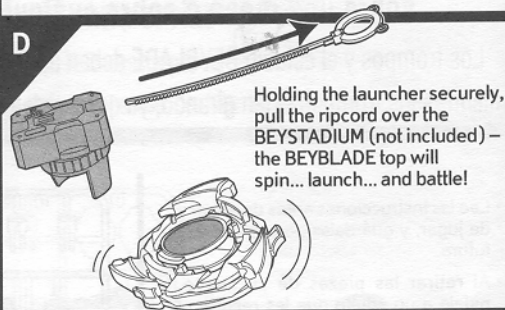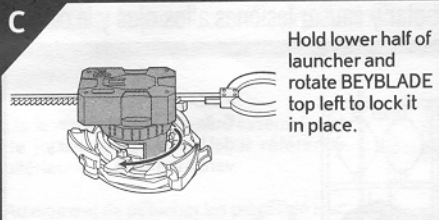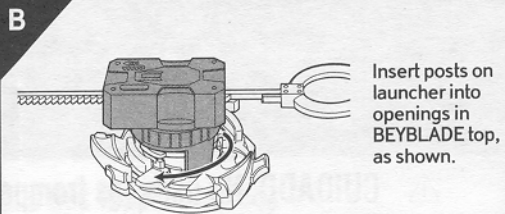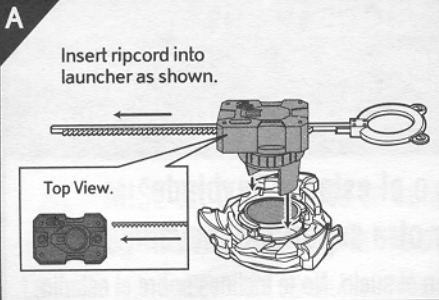



CUSTOMIZE FOR EACH BATTLE!

WHAT IS CUSTOMIZING?

Customizing is taking parts from different BEYBLADE tops and putting them together to create a new top. Why customize? Because you can change how your top will perform in battle. By switching parts, you can create a top that will perform a certain way. For example, if your opponent has an Attack Type top, you may want to change your top's parts to make it a Defense Type top, to help withstand your opponent's attacks.

Learn all the different types of Attack Rings, Weight Disks and Spin Gears that are available and that you have in your collection. Look at the star chart on the packages to see the strengths of each top's parts and check out the website beyblade.hasbro.com for more information!

TRIPLE SHOT You and your opponent each battle 3 BEYBLADE tops for triple the action!

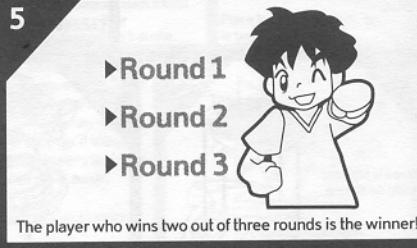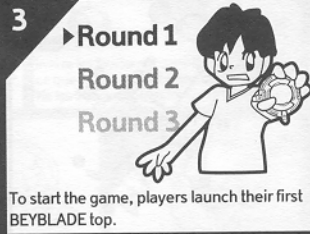

Product and colors may
®* and/or TM* & © 200
Manufactured under lice
©HUDSON SOFT/TAKAR
TM & © ABC Family Wo