



HIGH PERFORMANCE TOPS

AGES 8+

82577/82500 Asst.

Trygle™

A-17

Attack Type

LET IT RIP!

Assembly required.  
No tools needed.

Includes unassembled BEYBLADE top, launcher, and ripcord.

**WARNING:** Do not use BEYBLADE tops or Beystadium™ on tables or other elevated surfaces.


BEYBLADE tops/BEYSTADIUM are intended to be used on the floor. Do not lean over the stadium when BEYBLADE tops are in play. BEYBLADE tops may bounce up and hit eye or face.

- Before assembly and playing, please read instructions. Please keep these instructions for future reference.
- When removing parts from runner frame, ask an adult to help you trim off any excess plastic using scissors or other suitable tool.
- The frame is numbered. Please follow the numbers carefully and make sure you are assembling the right parts.
- Discard plastic bags immediately.

**PARTS:**  
Runner Frame Parts, Blade Base, Attack Ring, Wings, Metal Weight Gear, Shaft, Spring, Launcher, Ripcord


BEYSTADIUM (sold separately).

**Note:** Includes 2 Bit Chips. The Bit Chip with holes/triangle on one side can be used with BEYBLADE Electronic Launcher (sold separately).

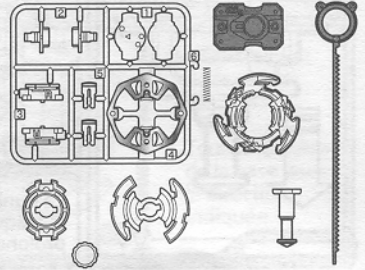


**BUILD:**


**1** Peel and apply stickers as shown.

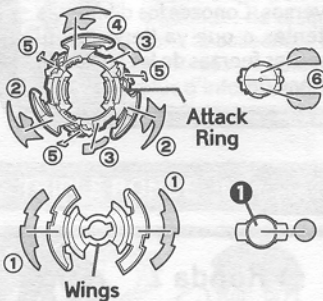

**NOTE!** The Bit Chip sticker on the large label sheet must be applied to the Bit Chip (1) that has the holes/triangle on one side. Apply stickers to smooth sides of Bit Chips.

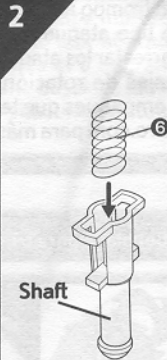


Insert spring (6) into shaft.

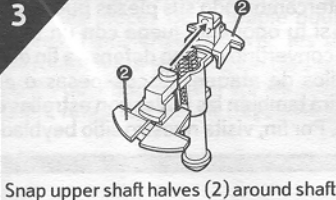

Snap upper shaft halves (2) around shaft.




Place Metal Weight Gear on shaft.

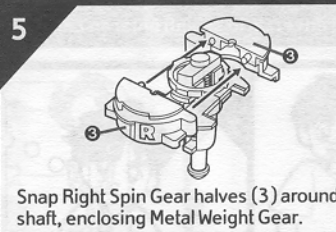

Snap Right Spin Gear halves (3) around shaft, enclosing Metal Weight Gear.



Place Wings on Blade Base.

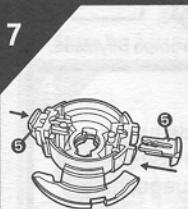

Insert Attachments (5) into Blade Base until the tips are just past the knobs. Do not insert attachments all the way in at this time.



Place Right Spin Gear into Blade Base.




Snap Attachments all the way into Blade Base to secure Right Spin Gear.



Place Weight Disk (4) on Blade Base.



Attach Bit Chip to Attack Ring. Attach Clear Cover.

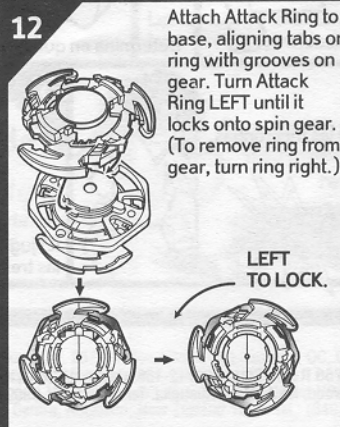

Attach Attack Ring to base, aligning tabs on ring with grooves on gear. Turn Attack Ring LEFT until it locks onto spin gear. (To remove ring from gear, turn ring right.)

LEFT TO LOCK.



Your BEYBLADE top is now ready for battle!

# LAUNCH:


**A** Insert ripcord into launcher as shown.

**NOTE:** Use left-spin launchers for Left Spin Gears; use right-spin launchers for Right Spin Gears.

**B** Insert posts on launcher into openings in BEYBLADE top, as shown.


**C** Hold lower half of launcher and rotate BEYBLADE top left to lock it in place.

**D** Holding the launcher securely, pull the ripcord over the BEYSTADIUM (not included) – the BEYBLADE top will spin... launch... and battle!

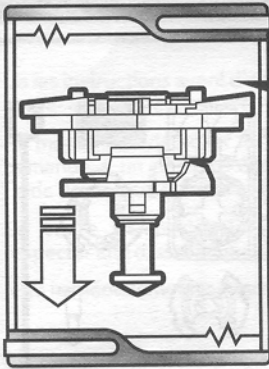

The tip of the axle flies out when the opponent's attack is sustained!

## TO SET JUMPING SYSTEM:

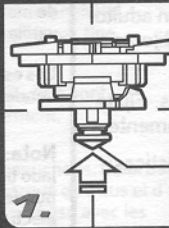

1. Insert the tip of the axle all the way in.
2. Rotate the wings of the Blade Base in the direction of the arrows.

## CUSTOMIZE FOR EACH BATTLE!

### WHAT IS CUSTOMIZING?

Customizing is taking parts from different BEYBLADE tops and putting them together to create a new top. Why customize? Because you can change how your top will perform in battle. By switching parts, you can create a top that will perform a certain way. For example, if your opponent has an Attack Type top, you may want to change your top's parts to make it a Defense Type top, so it will withstand your opponent's attacks.

Learn all the different types of Attack Rings, Weight Disks and Spin Gears that are available and that you have in your collection. Look at the star chart on the packages to see the strengths of each top's parts and check out the website [beyblade.hasbro.com](http://beyblade.hasbro.com) for more information!

## TRIPLE SHOT You and your opponent each battle 3 BEYBLADE tops for triple the action!

**1**

Get your 3 BEYBLADE tops ready.

**2**

Decide the play order of your BEYBLADE tops.

**3**

► Round 1  
Round 2  
Round 3

To start the game, players launch their first BEYBLADE top.

**4**

Play three rounds.

**5**

► Round 1  
► Round 2  
► Round 3

The player who wins two out of three rounds is the winner!

**Check it out!**  
For game ideas, strategies and official game rules, please see

**BEYBLADE.COM**  
[BEYBLADE.HASBRO.COM](http://BEYBLADE.HASBRO.COM)



Product and colors may vary. / Le produit et les couleurs peuvent varier.  
 © \* and/or TM \* & © 2002 Hasbro.  
 All Rights Reserved. © denotes Reg. U.S. Pat. & TM Off.  
 Manufactured under license from Takara Co., Ltd.  
 © HUDSON SOFT/TAKARA+BEYBLADE PROJECT  
 TM & © ABC Family Worldwide, Inc. All Rights Reserved.