

BICYCLE®

Electronic Card Game

DRAW POKER RULES

- Hands are made from a 52 card card deck.
- Four suits are: hearts, diamonds, clubs and spades.
- Aces can be used high or low.
- Amount won is based on your winning hand plus the BET

PAYOFF RANKINGS:

ONE PAIR (Jacks or better) PAYS 1 TO 1	FULL HOUSE (three of a kind plus a pair) PAYS 8 TO 1
TWO PAIR (Any two pairs) PAYS 2 TO 1	FOUR OF A KIND PAYS 25 TO 1
THREE OF A KIND PAYS 3 TO 1	STRAIGHT FLUSH (five cards in row, same suit) PAYS 50 TO 1
STRAIGHT (five cards in a row) PAYS 4 TO 1	ROYAL FLUSH (10, J, Q, K, A, same suit) PAYS 250 TO 1 Special BONUS 4000 with 5 coins bet
FLUSH (five cards same suit) PAYS 5 TO 1	

TO RESET THE UNIT:

Press HOLD 4 plus HOLD 5 plus DEAL/DRAW plus ON/SOUND/OFF buttons together at same time.

Press the HOLD 4 button.
To hold your fourth card

ON: Press the ON button to turn on the unit. If it's the first time you are playing (or the first time with new batteries), the screen shows \$1000. All other times when you turn on the unit, the cumulative score of the last time played will appear on screen.
SOUND: Press SOUND to turn off the SOUND.
OFF: To turn off the game when you are finished playing. Game shuts off automatically after three minutes of no betting. (First press will turn unit ON, second press will deactivate SOUND and third press shuts unit OFF.)


Press the HOLD 1/BET button to hold your first card (from left), to place your bet (from 1 to 5 coins).



Requires 1 "AAA" battery included
Bicycle, the Bicycle logo, Ace of Spades, 806, Joker card design, Rider Back design, and all related indicia are trademarks of The United States Playing Card Company.
Copyright © 1995 The United States Playing Card Company. All Rights Reserved.

Made in China Printed in Hong Kong

When BET appears on screen, use the BET or MAX BET button to decide how many coins (1-5) you wish to bet. When you place your bet, the amount bet is automatically subtracted from your score. You will hear a winning melody and the word "WIN" will appear on screen if you have a hand of a pair of jacks or better. You will also hear a special melody whenever you set a new high score.

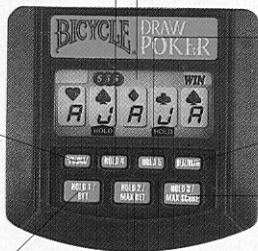

Press the HOLD 5 button to hold your fifth card.

Press the DEAL/DRAW button to deal your first five cards for each hand. To draw additional cards after making your "hold" choices. To reset your game to \$1000.

Press the HOLD 3/MAX SCORE button to hold your third card. To examine your maximum winnings at any time.

Press the HOLD 2/MAX BET button to hold your second card, to place the MAXIMUM BET of 5 coins and your first 5 cards are automatically dealt.

All 5 cards can be held if you wish. If you make a mistake and press the HOLD button for a card you don't wish to HOLD, simply press the HOLD button again to release the card. If you lose all your money, the GAME IS OVER. Press the DEAL/DRAW button to begin a new game with \$1000.

AL1935



Printed On
Recycled Paper

TIGER ELECTRONICS INC.

© copyright 1995 Tiger Electronics, Inc.

980 Woodlands Parkway, Vernon Hills, Illinois 60061




75039BCKME-1

Pocket Electronic Casino Game

INSERTING THE BATTERY

To insert the battery, remove the battery compartment cover at the back of the game. (To remove cover, unscrew the cover, then push the cover in the direction of the arrow.) Insert one "AAA" (LR03) battery or equivalent (not included), making sure to align the "+" and "-" as shown.

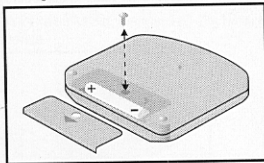

CAUTION

High temperature will destroy the unit.
Do not leave unit in direct sunlight.
Do not press the liquid crystal display, and avoid heavy shock or the display may fail.

DEFECT OR DAMAGE

If a part of your game is damaged or something has been left out, DO NOT RETURN THE GAME TO THE STORE. The store does not have replacement parts. Instead, write to us at:

TIGER ELECTRONIC TOYS REPAIR CENTER
980 Woodlands Parkway,
Vernon Hills, Illinois 60061, U.S.A.

In your note, mention the name of your game, the games model number, and tell us briefly what the problem is. Also include sales slip, date and place of purchase and price paid. We will do our best to help.

90-DAY LIMITED WARRANTY

Tiger Electronic Toys warrants to the original consumer purchaser of any of its electronic games that the product will be free of defects in material or workmanship for 90 days from date of purchase. During this 90-day warranty period the game will either be repaired or it will be replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase, or when returned prepaid and insured with proof of date of purchase, to:

Tiger Electronic Toys,
980 Woodlands Parkway,
Vernon Hills, Illinois 60061, USA.

Units returned without proof of the date of purchase, or units returned after the 90-day warranty period has expired, will be repaired or replaced (at our option) for a service charge of US\$5.00. Payment must be made by check or money order. This non-warranty service will only be available for one year from the date of purchase. All non-warranty units must be returned postage paid and insured to:

TIGER ELECTRONIC TOYS, REPAIR CENTER,
980 WOODLANDS PARKWAY,
VERNON HILLS, ILLINOIS 60061, USA.

Tiger Electronic Toys will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. **HOW TO RECEIVE SERVICE FROM THE TIGER ELECTRONIC TOYS REPAIR CENTER FOR YOUR ELECTRONIC GAME DURING AND AFTER THE 90-DAY WARRANTY PERIOD.** During the 90-day warranty period, you may have a defective game replaced at the dealer from which it was purchased. If, however, during the 90-day warranty period, you choose to obtain repair or replacement from the Tiger Electronic Toys Repair Center, please make the arrangements described below:

1) Pack the game carefully in the original box. If the game box is not available, use a sturdy carton with plenty of newspaper, foam or other padding and tie it securely.

2) Carefully print on the box or carton the following name and address
TIGER ELECTRONIC TOYS, REPAIR CENTER,
980 Woodlands Parkway,
Vernon Hills, Illinois 60061, USA.

TIGER ELECTRONIC (UK) L.L.C.
Belvedere House, Victoria Avenue
Harrogate, North Yorkshire HG1 1EL, England

Also, don't forget to show your return address.

3) Put parcel post stamps on the package; insure the package, then mail. After the 90-day warranty period and up to one year from the date of purchase, do all of the above PLUS enclose your check or money order for US\$5.00 payment for the repair service.