AGE 3+

Bubble Whistle

same time!

The BIG BUBBA Bubble Whistle is the coolest way to blow tons of bubbles and whistle at the

FILL IT

Remove foil seal under Funnel Cap on Solution Bottle. Pour bubble solution into Solution Chamber up to Fill Line.



CLEAN IT

When done, pour remaining solution back into Solution Bottle and rinse under warm running water. Replace Funnel Cap to prevent spills.



Blow through Mouthpiece to make bubbles. Do not inhale. Slide your finger over the Whistle Hole to stop and start whistle sound.

HASBRO.COM FOR NEW PRODUCTS AND OFFERS

© 2002 OddzOn, Inc. © 2002 Hasbro. Pawtucket, RI 02862 USA, All Rights Reserved. Distributed in the United Kingdom by Hasbro UK Ltd., Caswell Way, Newport, Gwent NP9 0YH. Distributed in Australia by Hasbro Australia Ltd., 570 Blaxland Road, Eastwood, NSW 2122, Australia. Tel: (02) 9874-0999. Distributed in New Zealand by Hasbro New Zealand Ltd., Albany Highways, Auckland, PO Box 100 940. North Shore Mail Centre, Auckland, New Zealand 1333. Tel: (649) 415-9916. Hasbro Canada, Longueuil, QC, Canada J4G 1G2

We recommend that you retain our address for future reference. Please keep this package for important information.

Not suitable for children under 3 years because of small partschoking hazard.

We reserve the right to change specification of product illustrated.

Made in China.

Bubble Solution Made in USA. ® denotes Reg. U.S. Pat. & TM Office. P/N 6194890000

For questions or comments call 1-800-327-8264



Collect all 4 new BIG BUBBA products!



45424 BIG BUBBA® SQUEEZE 'N BLOW BUBBLES





45487 BIG BUBBA® BUBBLE GUN

PARTY MACHINE



200208090BCLB-01

45423