

Model 7-546-0
Ages 5 & Up

TIGER ELECTRONICS INC.

QUICK START

- 1) Insert batteries and turn on the unit.
- 2) Now Bird Brain will come to life and tell you how to play! So just follow his instructions. When he asks you "HOW MANY PLAYERS?" press any button to add a player, one at a time. 1-4 players can play.
- 3) Next Bird Brain will ask you to "PICK A SKILL LEVEL." Press any button to select EASY. Press again to select HARD.
- 4) Now Bird Brain will pick 7 phrases from his repertoire and mix them up. You'll hear common phrases like "Ants in your pants," "Barking up the wrong tree," "Nutty as a fruitcake," or many others. Bird Brain will put the first part of each phrase under the outer buttons, and the last word under the inner buttons.
- 5) When it is your turn, Bird Brain will ask you to "PICK AN OUTER BUTTON." Press any outer button to hear the first part of a phrase.
- 6) Now Bird Brain will tell you to "PUSH AN INNER BUTTON." You will hear the last word of one of the 7 phrases. If you correctly complete the phrase, you've made a match!
- 7) The player who makes the most correct matches wins the game!

INTRODUCTION

"GOOD-BYE! I MEAN, HELLO!"

Thank you for playing Bird Brain, the wacky phrase-making memory game! Your host for this game is Bird Brain, a wisecracking bird who's just a little mixed up! Bird Brain has an extensive library of fun phrases, like "Ants in your pants!" "Nutty as a fruitcake!" or "Blind as a bat!" Each time you play, Bird Brain will pick 7 phrases and scramble them up, hiding the first part of each phrase under the outer buttons, and the last word of each phrase under the inner buttons. Your job is to match up as many correct phrases as you can!

SETUP

Bird Brain requires 4 X "AA"/LR 6 batteries (not included).


To insert the batteries, remove the battery cover as shown and place the batteries inside, making sure to line up "+" and "-" correctly.

TIGER RECOMMENDS




Do not mix old and new batteries. When the batteries are inserted correctly, replace the battery door and turn the unit on.

To save battery life, the unit will shut down automatically after 3 minutes if no buttons are pressed.

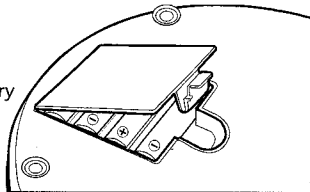

TO ENSURE PROPER FUNCTION:

- Do not mix new & old batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (If removable).
- Rechargeable batteries are only to be charged under adult supervision (If removable)
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Only batteries of the same or equivalent type as recommended are to be used.

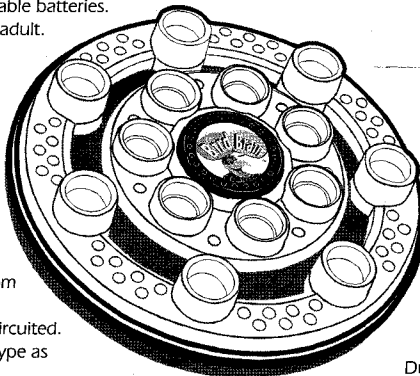

BEGINNING PLAY

Turn on the unit. Bird Brain will begin chattering away! Follow his lead! He will guide you through selecting the number of players, the skill level and how to begin the first round.

SELECTING NUMBER OF PLAYERS

The first thing Bird Brain will ask you to do is to select the number of players. Each player should sign in by pressing any button on the game. Bird Brain will call out each player as they sign into the game. When all players are entered, pause for just a few moments and Bird Brain will continue.

SELECTING YOUR SKILL LEVEL.

Next, Bird Brain will ask you to pick a skill level. Press any button to select EASY. Press again to select HARD. (You can press yet again to go back to EASY.)

In EASY mode, the lights on the inner row will light up to help you remember which phrases have already been completed. In HARD mode, no lights are shown, and it is up to the player to remember which buttons have been pressed and which phrases have been completed.

"HERE ARE THE SEVEN PHRASES!"

When you have selected the number of players and the difficulty setting, Bird Brain will tell you what the 7 phrases for the game are. Bird Brain will give you the complete phrase, then hide the first part of each phrase under one of the outer buttons, and the last word under one of the inner buttons. The location of each part of the phrase stays the same during each game, so you have to remember which button hides the first part of each phrase, and which button hides the last word!

If you want Bird Brain to skip the reading of the phrases and go straight into the game, press and hold any button until Bird Brain skips to the next section.

TAKING TURNS IN A MULTIPLE PLAYER GAME

"PLAYER ONE, YOUR TURN!"

When it is your turn, Bird Brain will tell you to "Push an outer button!" Press any outer button and you will hear the first part of a phrase. Now Bird Brain will tell you to "Push an inner button," and you will hear the last word of a phrase.

If you made a correct match, Bird Brain will congratulate you— but if you guessed wrong, watch out! Bird Brain loves to see you make mistakes!

So listen carefully and pay attention, and remember where all the phrases are hidden! After you take your turn -- whether or not you succeeded in making a correct match -- it is then the next player's turn. In a single player game, of course, you just keep taking turns yourself!

HINTS

"PSSST!"

Bird Brain isn't all bad. Sometimes he'll give you a hint. If you press an outer button and you hear Bird Brain go "Pssst!" then look closely: Bird Brain is trying to give you a hint by flashing the light on one of the inner buttons! Now you can make this match easily by picking the button that Bird Brain flashed for you!

But be careful... sometimes Bird Brain lies.

"IDONT HAVE ALL DAY!"

While you play, Bird Brain will try to help by reminding you whose turn it is. Bird Brain's "helpful reminders" can be quite amusing, but don't sit too long. If Bird Brain sits too long without anyone pressing any buttons, he'll just turn himself off!

WINNING THE GAME

Single Player Game (1 player):

If you are playing a 1 player game, you must keep playing until you correctly match all 7 phrases. If you take more than 25 turns to do so, then you lose. Bird Brain will start over with 7 new phrases. But if you manage to complete all 7 phrases in less than 25 turns, you win! Bird Brain will tell you how many turns it took you to match all 7 phrases. The fewer turns it takes you to make all the matches, the better your score!

Multi-Player Game (2-4 players):

If you are playing a multi-player game, the object is to be the first player to correctly match 4 phrases. If all seven phrases are completed, but no player was able to match 4 phrases, Bird Brain will automatically start a new game with 7 new phrases.

DEFECT OR DAMAGE

If a part of your product is damaged or something has been left out, DO NOT RETURN THE PRODUCT TO THE STORE. The store doesn't have replacement parts. Instead, write to us at:

TIGERELECTRONICS, INC. REPAIR DEPT.
9800 Woodlands Parkway,
Vernon Hills, Illinois 60061, U.S.A.

In your note, mention the name of your product, product's model number, and tell us briefly what the problem is. Also, include sales slip, date, place of purchase, price paid, and your return address. We will do our best to help.

90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$13.00 for each Bird Brain™ unit sent. Payments must be by check or money order payable to Tiger Electronics, Inc.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATION OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above ~~limitations and/or exclusions of liability~~ may not apply to you: This warranty gives you specific rights, and you may also have other rights which vary from state to state.

® , TM , & © 1997 Tiger Electronics, Inc.
All Rights Reserved
980 Woodlands Parkway
Vernon Hills, Illinois 60061, U.S.A.

7546001IWTIE-01