

M-6068110100

 
 
 
 


Ages 2 & Up
8154




Talking Vehicles

Thank you for choosing
this friendly
Bob the Builder vehicle!

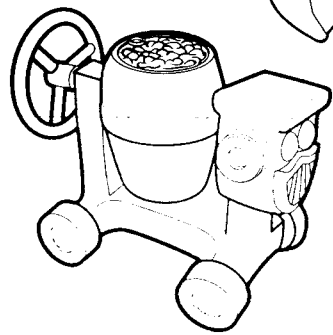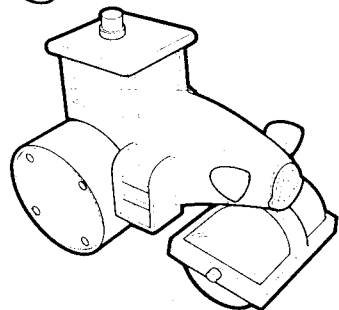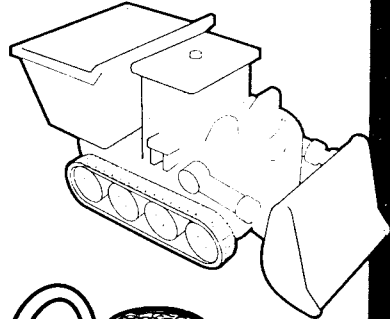
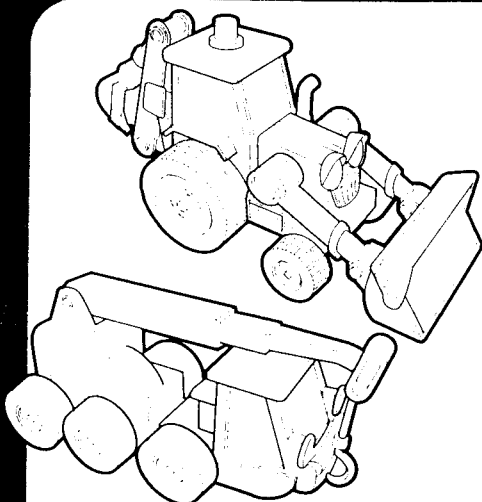


Includes 3 A76 button-cell batteries. Phillips screwdriver (not included)
required for battery replacement.


 
TO INSTALL NEW BATTERIES

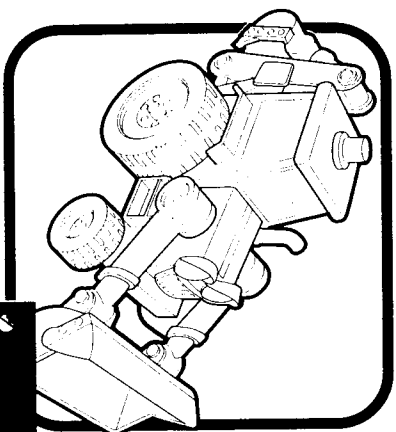



Scoop

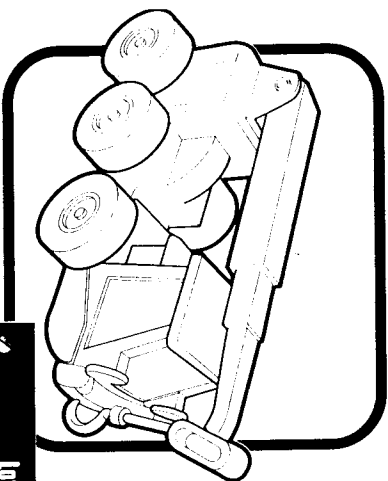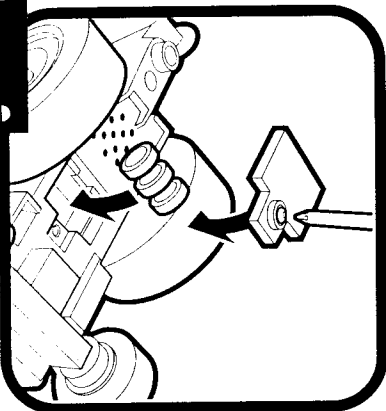  



Lofly

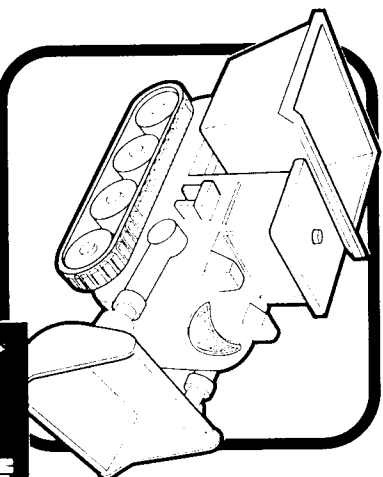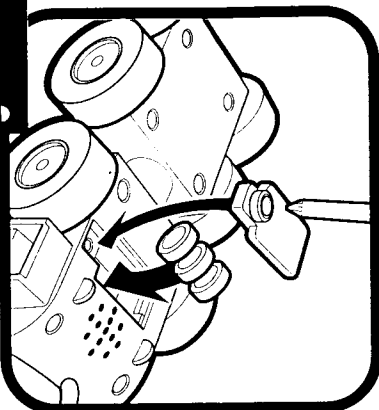  


Muck

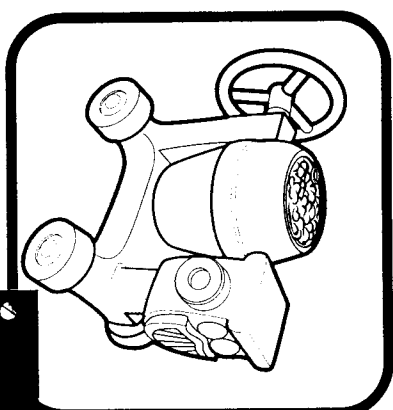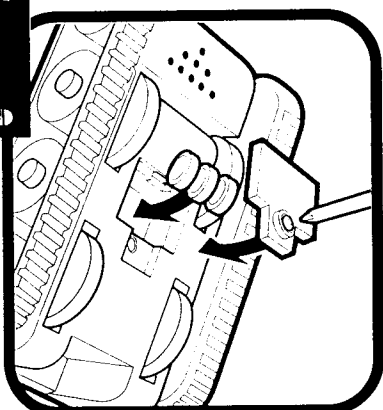  

Dizzy

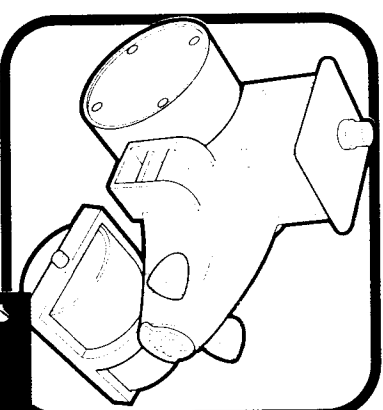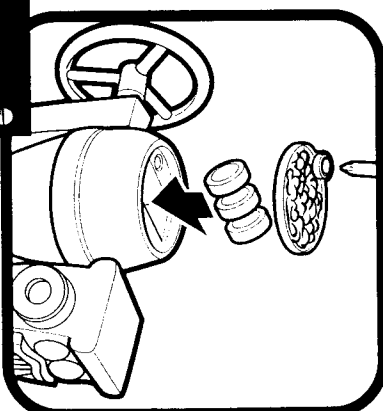  

Rolley

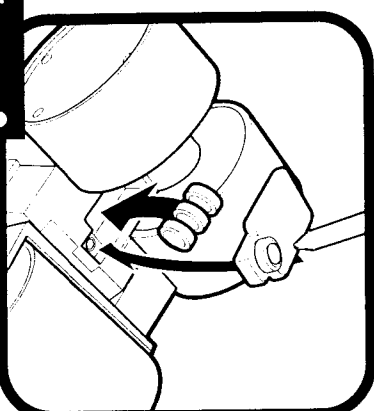 

1. With Phillips screwdriver, loosen screw in battery compartment door. Remove door (screw remains attached to door).
2. Discard old batteries. Insert 3 fresh A76 (or LR44) button cell batteries into the compartment as indicated inside. Replace door and tighten screw.

CAUTION:

- 1) As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
- 2) Make sure the batteries are inserted correctly and follow the toy and battery manufacturers' instructions.
- 3) Do not mix old and new batteries, alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.