 
Includes 2 "AA" batteries.

To replace batteries:



2. Remove exhausted batteries and replace with 2 new "AA" batteries.

Replace battery box and battery cover, and tighten screw. Close back seam.

CAUTION: TO AVOID BATTERY LEAKAGE

 Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;

 Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;

Always remove weak or dead batteries from the product.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Adult should remove and discard plastic fasteners.

REG. No. PA-282. All new materials. Stuffed with 100% polyester fiberfill. Surface washable only.

© HIT Entertainment PLC and Keith Chapman 2001.

*®, TM & © 2001 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

MADE IN CHINA C-078A

TM & © denote Reg. U.S. TM & Pat. Office.



