

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including any interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

SURFACE WASHABLE ONLY.
Product and colors may vary.



Boohbah programs, characters and logo
© Ragdoll Limited 2004. Boohbah word,
characters and logo are trademarks of
Ragdoll Limited. © Ragdoll Limited 2004.



®* and/or ™* & © 2003 Hasbro. All Rights Reserved.
© denotes Reg. U.S. Pat. & TM Office.
06416 P/N 6323370000

PLAYSKOOL.COM
FOR NEW PRODUCTS AND OFFERS

Questions? Call: 1-800-PLAYSKL

AGES 2+

06416

 
Boohbah™

PLAYSKOOL

Dance Along™ *

Boohbah™

Thank you for purchasing this PLAYSKOOL toy! Please keep these instructions for future use.

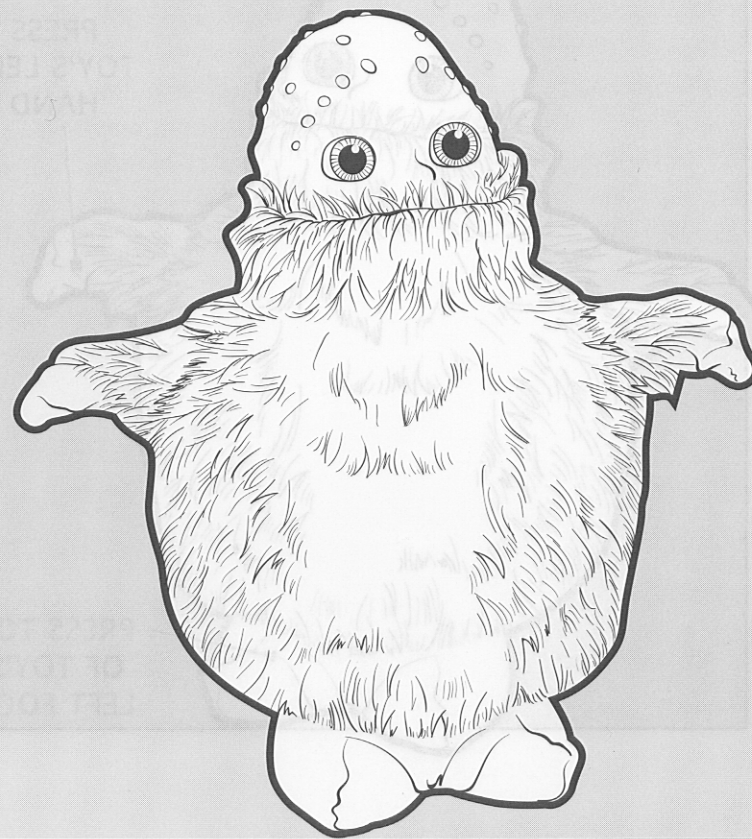


TO ACTIVATE

This Boohbah is a soft, cuddly friend who makes silly sounds, music and movements.


1. Press the toy's left hand to start "demo" mode
2. Press the toy's left foot to enable a full range of motion, music and sounds.

 After several seconds of non-activation, Dance Along™* Boohbah™ will make a sound to encourage children to continue play. If not reactivated, the toy will automatically turn off. To continue play, press Dance Along™* Boohbah™ left hand for demo mode, or left foot for full play.

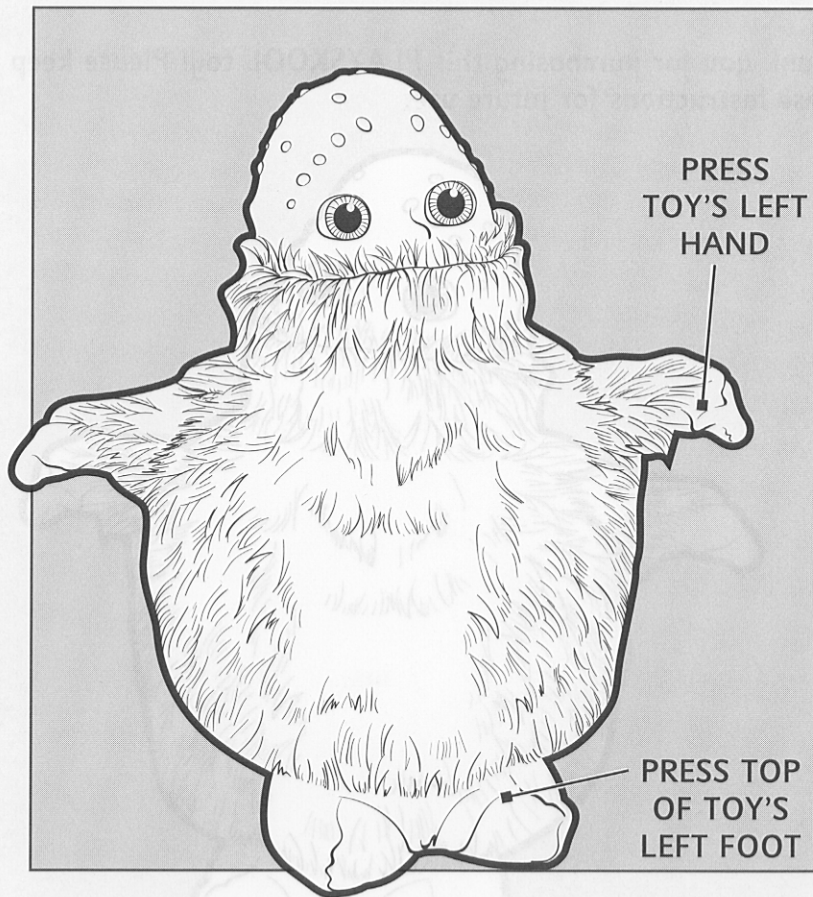

TO REPLACE BATTERIES

 With Phillips screwdriver (not included), loosen screw in battery door, located under the toy's feet, and remove cover. Discard exhausted batteries. Replace with 3 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace cover over batteries and tighten screw.

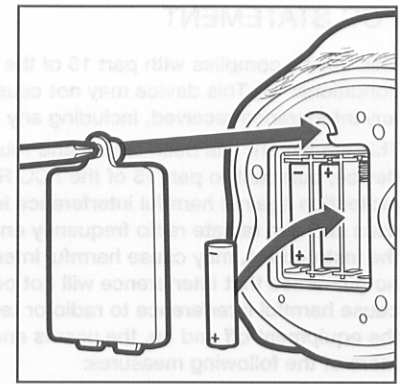

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from the other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**