


# BUCKY O'HARE™


# TOAD DOUBLE BUBBLE™ INSTRUCTIONS

Contains: Double Bubble vehicle, 2 canopies, 2 gripper claws, 2 side guns, 2 spring-back cords and 2 label sheets.


Remove all pieces from plastic frames. If you have difficulty, use safety scissors.

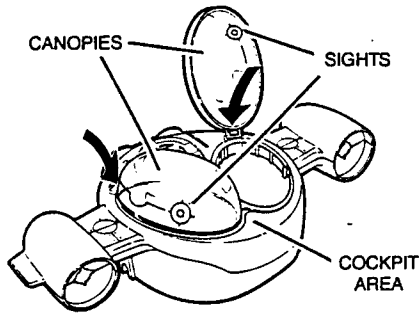


1) Snap left and right canopies into cockpit areas as shown. NOTE: Make sure sight on each canopy faces outward as shown.

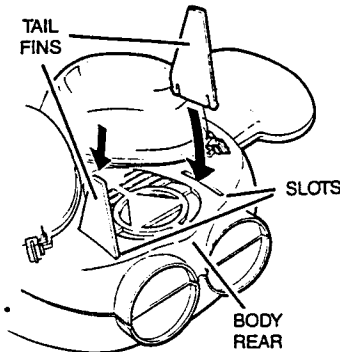


2) Snap tail fins into slots in body rear.

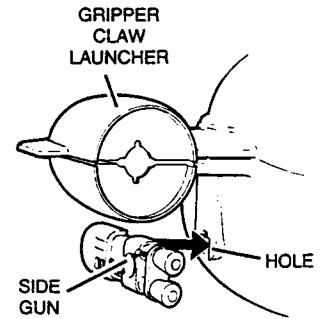


3) Snap side gun into hole underneath gripper claw launcher. Repeat for other side gun.

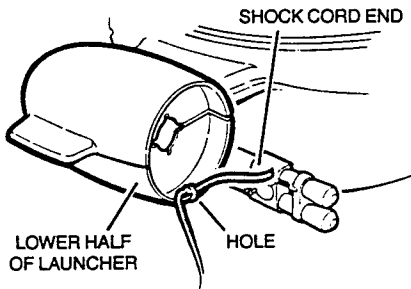


4) Fit one end of shock cord through hole in lower half of launcher. Tie a knot to secure. Repeat on other side.

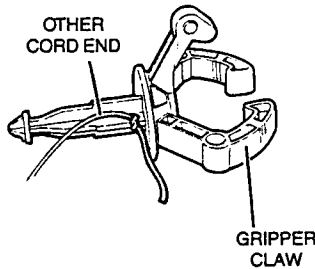


5) Fit other end of shock cord through bottom hole in gripper claw, then tie a knot to secure. Repeat for other shock cord.

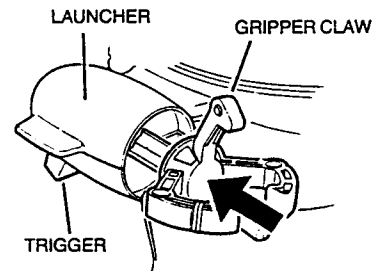

6) Fit gripper claw into hole in launcher and lock into firing position. To fire, pull back trigger located underneath launcher.

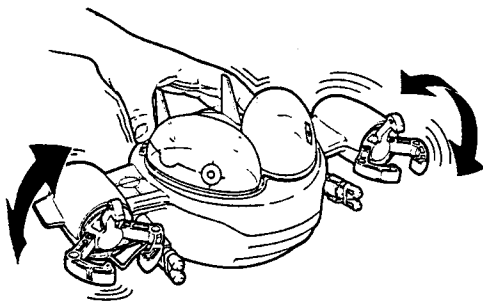

7) To hear "croaking" sound, tip the Toad Double Bubble from side to side as shown.

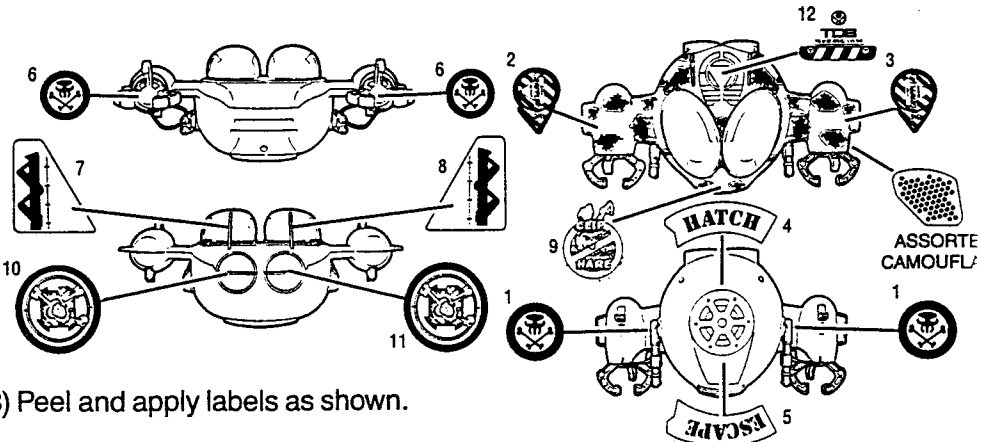

8) Peel and apply labels as shown.



Bucky O'Hare and its associated logo, characters, names and likenesses™/© 1991 Continuity Graphic Associates, Inc. All Rights Reserved.  
 Licensed by Abrams/Gentile Entertainment, Inc.  
 Instructions © 1991 Hasbro, Inc. All Rights Reserved.  
 Manufactured by Hasbro, Inc., Pawtucket, RI 02862 U.S.A.  
 Distributed in the U.K. by Hasbro (U.K.), a division of Hasbro Bradley U.K. Ltd., Caswell Way, Newport, Gwent, NP9 0YH.  
**MADE IN U.S.A.**  
 ® denotes Reg. U.S. Pat. & TM Office.  
 7288 P/N 42224300