





To Play with the Party Favor:

Ages: 3 & Up

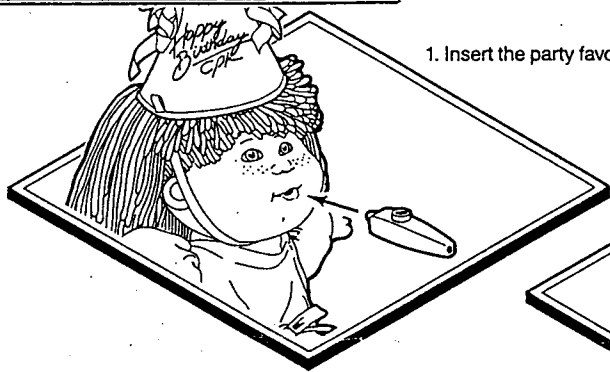

1. Insert the party favor into the BIRTHDAY 'KID's™ mouth.

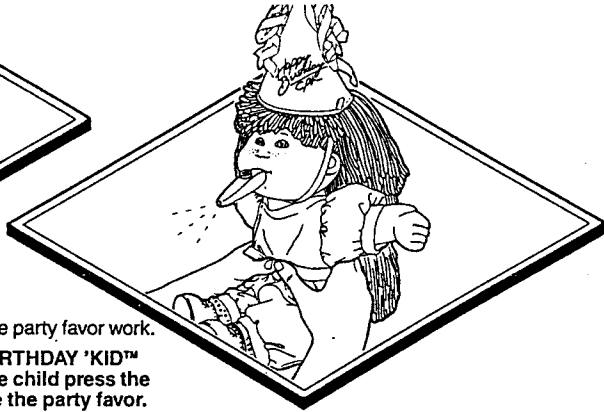

2. Squeeze the BIRTHDAY 'KID's™ stomach to make the party favor work.

Note: If a child's hands are too small to grasp the BIRTHDAY 'KID™ and squeeze the stomach at the same time, have the child press the stomach with the palm of his or her hand to activate the party favor.

Note: Squeeze the stomach harder to make the party favor work better.

Note: Wait one or two seconds between squeezes. This pause helps the party favor work better by allowing the mechanism to recover and refill with air.

Warnings:

- 1. Do not immerse the BIRTHDAY 'KID™ in water, as this may damage the mechanism.
- 2. Do not place anything except the party favor into the BIRTHDAY 'KID's™ mouth.
- 3. Do not place the BIRTHDAY 'KID™ near open flames, such as birthday candles, without parental supervision.
- 4. Do not try to use any bubble blowing devices with the BIRTHDAY 'KID™, as this may damage the mechanism.

©Copyright 1990, ORIGINAL APPALACHIAN ARTWORKS, INC. ALL RIGHTS RESERVED. MADE UNDER LICENSE FROM ORIGINAL APPALACHIAN ARTWORKS, INC. Manufactured for Hasbro, Inc., Pawtucket, RI 02862 U.S.A. P/N 41789700

To Order a Replacement Party Favor:



If the party favor becomes lost or broken, you can get a new favor. Fill out the form below and mail it with \$2.00 (no cash or stamps, please) to:

Hasbro, Inc.  
Consumer Services Dept.  
P.O. Box 1990  
Pawtucket, RI 02862-9940

Please allow 3 weeks for delivery.  
(Please print clearly.)

Name \_\_\_\_\_  
 Address \_\_\_\_\_  
 City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_  
 Telephone Number \_\_\_\_\_

Check the party favor you want:

#415500 Party Horn

#415506 Party Blower

#415503 Party Kazoo