



MY OWN BABY

INSTRUCTIONS

PLEASE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

 
 
ADULT REQUIRED FOR BATTERY INSERTION.

What's Needed: Phillips® Screwdriver, 3 "AA" batteries, one 9-volt battery.
(Note: Alkaline batteries recommended.)

TO INSERT BATTERIES . . .



Into My Own Baby

Open zipper on baby and pull back sides to gain access to battery compartment. With Phillips® screwdriver, remove screw and cover from compartment. Insert 3 "AA" batteries as shown in battery compartment diagram. Place cover onto compartment and secure with screw.

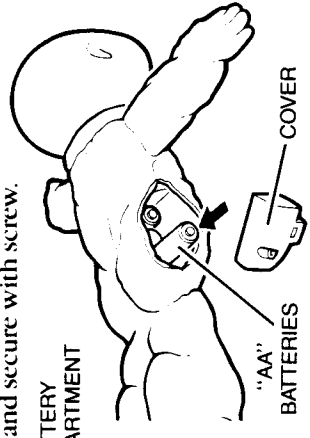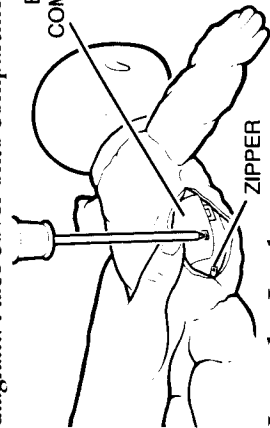

Into the Locket

  Remove screw from locket and remove locket cover. Line up and press together 9-volt battery contacts and clips. Fit battery into compartment, then place cover on locket and secure with screw.

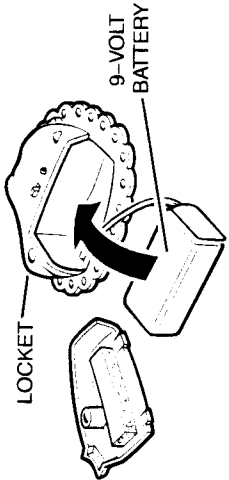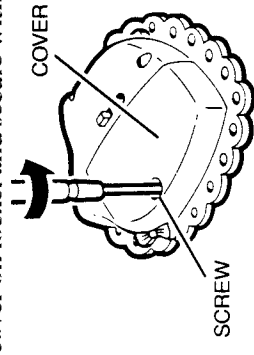

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Never mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Always remove exhausted or dead batteries from the product.

PROBLEM CHECKLIST

For best performance, temperature of Baby must be between 45° and 110° F.

Problem: Baby will not make happy sounds.

What to do:

- A) Make sure pacifier is out of Baby's mouth.
- B) Make sure locket is on (LED is lit).
- C) Make sure locket is within 2 1/2 feet of Baby.
- D) Check or replace batteries in locket and Baby.

Problem: Baby will not cry.

What to do:

- A) Make sure pacifier is out of Baby's mouth.
- B) Make sure locket is off.
- C) Check or replace batteries in Baby.
- D) If locket is on, make sure it is out of working range.

Problem: Baby will not quiet.

What to do:

- A) Make sure pacifier is inserted all the way into Baby's mouth.

FCC STATEMENT

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to television or radio reception. It has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this toy does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet or circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you have any questions, comments, or need additional information concerning this product or its parts, please call Hasbro Consumer Service at 1-401-431-8697, Monday through Friday, 8:00 AM to 5:00 PM Eastern Time.

All written inquiries should be mailed to: Hasbro Consumer Service Department, P.O. Box 200, Pawtucket, Rhode Island 02862-0200

©Copyright 1991, ORIGINAL APPALACHIAN ARTWORKS, INC. MADE UNDER LICENSE FROM ORIGINAL APPALACHIAN ARTWORKS, INC. Manufactured for Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved. Made in China.

TO CARE FOR MY OWN BABY™

 

Baby can cry, become quiet, or make happy sounds.

Using the Locket

The locket is also a transmitter that sends a signal to a receiver inside My Own Baby™, causing baby to make happy sounds.

BABY MAKES HAPPY SOUNDS WHEN YOU . . .

1) Turn the on/off switch on so the LED lights; 2) make sure the pacifier is *out* of My Own Baby's mouth; and 3) move the locket to within 2 1/2 feet of doll.

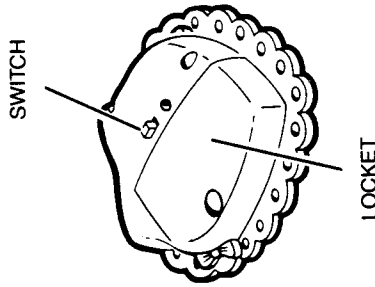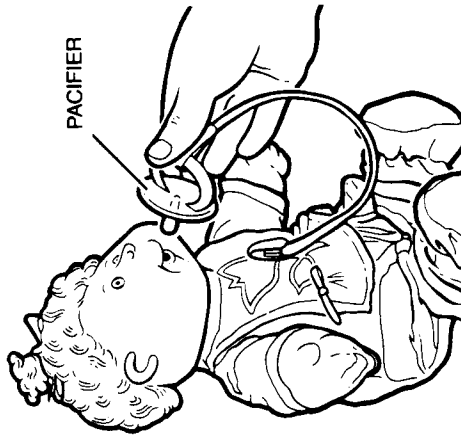

My Own Baby will begin to make cooing and giggling sounds. Baby will continue to make happy sounds as the locket gets closer.
Note: Working range of lockets will vary.

BABY WILL STOP COOING AND GIGGLING WHEN YOU . . .

1) Turn the locket off; or 2) move to a distance of about 8 feet or more away from Baby; or 3) place the pacifier in her mouth.
Turning the locket off or moving the locket out of working range will cause Baby to start crying. Placing the pacifier in her mouth will cause her to become quiet.

Using the Pacifier

My Own Baby can cry or become quiet when the locket is not in use.

BABY WILL CRY

when the pacifier is out of her mouth *and* the locket is either off or out of working range.

BABY WILL QUIET

when the pacifier is placed in her mouth.

MY OWN BABY USES RADIO SIGNALS TO WORK

The locket acts as a transmitter, sending radio signals to the receiver in My Own Baby. Interference to the signals may affect the toy's performance and can come from many sources, among them infant monitors, microwave ovens, TVs and radio control vehicles.

PLEASE NOTE:

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

ABOUT THE LOCKET CORD

The locket, which can be worn by the child, has a breakaway cord that comes apart when pressure is applied to help prevent a choking hazard. The cord can be easily reattached with the two snap-together clasps as shown.

Note: Cord ends must be connected with the clasps only. Do *not* cut or tie cord – the locket antenna is located within the cord and any disruption to it could cause faulty operation.



CLEANING AND STORING BABY

My Own Baby can be wiped clean with a damp cloth. Do *not* put her in water because of the batteries inside.
If Baby is not going to be used for an extended period, the batteries should be removed.