



Maximum Height of Child: 34"(864 mm)
 Maximum Weight of Child: 30 lbs. (14 kg)

Carry Lite Playard™

 
READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF PLAYARD.
 KEEP INSTRUCTIONS FOR FUTURE USE.

Dear Parent,

Thank you for purchasing this convenient, top quality Playskool product. The Carry Lite Playard is lightweight for easy carrying, and features quick set-up and compact fold-up. For baby's comfort, it has padded top rails, and a soft bottom pad with a cozy fabric sheet; for baby's protection, it includes locking legs to prevent accidental fold-ups. It's the Playard that makes traveling a treat!

If you have any questions, comments, or need additional information concerning this product or its parts, please call our Playskool Consumer Service hotline at 1-800-PLAYSKL (1-800-752-9755), Monday through Friday, 8:00 AM to 5:00 PM Eastern Time.

All written inquiries should be mailed to:
 Playskool Consumer Service Department, P.O. Box 200,
 Pawtucket, Rhode Island 02862-0200!

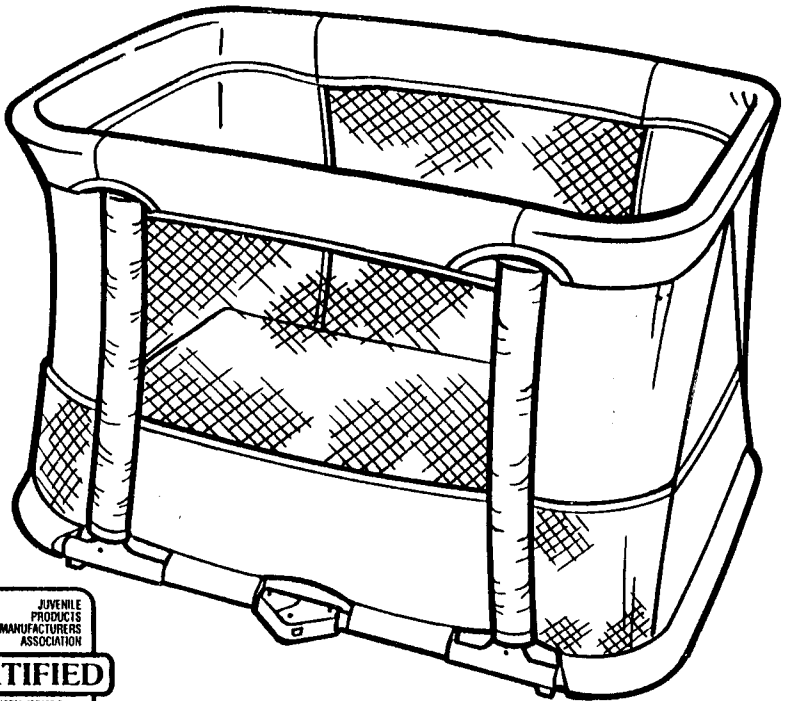

30202

TO OPEN PLAYARD...IS A SNAP!



1 Unfasten bottom strap and slide it out of buckle.

2. Unfold Playard.

Lift top rail and push all 4 legs out so that they snap into place. (Be sure to listen for the "snap" to ensure legs are locked.)

Note: If leg does not make an audible snap, check to see if fabric has bunched up on the inside of the leg where the locking mechanism is located (at pivot point on leg). Remove fabric from mechanism and push leg out until its snaps into place.

Important: All legs MUST BE LOCKED to ensure sides of Playard will not collapse and create a suffocation hazard. Test all 4 legs to be sure they are firmly snapped into place by pushing in on the legs from the outside of the Playard.

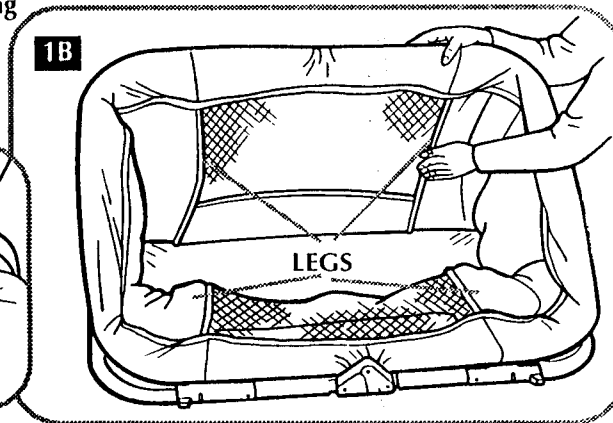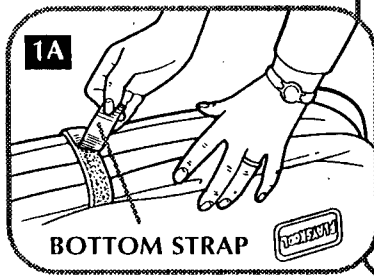


TO SECURE FABRIC SHEET TO PAD...

Remove sheet from polybag. Fit elastic corners of sheet over corners of bottom pad. Tuck in rest of sheet.

TO FOLD PLAYARD...

Press release buttons on legs to lower sides. (Marked circles on legs indicate where buttons are located.) Fold Playard in half. Thread bottom strap through and over buckle, then press strap ends together to fasten.

Caution: Always store folded Playard out of reach of children.

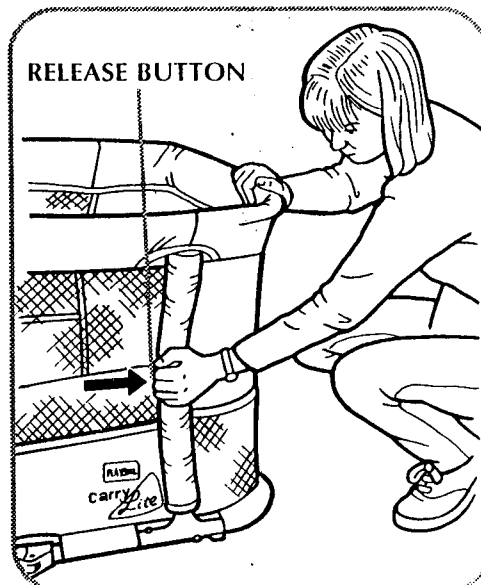

⚠ WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- The playard, including legs, must be fully erected prior to use.
- Make sure locks are secure.
- **SUFFOCATION HAZARD:** To help prevent suffocation from entrapment, use only the pad/mattress provided by the manufacturer. Never use additional mattress or padding.
- **DO NOT** add padding or other objects inside the playard that will permit your child to climb out.
- Use only with one child who is unable to climb out of the playard and is less than 34 inches (864 mm) tall, and weighs less than 30 pounds (14 kg).
- Never leave your child unattended.
- Strings can cause strangulation. **DO NOT** place items with a string around a child's neck (such as hood strings, pacifier cords, etc.). **DO NOT** suspend strings over the playard, or attach strings to toys.
- **DO NOT** place the playard near a window where cords from blinds or drapes may strangle a child.

 
 
CAUTION:

- Store folded playard out of reach of children.
- Do not place playard near stoves, heaters and other safety hazards.
- Discontinue use if child is able to climb out or reaches a height of 34 inches (864 mm).
- Clear area of objects before placing playard on the floor or ground.
- Do not place playard on damp grass.

BEFORE SETTING UP PLAYARD...

To avoid damaging the bottom of the playard, be sure to clear the area of objects before setting up the playard. If you are using the playard outside, place it in a smooth, dry grassy area and carefully check to be sure the area is free of broken glass, branches, rocks and other debris.

**USE THE SHOULDER
STRAP TO CARRY
PLAYARD...**

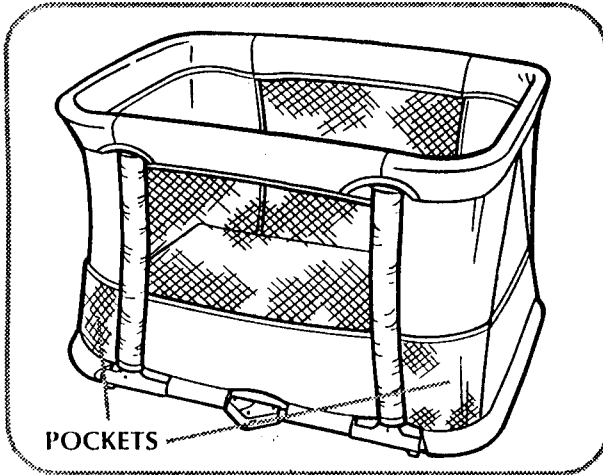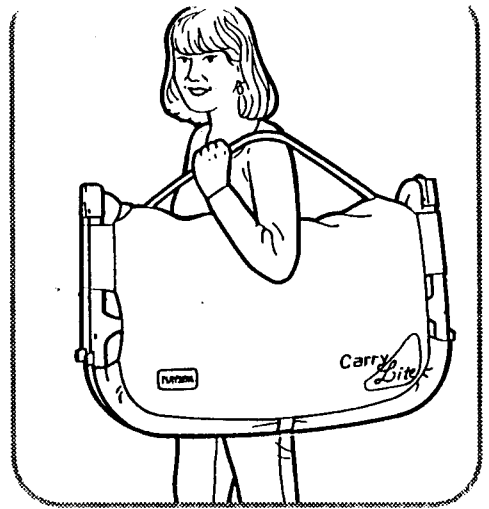

**STORE ACCESSORIES
in the 6 mesh pockets
located on the ends of
the playard.**

TO CLEAN PLAYARD

All parts of the Playard are surface washable. Fabric is water resistant only. Wipe clean with a damp cloth and mild detergent. Do not use abrasives or solvents. Sheet is machine washable and dryer safe. Remove sheet from bottom pad and machine wash on gentle cycle, with cold water and mild detergent. Tumble dry on low heat setting. Note: Bottom pad is permanently attached to Playard.

MAINTENANCE NOTES

- If exposed to inclement weather, Playard should be wiped dry with a soft cloth.
 - Periodically check Playard for torn material, improperly working parts and loose floor pad. NEVER use Playard if parts are missing or broken.
- Call 1-800-752-9755 with questions about the Playard.

© 1996 Hasbro, Inc., Pawtucket, RI 02862. All Rights Reserved.
U.S. Patent Pending.

MADE IN CHINA. 30860 30861 30862 P/N 47179400



Questions? Call: **1-800-PLAYSKL**™