

# CAESARS PALACE

## SPIRIT OF '76 SLOTS

### INSTRUCTIONS

#### 1. CAESARS PALACE HOUSE RULES

Icons are based on an American Spirit of 76 theme: BARS (single, double, triple), SEVENTY-SIXES (76's), and STARS.

This is a PROGRESSIVE slots game, which means that the jackpot accumulates with game play. The jackpot is 3 SEVENTY-SIXES (76's) or 3 STARS and starts at \$100,000. Whatever money is bet is added to the jackpot—until somebody spins 3 SEVENTY-SIXES or 3 STARS—and then they win the \$100,000 plus all the money bet to date!!! The jackpot continues to grow and increase until it is hit, and then resets back to \$100,000.

Payout on all spins is on the center line only. Payouts are based on winning combinations as described in the payout chart below. A winning combination is three of the same icons in a row (on the center line only) or any 76 on the center line.

Your "Spirit of 76" is a \$5 slot machine. (Each coin is worth \$5.) Maximum bet is 3 coins. Although you can bet either 1, 2 or 3 coins, you can only win the PROGRESSIVE JACKPOT when you take the big gamble and bet the maximum 3 coins!

When you play, you'll even hear the sounds of coins being inserted and game winning melodies!

#### 2. HOW TO PLAY



##### ON/OFF

- to turn on the unit.
- to turn off the unit.

##### SOUND

- to control sound: on or off.

##### BET

- to bet a coin. Each press of the BET button will bet another coin, with a maximum of 3 coins.

##### MAX BET

- to automatically bet the maximum of 3 coins and the wheels will spin automatically.


##### SPIN

- to spin the wheels of the slot machine after making your bet (after inserting coins).

##### ACL/RESET

- press if unit malfunctions or if you want to reset your winnings back to \$1000 and the progressive jackpot back to \$100,000.


Press the ON button to turn on the game. The maximum amount won on your unit is displayed. When you are playing for the first time, you begin with \$1000.

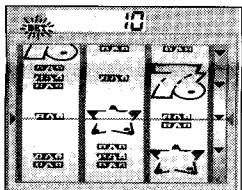


The word, **BET** will flash on screen. Then place your bet by pressing the **BET** button.

Each time you press the **BET** button, you insert a \$5 coin. (This is a \$5 machine, so each coin is worth \$5.) You can bet a maximum of 3 coins (\$15) by pressing the **BET** button three times. Whatever you bet is automatically subtracted from your score.

Payouts greatly increase with 3 coin bets!

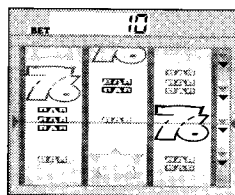


After you place your bet, press the **SPIN** button to spin the wheels of your slot machine.

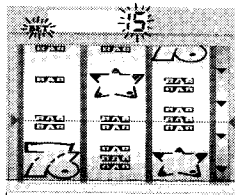

If you want a faster game, press the **MAX BET** button when **BET** flashes on screen. Then you will automatically bet the maximum 3 coins (\$15) PLUS the slots will spin automatically!

When the wheels of the slot machine stop spinning, you will see if you won. Winnings are based on the payout chart below. When you win a spin, you will hear a "Winning" melody and the amount won is added to your score.

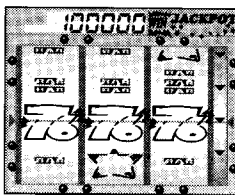

**IF YOU WIN THE PROGRESSIVE JACKPOT (\$100,000 PLUS WHATEVER MONEY HAS BEEN BET TO DATE), YOU WILL HEAR A VERY SPECIAL "WINNING" MELODY.**

Remember that this is a progressive slot machine. That means whatever is bet is added to the JACKPOT. If a player spins the JACKPOT (3 Seventy-Sixes or 3 Stars), then the player wins the \$100,000 plus whatever money has been bet so far! After a player wins the jackpot, the amount won is reduced back to \$100,000 but starts building again with the very next spin! But remember, you can only win the PROGRESSIVE JACKPOT when you take the big gamble and bet the maximum 3 coins!

After the spin is completed, and winnings are adjusted as necessary, the word **BET** appears on screen again—and it's time to place your bets (insert coin/coins) for the next spin!

Your slot machine has memory. So whenever you turn off the unit, your slot machine will store the amount you have won or lost. So when you turn your unit back on, you will resume play with the same amount of money you had when you turned off the unit.

You can always press the **ACL/RESET** button to reset your score back to \$1000 if you get tired of playing with your cumulative winnings. However, this will also reset the JACKPOT back to \$100,000.

If you run out of money, your score will automatically reset back to \$1000.

#### 3. PAYOUTS

Payouts are based on a winning combination of three of the same icon in a row at the CENTER LINE ONLY or any 76 on the center line. A 3 STARS JACKPOT ALSO WINS THE PROGRESSIVE BONUS!

	1ST COIN	2ND COIN	3RD COIN
3 SEVENTY-SIXES	500	1,000	100,000
3 STARS	100	200	1,000
3 TRIPLE BARS	50	100	500
3 DOUBLE BARS	20	40	75
3 SINGLE BARS	10	20	50
ANY 3 BARS	5	10	25
ANY 2 SEVENTY-SIXES	5	10	25
ANY 1 SEVENTY-SIX	2	4	6

When a player wins, they receive the dollar amounts listed above, but not the original amount bet, which is subtracted from their score when they bet (which is the way Las Vegas slot machines operate!).



#### 4. INSERTING THE BATTERIES

To insert the batteries, remove the battery compartment cover at the back of the game.


(To remove cover, unscrew the cover, then push the cover in the direction of the arrow.)

Insert two "AAA" batteries, LR03 or equivalent (included), making sure to align "+" and "-" as shown.

After battery insertion, the ACL/RESET button should be pushed only if the game doesn't work properly. Batteries installation should be done by an adult.

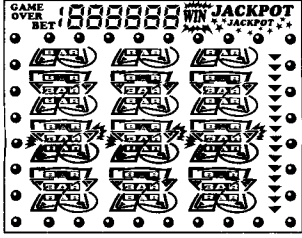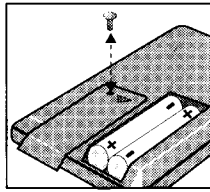


#### 5. CAUTION/DEFECT OR DAMAGE

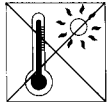


High temperature will destroy the unit. Do not leave unit in direct sunlight.



 Clean only with a piece of soft dry cloth.



 Do not press the liquid crystal display and avoid heavy shock or the display may fail.

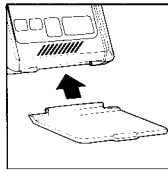

The keypad door on your game has been designed so that if it snaps off, it can be easily reattached without damage or breakage. If the door comes off, simply snap it back into place and continue enjoying your game.

Do not mix old and new batteries.

Do not mix alkaline, standard, or rechargeable batteries.

Do not use rechargeable batteries.

If a part of your game is damaged or something has been left out, DO NOT RETURN THE GAME TO THE STORE. The store doesn't have replacement parts. Instead, write to us at:

##### TIGER ELECTRONICS, INC. REPAIR DEPT.

980 Woodlands Parkway,  
Vernon Hills, Illinois 60061, U.S.A.

In your note, mention the name of your game, the game's model number, and tell us briefly what the problem is. Also include sales slip, date, place of purchase and price paid. We will do our best to help.

#### 6. 90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (TEI) warrants to the original consumer purchaser of any of its electronic games or toys that the product will be free of defects in material or workmanship for 90 days from date of original purchase.

During this 90-day warranty period, the product will either be repaired or replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase, or to TEI when returned prepaid and insured with proof of date of purchase.

Product returned to TEI without original receipt or after the 90-day warranty has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at our option) for a service charge of US\$12.00. Make check or money order payable to Tiger Electronics, Inc.

TEI will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

All product returned **MUST BE SHIPPED PREPAID AND INSURED FOR LOSS OR DAMAGE** to:

**Tiger Electronics, Inc. Repair Dept.**

**980 Woodlands Parkway,**

**Vernon Hills, Illinois 60061, USA.**

- 1) Pack the product carefully in the original box or use a good-quality carton with packing materials.
- 2) Include a letter with a complete description of the defect, a check if product is beyond the 90-day warranty, and your printed name, address and telephone number.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damages resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

Caesars Palace is a trademark of Caesars World, Inc. and used under license from Caesars World Merchandising, Inc. This product is for entertainment purposes only. Any use for gambling or wagering is prohibited.

© Copyright 1995 Tiger Electronics, Inc.  
980 Woodlands Parkway, Vernon Hills, Illinois 60061.  
Tiger Electronics(UK) Ltd.  
Belvedere House, Victoria Avenue  
Harrogate, North Yorkshire HG1 1EL, England.

Printed in Hong Kong