

Automatically Rebuild it at the Touch of a Button!

Vehicle Owner's Manual

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:


- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including any interference that may cause undesired operation.

CAUTION: This vehicle is not recommended for children under the age of 8 years. Please read all instructions before operating this vehicle. Avoid hitting people, pets or furniture. Do not pick up vehicle while it is in motion. Keep hands, hair and clothing away from this vehicle when the power switch is turned "ON". Remove battery pack when vehicle is stored. Also remove transmitter battery. **AVOID TIRE CONTACT ON PAINTED OR VARNISHED SURFACES.** We recommend outdoor play with this vehicle.


BATTERY REQUIREMENTS/INSTALLATION FOR VEHICLE

To operate your vehicle, you will need a 6 Volt Rechargeable NiCd Battery Pack (sold separately). Follow manufacturer's charging instructions on the rechargeable battery pack. PLEASE NOTE: The battery pack will become hot during use, so care should be taken whenever you handle it.

1. Insert a large coin in battery compartment slot as shown, push in and down as you slide cover off. DO NOT PRY.

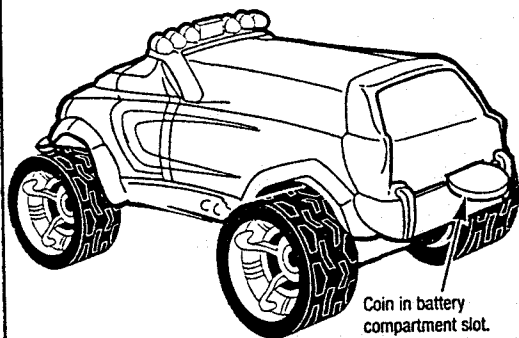


Coin in battery compartment slot.

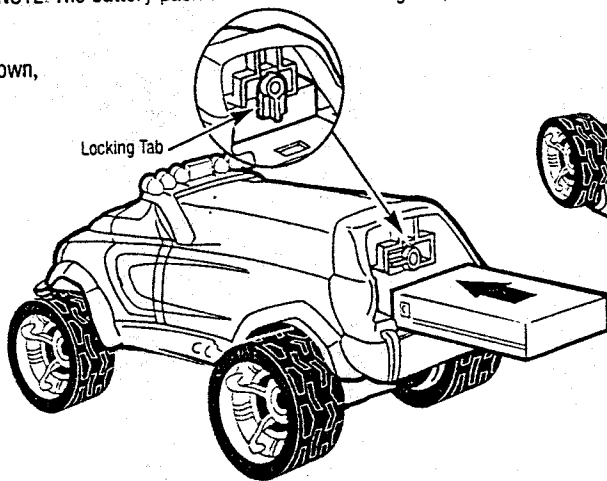

Locking Tab

2. Insert battery as shown. Turn locking tab. Replace cover.

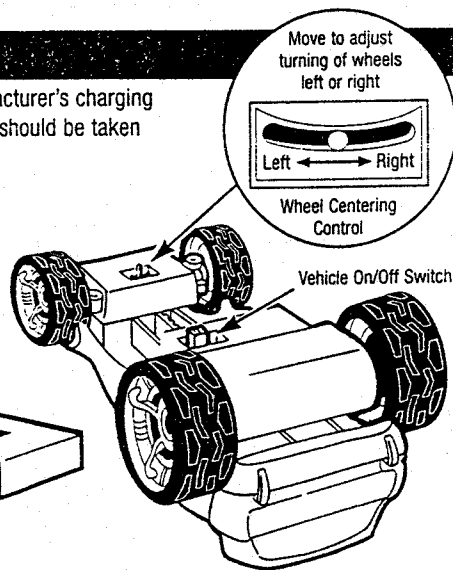

Move to adjust turning of wheels left or right

Left Right

Wheel Centering Control


Vehicle On/Off Switch

3. Move switch to ON position.

BATTERY NOTE:

After you have purchased a battery pack, please follow the manufacturer's instructions for use. Depending upon the type you choose, you should expect that the *initial charge might require 4 hours and last 8-10 minutes* in the intense operation of your Crashback™ vehicle. Each time you charge the battery, you should get longer performance as you "break in" your battery, until you enjoy operation that is up to twice as long as that of the initial charge.

BATTERY REQUIREMENTS/INSTALLATION FOR TRANSMITTER

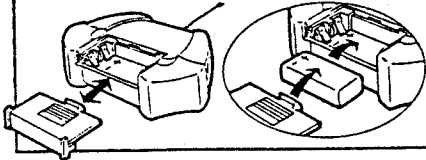

To operate your transmitter you will need a 9 Volt Alkaline Battery (sold separately). Remove battery cover as shown and install a new 9 Volt Alkaline Battery. Replace cover. Press either pad and the red LED light will come on. This will show you that the battery is good and the transmitter is ready for operation.

IMPORTANT: Main vehicle switch must be in the ON position to receive commands from the transmitter.

PROPER OPERATION AND STORAGE OF YOUR VEHICLE

1. **Best operation** of vehicle is on an OUT-OF-DOORS textured paved surface to avoid furniture damage and minimize noise level.
2. **Always** operate your vehicle within a range of 75 feet from you.
3. **Always** operate your vehicle on dry surfaces away from cars and other full-size vehicles.
4. **Always store your vehicle in a cool, dry place and off of painted or varnished surfaces.**
5. **Storage of vehicle.** Always turn main vehicle switch OFF after play and remove battery.
6. **Avoid** water or damp locations which may damage the vehicle's electronics. If your vehicle ACCIDENTALLY gets wet and stops running, let it dry overnight before trying to run it again.
7. **Avoid** operating around CB radios, baby monitors, cordless phones, electrical appliances, electric baseboard heaters, high voltage electrical wires and large, steel-reinforced concrete buildings, all of which may cause interference.
8. **Avoid** running your vehicle and another vehicle on the same frequency. If you want to race another vehicle, use a 27 MHz Crashback™ vehicle against a 49 MHz Crashback™ vehicle.




Kenner

© 1997 HASBRO, INC.
Pawtucket, Rhode Island 02862.
All Rights Reserved.

LABEL APPLICATION


LABEL APPLICATION

Apply labels using the numbers on the label sheet, the below illustrations and the package photograph as a guide.

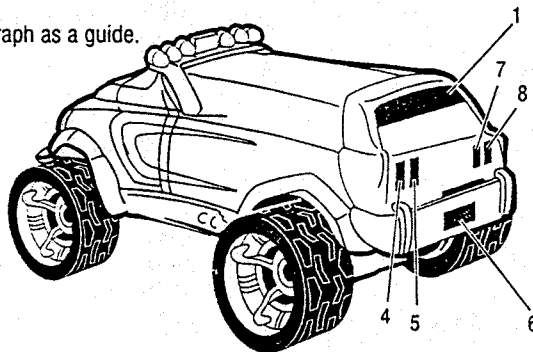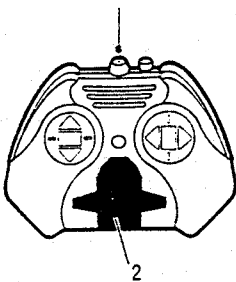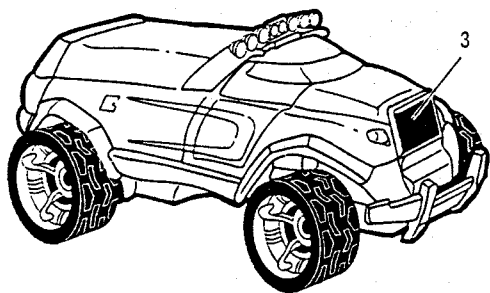


CRASH IT AND CRUSH IT

RAM IT!—Run it forwards or backwards into outdoor walls or barricades... CRASHBACK™ is TOTALLED! (The harder it hits – the more it compresses.)

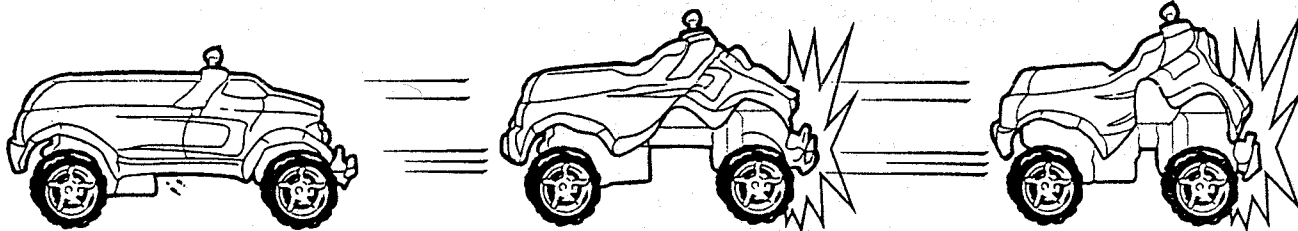


REBUILD IT!— Press and hold the extend button on the controller and CRASHBACK™ automatically repairs itself, stretching back to full length!

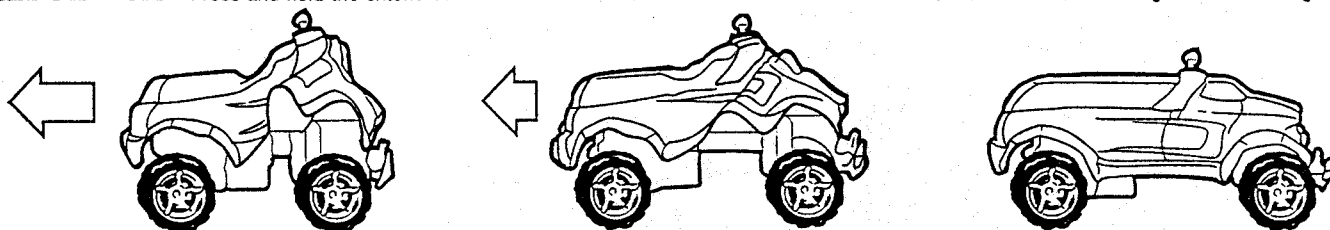


Then...**RAM IT AGAIN!**

DIRECTIONS

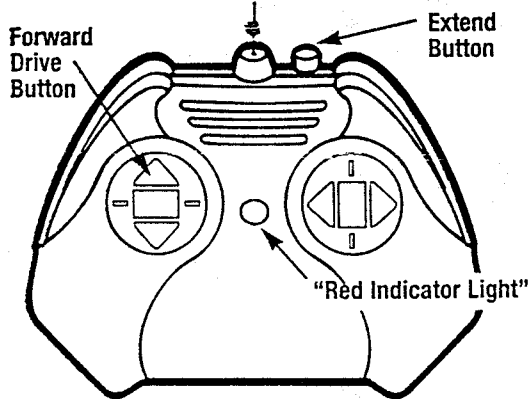

Press button(s) and vehicle will move in the direction indicated by the arrows. Press and hold the top extend button, as mentioned above, until the vehicle stretches back to full length.

FORWARD DRIVE
↑
↓
REVERSE

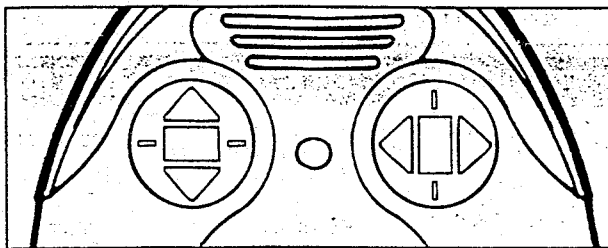

STEERING
← →
LEFT RIGHT

GUIDE FOR TROUBLESHOOTING - Check the points below if you are experiencing difficulty. Sometimes an apparent malfunction is the result of a simple cause and effect as shown below.

SYMPTOM

• PROBABLE CAUSE

* CORRECTION

Vehicle runs slowly or will not run.

- Main Vehicle switch not ON.
- Weak or uncharged 6 volt vehicle battery.
- Weak 9 volt controller battery.
- Using wrong transmitter.

- Check vehicle switch, must be ON.
- Charge battery or replace.
- Replace with fresh alkaline battery.
- Use correct transmitter.

Erratic operation or only short range possible.

- Radio interference likely.

- Change location (see point 7. PROPER OPERATION SECTION)

Short vehicle battery life.

- Initial charge will give 3 to 10 minutes of operation.
- Continuous use on rough terrain or steep hills.

- Recharge vehicle battery. Once drained the battery will have longer life with each recharging. About 15 minutes of life is typical with this type of radio controlled vehicle.
- Use on less severe terrain.