



Crawl Start™ Gloworm®


CAUTION: Hair entanglement may result if child's hair comes in contact with moving wheels of toy. Adult supervision is required.

Remove wire ties before giving toy to child.


Includes 3 "AA" batteries. Phillips screwdriver (not included) needed for battery replacement.

I. Choose mode with switch on bottom of Gloworm:

- Slide switch to  position for music & lights.
- Slide switch to  position for crawling, music and lights.

Note: The Gloworm toy comes packaged in the  (music & lights) mode.

To Replace Batteries: Use a Phillips screwdriver (not included) to loosen screw in battery compartment door. Remove door. Discard batteries. Insert 3 fresh "AA" alkaline batteries (not included). Replace door and tighten screw.

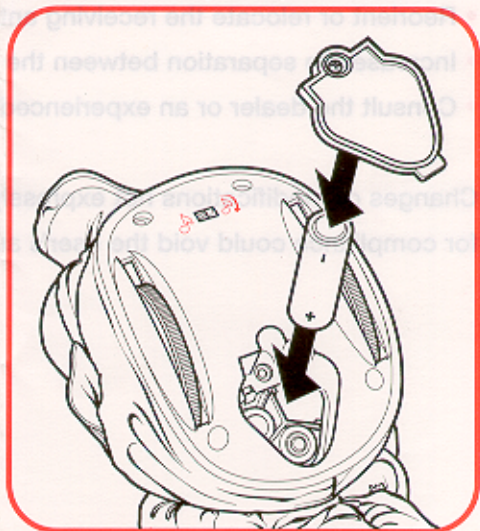

CAUTION:

TO AVOID BATTERY LEAKAGE

- 1) Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- 2) Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- 3) Always remove weak or dead batteries from the product.

PLAYSKOOL®



FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SURFACE WASHABLE ONLY

FILLING: ALL NEW MATERIALS: 100% POLYESTER FIBER **REG. NO. PA-282**

Product and colors may vary.

© 2000 Hasbro, Inc., Pawtucket, RI 02862 USA. All Rights Reserved.

® denotes Reg. U.S. Pat. & TM Office.

MADE IN CHINA.

P/N 4903740000