

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SURFACE WASHABLE ONLY.

© 2002 Hasbro. All Rights Reserved.
* denotes Reg. U.S. Pat. & TM Office.
6568/6580 Asst, 6569/6580 Asst. P/N 6194130000



OVER 12 months

 
6568/6580 Asst.

6569/6580 Asst.

Cushy Cruisin'™ Fire Truck Cushy Cruisin'™ Dump Truck

Thank you for purchasing this
PLAYSKOOL brand vehicle!

Includes 3 "AAA"/R03 (1.5V) batteries. Phillips/crosshead
screwdriver (not included) required for battery installation.

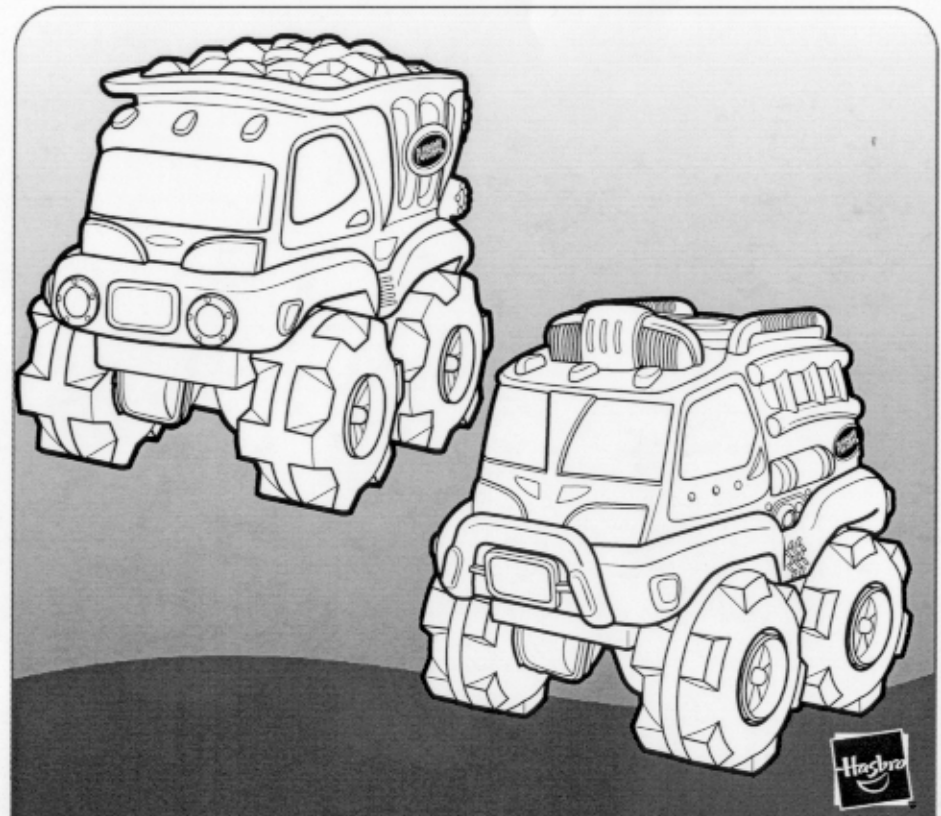

PLAYSKOOL.COM
FOR NEW PRODUCTS AND OFFERS

 
Questions? Call: 1-800-PLAYSKL



To Play

Let the fun times roll! Press or bump the license plate to hear vehicle sounds!


DUMP TRUCK

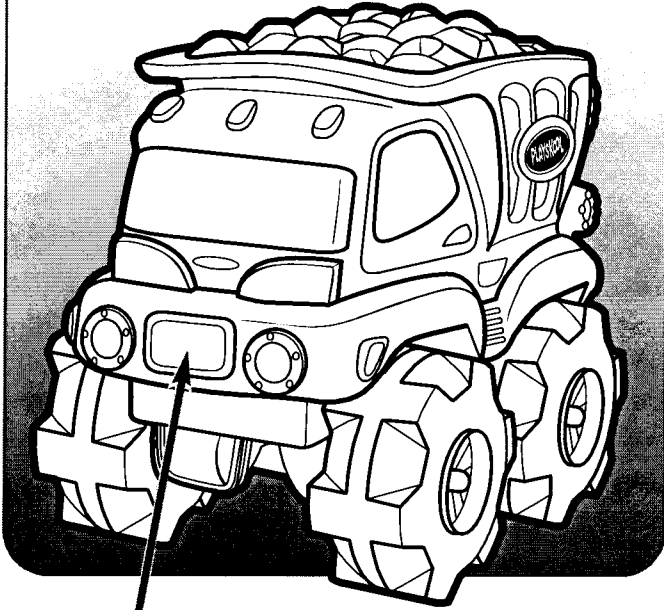

**Unique
soft-touch
design!**

**Easy
for toddler
to grasp
and hold!**

 
FIRE TRUCK

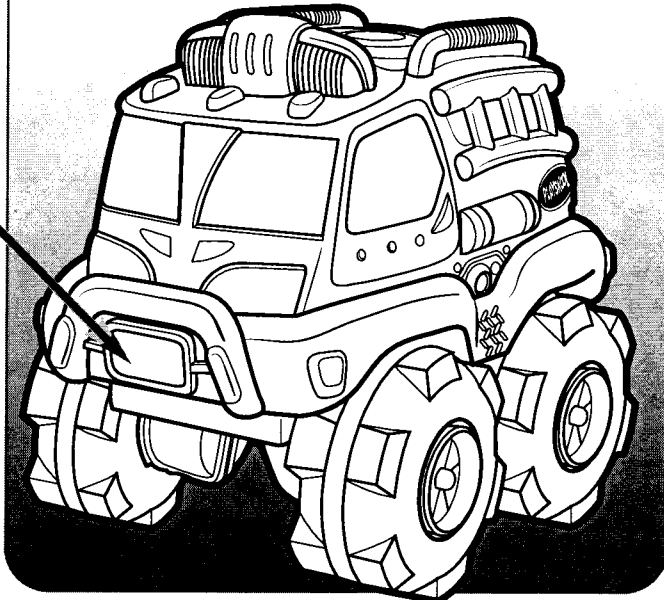

**Press the
license plate
to activate
fun sounds!**

To Install Batteries

 Using Phillips/crosshead screwdriver, loosen screw in battery compartment cover (screw stays attached to door). Remove cover. Remove and discard old batteries. Replace with 3 fresh "AAA"/LR03 (1.5V) alkaline batteries. Replace cover and tighten screw.

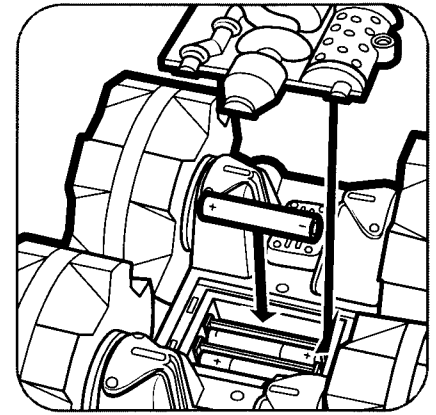

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and, in the U.S., have the doctor phone (202) 625-3333 collect, or, in Canada, have the doctor call your provincial Poison Control Centre.
2. Make sure the batteries are inserted correctly and always follow the toy and battery manufacturers' instructions;
3. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.
Batteries should be replaced by an adult.

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**