

CAUTION: This product cannot replace adult supervision of a child or frequent personal checking of a child.

30507



Deluxe Lullaby Monitor

Thank you for purchasing Playskool's Deluxe Lullaby Monitor, a fully portable monitoring system that also plays soothing lullabies for baby. Please read all instructions carefully before using this product. Save these instructions for future reference. If any problems arise, please refer to the Owner's Checklist. If you have any questions, comments, or need additional information concerning this product or its parts, please call our Playskool Consumer Service hotline at 1-800-PLAYSKL (1-800-752-9755), Monday through Friday, 8:00 AM to 5:00 PM Eastern Time.

All written inquiries should be mailed to: Playskool Consumer Service Department,
P.O. Box 200,
Pawtucket, Rhode Island 02862-0200



Questions? Call:
1-800-PLAYSKL™

INCLUDES: BABY UNIT, PARENT UNIT AND 2 ELECTRICAL ADAPTORS.

FOR PORTABLE MODE, MONITOR REQUIRES: ONE 9-VOLT BATTERY, 4 "AA" BATTERIES (ALKALINE BATTERIES RECOMMENDED) AND PHILLIPS SCREWDRIVER FOR BATTERY PLACEMENT.

IMPORTANT: BEFORE USING THE MONITOR, THE BABY UNIT MUST BE CHANGED FROM DEMONSTRATION MODE TO PLAY MODE. TO DO THIS, SLIDE THE SWITCH ON BACK OF BABY UNIT FROM "DEMO" TO "5 MIN" OR "15 MIN," DEPENDING ON HOW MANY MINUTES YOU WISH THE MUSIC TO PLAY.

(Please note that for your baby's listening comfort, the music volume is lower in play mode than in the demonstration mode.)

IMPORTANT: SOUND TRANSMISSION CHECK:

It is essential that you check the sound reception of this product before using it.

Sound transmission checks must be done on a regular basis.

To operate monitor, refer to instructions inside.


To properly test this system, one adult holds and moves the parent unit to various locations while another adult speaks into the baby unit from maximum range. If only one adult is able to perform this test, place a sound emitting device, such as a radio or ticking clock, near the baby unit, and move the parent unit to other areas in and around your home. Be sure to also check the sound activity lights. When sounds are being transmitted, the red sound activity lights work as follows: a single light will illuminate for softer sounds; the second and third lights will illuminate as the sounds become louder. (With the lullaby music on, a single light will illuminate. One or both of the other lights will illuminate when there is sound activity in the room in addition to the music.)

The baby unit is designed to detect normal sound levels within a 3-6-foot range.

This product is not designed to be used as a medical monitor. It is

important for adults to keep the parent unit within range of the baby unit at all times during use to detect normal sounds. Sound transmission should be checked before using monitor for the first time, and as often as possible thereafter. Always keep units out of reach of children.

The baby unit should never be placed in crib or playpen.

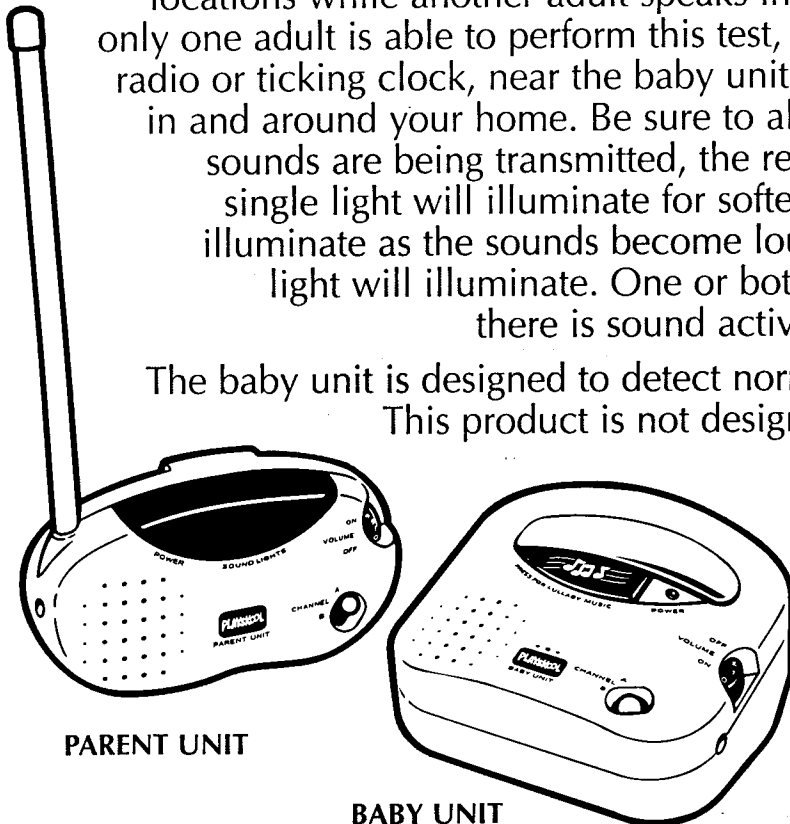

PARENT UNIT

BABY UNIT

HOW THE DELUXE LULLABY MONITOR WORKS


The baby unit is a transmitter that picks up baby's sounds and sends them by radio waves to the parent unit, which is a receiver. Through the parent unit, you can hear sounds coming from the speaker or see them with the sound activity lights. The baby unit also plays classic lullabies to soothe and delight your baby.

TO USE AC ADAPTORS FOR ELECTRICAL MODE

Use the interchangeable adaptors to operate the units on electrical power. Plug the jack connector on the adaptor into the jack in the unit. Then plug the adaptor into a standard 120V AC wall outlet.

Please Note:

- It is NOT necessary to remove batteries when operating the units in electrical mode. The batteries are automatically disconnected when the jack connector is inserted into the jack. However, please remember that you must remove the AC adaptors from the units to operate on battery power.
- You do not need batteries in the units to operate them with the AC adaptors.
- Do not use any adaptor other than the 2 included with the Deluxe Lullaby Monitor. Using other adaptors may damage the units. The included adaptors are to be used only with the Deluxe Lullaby Monitor.
- Do not use extension cords. • Plug the adaptors into standard 120V AC wall outlets only.

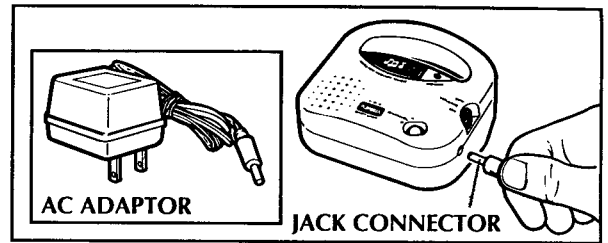

TO INSTALL BATTERIES FOR PORTABLE MODE


In the portable mode, each unit can operate on batteries, allowing for greater ease in moving units around. For your convenience, you can operate the clip-on parent unit on battery power, while operating the baby unit with an AC adaptor (or vice versa).

The parent unit requires one 9-volt battery; the baby unit requires 4 "AA" batteries (batteries not included; alkaline batteries recommended).

Note: Though the baby unit comes with 2 "AA" batteries for in-store demonstration, they should be replaced with fresh batteries (along with 2 additional batteries) as soon as you bring the unit home for full function of baby unit in portable mode.

For each unit, use a Phillips screwdriver to loosen screw in battery compartment cover. Remove cover. (For baby unit, remove insert in battery compartment.) Insert correct batteries into the battery compartment, as shown in the compartment. Replace cover and tighten screw.

Note: It is not necessary to remove the batteries when using the AC adaptors.

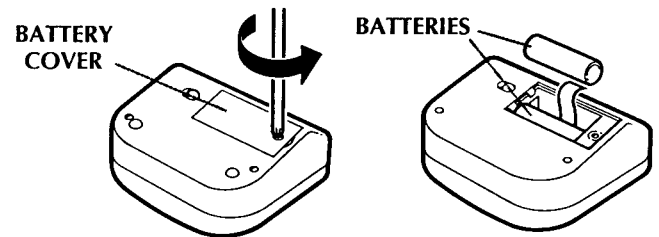

CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and follow the toy and battery manufacturers' instructions.
2. Do not mix old or new batteries, or alkaline, standard (carbon-zinc) or rechargeable batteries.
3. Always remove exhausted or dead batteries from the product.
4. Remove batteries if product is stored for a long period of time.
5. Alkaline batteries recommended.

TO OPERATE DELUXE LULLABY MONITOR


Baby unit:

- Turn the volume dial on to activate the baby unit. (green power light comes on when unit is activated.)
- Switch the channel selector to "A" or "B."
- Place the baby unit in the same room as baby, 3-6 feet away from the crib or play area, on a flat surface such as a table or bureau. **NEVER place the baby unit in the crib, play area or anywhere within a child's reach.**
- The front of the baby unit should directly face the crib or play area. Make sure the baby unit is not covered or obstructed from picking up sounds.

Lullaby Feature:

Note: It is not necessary to play the lullaby music while monitoring baby.

- If you have not already done so, slide the switch on back of baby unit from "Demo" to "5 min" or "15 min." These numbers indicate the number of minutes the music will play continuously. (The "Demo" position is for in-store demonstration purposes only.)
- After choosing the music time, press the music button. Turn the dial to adjust the music volume to a level that's suitable for baby and allows you to monitor sounds at the same time.
- It is important to note that the volume dial on the baby unit does not control the volume of the sounds being transmitted to the parent unit; it only controls the volume of the music.
- The unit will play 5 different lullabies continually. Each lasts about 20-40 seconds, and is then followed by a 2-3 second pause to allow closer monitoring of baby's sounds between songs.
- After 5 or 15 minutes (depending on the music time you selected), the music will shut off automatically.
- You may stop the music at any time by pressing the music button again. To restart the music, simply press the button and the music will play from the beginning of the time cycle you have chosen.

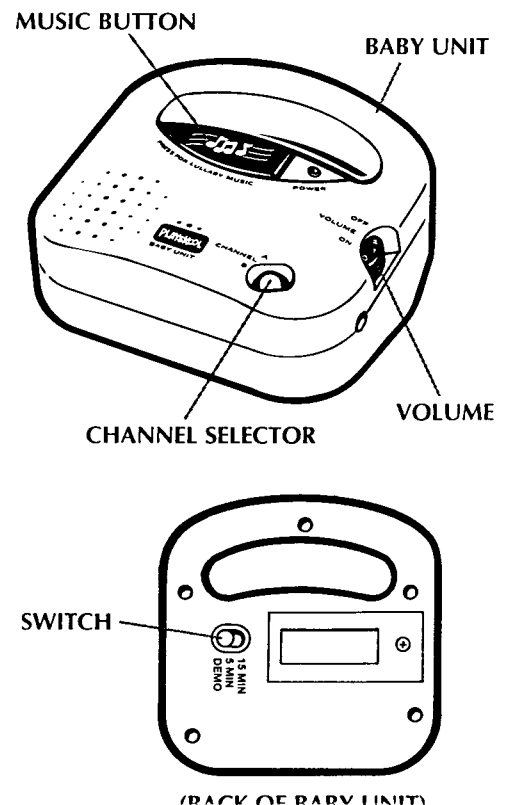


(BACK OF BABY UNIT)

TO OPERATE DELUXE LULLABY MONITOR (CONT.)

Parent unit:

- Turn the volume dial on to activate the parent unit. (The **green power light** comes on when unit is activated.)
- Switch to the same channel as the baby unit ("A" or "B"). Make sure the antenna is pointing up.
- Locate the unit near you, so that you can easily hear baby's sounds, and see the sound activity lights.
- Turn the dial to adjust the volume to a comfortable level. You should now be able to hear baby's sounds and "see" the sounds with the sound activity lights.
- The sound activity lights work as follows:
When sounds are being transmitted from the baby unit, one or more of the red lights will illuminate: a single light for softer sounds, and two or three lights for louder sounds, depending on the volume level. With the lullaby music on, a single light will illuminate. One or both of the other lights will illuminate when there is additional noise in the room.
- To ensure you are monitoring sounds correctly, see "IMPORTANT: SOUND TRANSMISSION CHECK" on front page.

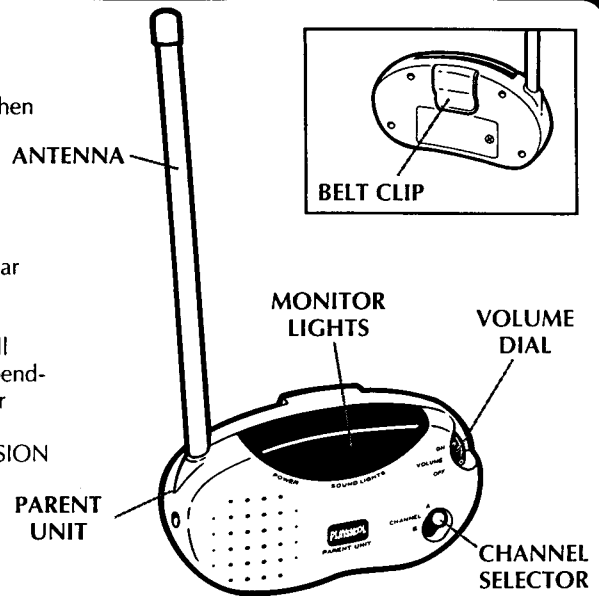

Note:

- * Always stay within range of the baby unit when using the Deluxe Lullaby Monitor.
- * When the parent unit is moved too far from the baby unit, lost or weak reception or interference will occur. When the parent unit is too close to the baby unit, feedback (shrill noises) occurs. Refer to the Owner's Checklist for instructions on how to correct these problems.
- * You may still hear baby's sounds even when the sound activity lights are not illuminated. If none of the lights appear when there should be sound indications, please refer to the Owner's Checklist for instructions on how to correct the problem. If all sound activity lights are illuminated and are not caused by baby's sounds or the lullaby music, please refer to the Owner's Checklist for instructions on how to correct this problem.
- * Both units must be on to transmit and receive sounds. Turn both units off when not in use.
- * Be aware that background noise in baby's room can diminish your ability to monitor baby's sounds, particularly when the music is at full volume. Turn the music volume down or off for closer monitoring of baby's sounds.

FREQUENCY

Both units should always be on the same channel ("A" or "B"). Make sure you check the channel every time you operate the monitor. We have installed two channels to help reduce noise interference, which results in static. This interference may occur from other devices that transmit through the public airwaves (for example, cordless telephones may disrupt the sound reception by transmitting on the same frequency). If noise interference occurs, simply switch the baby unit and parent unit to the other channel. If interference continues to occur, refer to the Owner's Checklist for further help.

If you have the parent unit clipped to your belt, you may encounter some interference as you move around the house.

SAFETY INSTRUCTIONS

- 1. READ INSTRUCTIONS:** Thoroughly read all safety and operating instructions before using the Deluxe Lullaby Monitor. Follow all warnings on the units and in the operating instructions.
- 2. SAVE INSTRUCTIONS:** Save all instructions for future reference.
- 3. NON-USE PERIODS:** When the monitor is not in use, unplug the A/C adaptors from the wall outlets and remove the batteries from the units until the monitor is ready to be used again.
- 4. WATER & MOISTURE:** Keep product away from water and moisture. The monitor should not be operated outdoors in damp or wet conditions. If the product comes in contact with water or any other liquid, turn the product off immediately and contact Playskool for servicing.
- 5. ADAPTOR CORD PROTECTION:** Make sure cords are free of any entanglements and are not in areas where people might come in contact with them.
- 6. HEAT:** Place the units away from heat sources such as radiators, stoves or other appliances that produce heat. Keep units out of direct sunlight.
- 7. VENTILATION:** Proper ventilation of the units and the adaptors must be maintained at all times. (For example, do not place the units on beds, sofas, rugs or similar surfaces that could block ventilation openings; do not place them in built-in installations such as bookcases or cabinets that could impede the flow of air through the ventilation openings.)
- 8. CLEANING:** Keep the units free of dust. Use a dry cloth when cleaning. Do not apply water or any other solvents.
- 9. POSITIONING:** Do not place baby unit in cribs, playpens, or anywhere within a child's reach. Keep adaptor cords out of a child's reach. Do not place the units or adaptors where a child could use them as a step.
- 10. SERVICING:** The user should not attempt to service this product beyond that described in the Owner's Checklist. All other servicing should be referred to qualified service personnel at Hasbro, Inc. Do not attempt to open the cabinet as shock hazard may result even after the unit has been unplugged.
- 11. PLUG ADAPTER INTO WALL A MINIMUM OF 24 INCHES AWAY FROM CRIB.** This precaution is recommended because all electrical appliances give off an electromagnetic field (EMF), and there is some speculation that an EMF may have potentially negative effects, even though this has not been scientifically proven.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

OWNER'S CHECKLIST

IMPORTANT: If you have any problems with this product, first check to see that:

- * Both units are on
- * Both units are plugged in and/or have good batteries
- * Volume is turned up on parent unit
- * Channels are the same on both units
- * Standard 120V AC wall outlet(s) functioning properly

PROBLEM	POSSIBLE REASON	CORRECTION
No sound (even with both units on)	Channels not at same setting Parent unit AC adaptor not properly connected to unit or wall outlet Baby unit AC adaptor not properly connected to unit or wall outlet Power to wall outlet is off Dead batteries	Check channels Check AC adaptor connection on unit Check AC adaptor connection on unit Turn on power to wall outlet Replace batteries
No sound activity lights (when there should be sound indications) Note: You may still hear sounds even if the lights do not illuminate.	The baby unit is too far away from baby The parent unit batteries are low	Move baby unit closer to baby Replace batteries
All sound activity lights are illuminated (with no sound indications)	Parent unit is on, and baby unit is off Parent unit is on a different channel than baby unit Parent unit is out of range of baby unit Baby unit batteries need to be replaced	Turn baby unit on Switch to same channel Move parent unit within range of baby unit Replace batteries
Power light is dim, flickering or not working	Unit is not on Parent unit AC adaptor not properly connected to unit or wall outlet Baby unit AC adaptor not properly connected to unit or wall outlet Weak or dead batteries	Check on/off switches on both units Check AC adaptor connection on unit Check AC adaptor connection on unit Replace batteries
Very weak reception	Out of range Weak batteries	Move parent unit closer to baby unit Replace batteries
Static, buzzing, interference, etc.	Interference from other nearby baby monitors, cordless telephones, walkie-talkies, etc. Interference from household appliances Out of range	Change frequencies on both units to the other channel Eliminate cause of interference Move parent unit closer to baby unit
Transmitting range is reduced	Unit(s) near heavy concentration of metal Antenna on parent unit covered Unit(s) lying on its(their) side Weak batteries	Test while moving units to different locations Remove obstructions Place unit(s) in proper position (see front illustration) Replace batteries
Feedback (shrill noises)	Parent unit too close to baby unit Volume too high	Move parent unit farther away from baby unit, then recheck sound transmission Lower the volume
Music will not play	Music button has not been pressed Music volume turned down (or dial in off position) Batteries weak or dead	Press music button Adjust dial to increase volume Replace batteries

This unit contains no user serviceable parts. If problem persists, please refer to warranty information.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ADDITIONAL PARENT UNITS

If you would like additional parent units for added convenience, you may purchase them by calling the Playskool Consumer Service Department toll-free at 1-800-PLAYSKL.

ONE YEAR WARRANTY

Hasbro, Inc. warrants to the original purchaser of this product that the product will be free of defects in material or workmanship for one year from the date of original purchase. If proved defective, it will be replaced, not necessarily with new product or new parts, or repaired at our option at no charge, if forwarded PREPAID to our Consumer Services Department during the warranty period. The address is:

Consumer Returns - Deluxe Lullaby Monitor
c/o Consumer Affairs
P.O. Box 1990
Pawtucket, RI 02862-9940

This warranty does not cover damage resulting from accidents, unreasonable use, neglect, improper service or other causes not arising out of defects in material and workmanship.

Hasbro, Inc. will not be liable for loss of the product or other incidental or consequential costs, expenses, or damages incurred by the original purchaser. Any implied warranties are limited in duration to the one year period from the original date of purchase. Any replaced or repaired product will not be subject to further warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Use only the adaptors supplied. Use of any other adaptors voids warranty. The electronic components are not designed for consumer repair. Evidence of any attempt at consumer repair will void the warranty. Please do not include batteries when returning the Deluxe Lullaby Monitor.

WARRANTY REGISTRATION

Please complete and mail this form to:

Consumer Returns - Deluxe Lullaby Monitor
c/o Consumer Affairs
P.O. Box 1990
Pawtucket, RI 02862-9940

Product Name _____

Date Purchased _____

Place of Purchase _____

Name _____

Address _____

City _____ State _____ ZIP _____

X_o