


# Datafun™

The Electronic Organizer For Anyone  
Anytime  
Anywhere

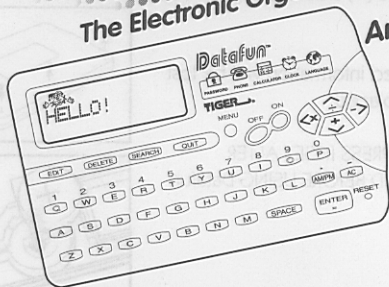

## INSTRUCTIONS

### Using Data Fun

DATAFUN keeps your secrets, tells you the time, and keeps names and addresses for you. In just a few moments, you can:



See the time of day, month and year with Datafun ....CLOCK.



Add, subtract, multiply and divide quickly and easily with Datafun ....CALCULATOR.



Keep 30 to 40 names, phone numbers and birthdays with Datafun ....FRIENDS and FAMILY.



 
Use a secret password to keep others from seeing your files with Datafun ....PASSWORD.



Choose English, German, French, or Dutch to "prompt" you with Datafun ....LANGUAGE.

### ON and OFF


When you turn Datafun "ON", a jester greets you and says "HELLO!"

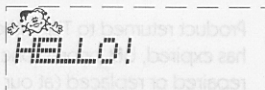

Your friend stays with you and points to the menu until you choose a file to use.



 And your friend says "BYE BYE!" when you turn "OFF" Datafun.

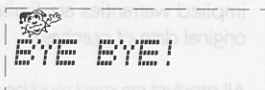

### SPECIAL DATAFUN KEYS AND HOW TO USE THEM...

- EDIT** Press **EDIT** when you want to change information on the screen. You then add or remove data using the keyboard.
- DELETE** Press **DELETE** to erase a blinking character, or to erase an item in Friends and Family file.
- SEARCH** Press **SEARCH** to look through a list.
- QUIT** Press **QUIT** to stop editing or reading a list and go back to the beginning of a file (or sometimes to the SELECT screen).
- MENU** Press **MENU** to jump right back to the SELECT screen (main menu).
- UP, DOWN, RIGHT, LEFT** Arrows Press keys to make words on screen move up or down or to move the blinking character right or left. Also, used by calculator to add (+), subtract (-), multiply (X) or divide (÷).
- AC** Press **AC** (all clear) to clear the calculator.
- ENTER** Press **ENTER** to make a selection when Datafun asks you to. For calculator, **ENTER** is the = (equal) sign.
- RESET** Use a ballpoint pen to press **RESET**. The screen will ask you if you want to CLEARALL Y/N?. Press **Y** if you want to clear all data or press **N** if you do not.

NOTE: You must press RESET before using Datafun for the first time and after battery replacement.

### SPECIAL WORDS AND WHAT THEY MEAN

- NOT FOUND** Information you are looking for is not in file.
- PROMPT** Word(s) on screen that ask you to do something.
- INVALID** Entered birth date in wrong format.
- END OF FILE** You have reached the last entry in file. Use **▲** to scroll back or press **QUIT**.
- ERROR** This means your calculation will not fit on screen, or the calculation is not a real number.

### AFFIXING DATAFUN TO CASE


To affix Datafun to the included protective case:

1. Before affixing Datafun, place unit on protective case and fold cover over the top of unit. The embossed Datafun logo on the cover should be facing up. This is the recommended placement for affixing.
2. Lift unit and peel the back off the double sided tape already affixed to the protective case.
3. Place unit on cover as done in step 1.
4. Press bottom of Datafun and back of cover firmly together.




### CHOOSING THE LANGUAGE FOR PROMPTS

Datafun lets you pick the language for prompts. You can choose English, German, French, or Dutch.

1. Press **MENU**.
2. Use **◀** and **▶** to choose the world symbol. World (  ) flashes.
3. Press **ENTER**.
4. Press **▼** repeatedly to find the language you want or press **▼** and 1 for English, 2 for German, 3 for French or 4 for Dutch.  
ENGLISH  
GERMAN  
FRENCH  
DUTCH  
ENGLISH
5. Press **ENTER**. You then return to SELECT screen using the language you've chosen.
6. To change the language, repeat steps 1 thru 5, and choose a different language at step 4.




### USING CALCULATOR

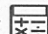1. Press **MENU**.
2. Use **◀** and **▶** to choose calculator (calculator  flashes).
3. Press **ENTER**. 0. appears on screen.  
Examples Key Sequence
4. **ADDITION and SUBTRACTION**  
8 3 3 - 364 = 469 AC 8 3 3 - 3 6 4 **ENTER (=)** 469  
1 2 3 + 6 7 8 = 801 AC 1 2 3 + 6 7 8 **ENTER (=)** 801
5. **MULTIPLICATION and DIVISION**  
1 1 x 7 3 = 803 AC 1 1 x 7 3 **ENTER (=)** 803  
1 2 ÷ 4 = 3 AC 1 2 ÷ 4 **ENTER (=)** 3
6. Press **AC** at any time to clear calculator. Press **MENU** or **QUIT** at any time to go back to SELECT screen.




### USING FRIENDS & FAMILY

#### STORING NAMES, PHONE NUMBERS, and BIRTHDAYS

1. Press **MENU**. SELECT screen appears.
2. Use **◀** or **▶** to choose Friends & Family (phone  flashes).
3. Press **ENTER**. NAME? appears.
  - a. When NAME? appears, type up to 12 letters/numbers/spaces for the person you want. Example: **ABRAHAM B.**
  - b. Press **ENTER**. TEL. NO.? appears.
  - c. Use 0-9, and **SPACE** to type the phone number you want. Example: 708 555 1212.
  - d. Press **ENTER**. BIRTH? MMDD appears.
  - e. Use 0-9 keys to put in month and day of a person's birthday. Example: 02 14 for February 14.
  - f. Press **ENTER**. Screen goes back to NAME?
  - g. Enter more names, phone numbers and birthdays as explained above.
4. Press **MENU** to go back to SELECT screen.


## LOOK UP YOUR LIST

1. Press **MENU**. SELECT screen appears.
2. Use ◀ or ▶ to choose Friends & Family (phone  flashes).
3. Press **ENTER**. NAME? appears.
4. Press **SEARCH** to see first name.
5. Press ▼ to see phone number and birthday of first person.
6. Press ▼ or ▲ to see other names, phone numbers and birthdays.  
NOTE: To find names fast, press first letter (example: **Z** for ZACK) or press keys for name (example **J O H N** for John). Then press **SEARCH**. DATAFUN goes right to the letter or name you want.
7. Press **MENU** at any time to go back to SELECT screen.




## PASSWORD GUARDS YOUR SECRET FILES

NOTE: Don't forget your password. If you do, you won't be able to look at any of your files. If you forget your password, press **RESET** to regain access files - all information previously stored will be lost. Write your password down in a special place.

1. Press **MENU**. SELECT screen appears.
2. Use ◀ and ▶ to choose the password symbol (padlock  flashes).
3. Press **ENTER**. PASSWORD? appears.
4. Press keys for four characters you want for your password. A star appears when each key is pressed. (Actual letters do not appear on screen)
5. Press **ENTER**.
6. When RETYPE? appears, type in your password again. (Datafun needs to double check your password.)
7. Press **ENTER**. ON/OFF/EDIT appears.
8. Use ◀ and ▶ to select: ON password must be used to enter your files.  
OFF password not used to enter files.  
EDIT to change your password. To cancel password, type in any four letters numbers. Press **QUIT**.
9. Press **MENU** to go back to **SELECT** screen.



## USING CLOCK


1. Press **MENU**. SELECT screen appears.
2. Use ◀ and ▶ to choose clock (clock  flashes).
3. Press **ENTER**. You see month, day, year and time on screen.
4. Press **MENU** to go back to SELECT screen.

### TO SET DATE/DAY/YEAR and TIME

1. Press **EDIT**.  
NOTE: If you are using the English language, the screen will read USA/EUROPE. Press **U** for USA format (MMDDYY) or press **E** for EUROPE format (DDMMYY).
2. Use ◀ and ▶ to choose:  
ENGLISH -USA time format (MM/DD/YY) or -EUROPE (DDMMYY)  
or  
GERMAN -TTMMJJ  
FRENCH -JJMMAA  
DUTCH -DDMMJJ
3. Press **ENTER** when you see correct format on screen.
4. To set month/day/year:  
ENGLISH-USA Press two numbers keys for month, press two number keys for day, and press two number keys for year. } Example: 120495 for December 4, 1995  
ENGLISH - EUROPE  
GERMAN } Press two number keys for day, } Example:  
FRENCH } press two number keys for month, and } 04 12 95 for 4 December, 4 1995  
DUTCH } press two number keys for year. }
5. Press **ENTER** to store data. TIME? HHMM shows on screen.
6. Press keys **0 - 9** (2 digits to set hours and 2 digits to set minutes). Press **ENTER**.
7. Press **AM/PM** to choose AM or PM, if applicable.
8. Press **MENU** to go back to SELECT screen.


## REPLACING THE BATTERIES

To replace old batteries, first turn the unit off. Have an adult help loosen the screws on the bottom cabinet. Remove the old batteries and replace with fresh ones, making sure that its positive (+) side is facing up. Replace the bottom cabinet and tighten screws.

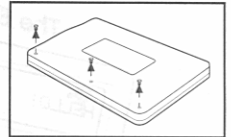

NOTE: All previously stored information will be lost when the batteries are replaced.

**IMPORTANT:** YOU MUST PRESS RESET AFTER REPLACING BATTERIES AND BEFORE USING Datafun FOR THE FIRST TIME.

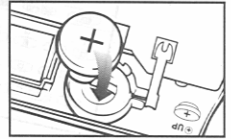

## TROUBLE SHOOTING

SYMPTOM	SOLUTION
Unit will not function after initial battery insertion.	<b>RESET</b> button on the front of the unit <b>MUST</b> be pressed before using for the first time.
Unit freezes or will not turn off.	Press the <b>RESET</b> button on the front of the unit.
The screen becomes dim, cursor movement slows or unit functions inconsistently.	Batteries require replacement.

## 90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (TEI) warrants to the original consumer purchaser of any of its electronic games or toys that the product will be free of defects in material or workmanship for 90 days from the date of original purchase.

During this 90-day warranty period, the product will either be repaired or replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase or to TEI when returned prepaid and insured with proof of date of purchase.

Product returned to TEI without original receipt or after the 90-day warranty has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at our option) for a service charge of US\$7.50. Make check or money order payable to Tiger Electronics, Inc.

TEI will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

All product returned must be shipped prepaid and insured for loss or damage to:  
Tiger Electronics, Inc. Repair Dept.  
980 Woodlands Parkway  
Vernon Hills, Illinois 60061 U.S.A.

1. Pack the product carefully in the original box or use a good-quality carton with packing materials.
2. Include a letter with a complete description of the defect, a check if product is beyond the 90-day warranty, and your printed name, address and telephone number.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damages resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

# TIGER

© 1996 TIGER ELECTRONICS, INC.  
980 Woodlands Parkway,  
Vernon Hills, Illinois 60061, USA.

© 1996 TIGER ELECTRONICS (UK) L.L.C.  
Belvedere House, Victoria Avenue,  
Harrogate, North Yorkshire, HG1 1EL

PRINTED IN HONG KONG