 


# Princess DATA PAD™

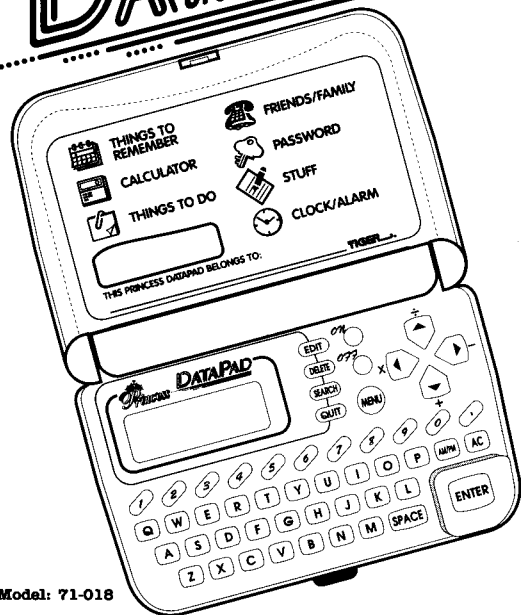

Model: 71-018

# INSTRUCTIONS

**TIGER** ELECTRONICS  
INC.®

TM & © are Trademarks of Tiger Electronics, Inc.  
© 1996 Tiger Electronics, Inc.  
980 Woodlands Parkway, Vernon Hills, Illinois 60061  
Tiger Electronics (UK) Ltd.  
Belvedere House, Victoria Avenue  
Harrogate, North Yorkshire HG1 1EL, England.  
PRINTED IN HONG HONG

71018IWTIE-1

# **Princess Data Pad...The organizer that's FUN & Functional!**

## **Contents**

A Quick Look at PrincessData Pad	p.2
How to Change the Batteries Without Losing Your Stuff	p.3-5
The Buttons You Will Use	p.6-7
Features:	
Clock/Alarm	p.8
Things to Remember	p.9
Calculator	p.10-11
Things to Do	p.12
Friends & Family	p.13-14
Password	p.15-16
Stuff	p.17
Trouble Shooting	p.18
Cautions	p.19
Defect or Damage	p.19
Warranty	p.20-21

## A Quick Look at Princess Data Pad



This is the **THINGS TO REMEMBER** list. You can save dated messages of fifteen characters each.



This is the **CALCULATOR**. You use the number keys, arrow buttons for functions, SPACE or AC for CLEAR and ENTER for the EQUAL SIGN.



This list is **THINGS TO DO**. You can save messages for an exact time and date.



This list is **FRIENDS & FAMILY**. You can save the names, phone numbers and birthdays of special people.



This is your **PASSWORD**. You can create a four character password to protect your files from nosy people.



This list is for other **STUFF**. You can save one list that holds up to fifty characters.



 
This function lets you set the **CLOCK**, and/or **ALARM** and change them both.

## How to Change the Batteries Without Losing Your Stuff


The Princess Data Pad has main batteries and a backup battery. The main batteries are two AAA batteries that must be installed before you can use Princess Data Pad. The backup battery is a CR2032 "button cell" battery about the size of a nickel. It provides power to hold your information if the AAA batteries discharge completely. Never remove all of the batteries or all of your information will be erased!

### Replacing the Main Batteries


With your parents help, open the battery compartment door using a phillips blade screwdriver.

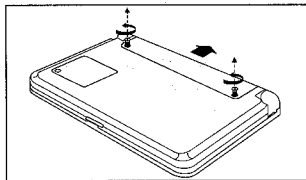

 
Slide open the cover to expose the AAA battery compartment.

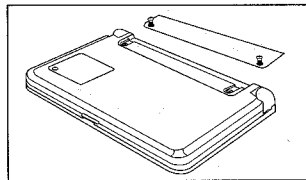

 
Load the batteries, making sure the +'s and -'s line up.

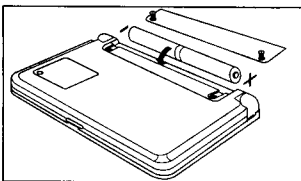

Slide the cover closed ....

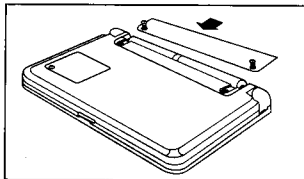 

 ...and replace the door to complete the installation.

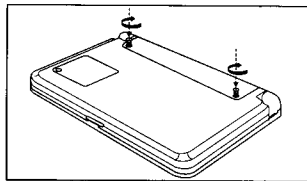

For proper function:


- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries
- Do not use rechargeable batteries

**CAUTION : BATTERIES SHOULD BE REPLACED BY ADULT.**

 
## Replacing the Backup Battery

Note: This battery was installed at the factory and should not need changing for 24 months after you begin using the Princess Data Pad under normal use.


Remove a screw holding the small cover plate.

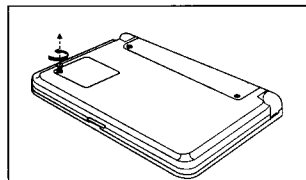

 
With your parents' help, remove the CR2032 button cell battery and replace it with one of the same type (available in most hardware stores.)

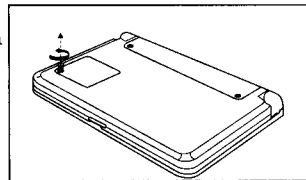

Replace the cover plate.

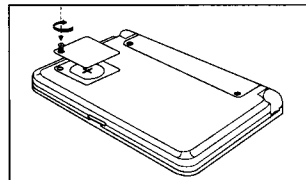 

## The Buttons You Will Use

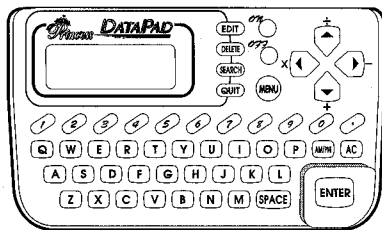 

Press **EDIT** when you want to change information that is in Princess Data Pad and is showing on the display. You can then add or remove information using the keyboard.

Press **DELETE** when you want to erase a character at the underline cursor or erase an item from your Things to Do, Things to Remember, Friends & Family or Stuff lists.

Press **SEARCH** when you have a list in Princess Data Pad and you want to look through it. If you press a **letter followed by SEARCH** you will see the first word that begins with that letter. (Very useful for finding Zack's number in the telephone directory.) If you press **SEARCH** in the **THINGS TO REMEMBER** mode, you will see your list in chronological order.

Press **QUIT** to stop editing or reading the current list and back up one level closer to the main menu.

Press **MENU** to jump right to the main selection menu.

Press the **UP, DOWN, LEFT** and **RIGHT ARROWS** to make the calculator divide, add, multiply and subtract. The label shows the function matched with each button.

Press **AC** to clear the display and memory in the calculator.

Press **ENTER** to make a selection when Princess Data Pad asks you to. In the calculator, use **ENTER** for the equal sign.

Press the **ON** key to access the CLOCK/ALARM feature. Press Enter and the entire menu is shown.

Press the **OFF** key to turn off menu icons.

Note: The clock, day and date will always remain on the screen for quick reference.

### Reset Operation :

- By pressing the reset button, you can delete all the data previously input. A message on screen will ask you, CLEARALL?Y/N. By pressing Y(yes) all data will be deleted, N(no) will return you to the clock display screen.
- Be sure to press reset button and clear all data before you use PRINCESS DATAPAD Diary for the first time.

## Clock/Alarm



 
 
Press **MENU** to see symbols for the seven functions.

Use the left or right **ARROW** followed by **ENTER** to select the far right symbol, Clock/Alarm.


Press **EDIT**, the screen will show CLOCK/ALARM Press "C" for Clock.

Enter the Date using keys 0-9. Use two digits for the month, two digits for the day and the last two digits of the year. Press **ENTER** when date is correct.


Enter the Time using keys 0-9. Use two digits for the hour and two digits for the minute. Press **AM/PM** to activate AM or PM mode. Press **ENTER** when time is correct.



 To access the Alarm function, go back to the screen that shows CLOCK/ALARM and press A for alarm. Enter the Alarm Time using keys 0-9. Press **ENTER** when alarm is correct. Press AM/PM to activate AM or PM mode.



 To activate the alarm, select ON/OFF using the arrows keys. Press **ENTER** to save the alarm.



Press **QUIT** or **MENU** to return to the Main Screen.

**Note:** When alarm rings on the time you select, press any key to turn it off.

## Things to Remember

 


Press **MENU** to see symbols for the seven functions.


Use the left or right **ARROW** followed by **ENTER** to select the far left symbol, Things to Remember.




Enter the Date to Remember using keys 0-9. Press **ENTER** when date is correct.



 Enter the Thing to Remember. Press **ENTER** when the message is correct.



 Continue entering your list. To look at your list, press **DOWN ARROW**. The first message and date appear.



Press the **DOWN ARROW** to view/recall your list. The list will automatically sort by placing the earliest date first.

Press **QUIT** or **MENU** to return to the Main Screen.


## Calculator



 
Press **MENU** to see symbols for the seven functions.



Use the left or right **ARROW** followed by **ENTER** to select the second symbol, Calculator.



 Use the number keys and function keys to enter your problem.

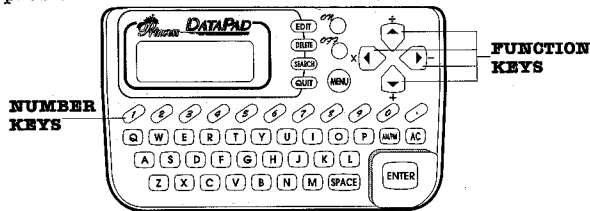

Use **ENTER** as the equal sign.

Use **SPACE** or **AC** to clear memory.

For example :

$600 \div 25 =$  (divide is up arrow) (= is ENTER)  
Display shows : 24 (the correct result)

Next example : clear memory (clear is AC or SPACE)  
 $13 + 11 =$  (plus is down arrow) (= is ENTER)  
Display shows : 24 (the correct result)

continuing the example with the last result:  
 $\times 25 =$  (multiply is left arrow) (= is ENTER)  
Display shows : 600 (the correct result)

Press **QUIT** or **MENU** to return to the Main Screen.

## Things to Do

Press **MENU** to see symbols for the seven functions. Use the left or right **ARROW** followed by **ENTER** to select the third symbol, Things to Do.



Enter the Date to Remember using keys 0-9. Press **ENTER** when the date is correct.



Enter the Time to Remember. Press **ENTER** when the time is correct. Press **AM/PM** to activate AM or PM mode.



 
Enter the Thing To Do. Continue entering your list.



To look at your list, press **SEARCH**. The first date and time appear.



Press the **DOWN ARROW** to see your message... and again to see other messages.




Press **DELETE** to erase the message showing on the display. Press **QUIT** or **MENU** to return to the Main Screen.

## Friends & Family

 Press **MENU** to see symbols for the seven functions. Use the left or right **ARROW** followed by **ENTER** to select the fourth symbol, Friends/Family.



Enter the Name of the first person on your list. Press **ENTER** when the name is correct. Princess Data Pad will then alphabetize them.





Enter the the person's telephone number using keys 0-9, "-" and space. Press **ENTER** when the number is correct.

TEL.NO.?  
708 555 12 12  


Enter the person's birthday using keys 0-9. Press **ENTER** when the birthday is correct.

BIRTH?MMDD  
02 14  


Press **SEARCH** to scroll through your list. The first person will be displayed.

ABRAHAM  
708 555 12 12

Then press the **DOWN ARROW** once to see the first person's birthday, and again to scroll through your list in alphabetical order.

ABRAHAM  
02-14

A faster way to find a number is press the first letter (or letters) in the name followed by **SEARCH**.

ZACK  
708 555 9999


Press **QUIT** or **MENU** to return to the Main Screen.


## Password

Press **MENU** to see symbols for the seven functions. Use the left or right **ARROW** followed by **ENTER** to select the fifth symbol, Password.


SELECT  
     

Enter four characters that you want to be your password. Press **ENTER** when your password is correct.


PASSWORD?  


\*\*\*\*  


Princess Data Pad will ask you to enter your password again to make sure it has the correct one. Press **ENTER** when your password is correct the second time.

RETYPE?  


(Actual password will not appear on screen)

\*\*\*\*  


Select whether you want your password on (active) or off (inactive)... or if you want to edit it. Use the left/right arrow keys to blink your choice and press

ON/OFF/EDIT

**ENTER** to accept it.

Your password will protect your privacy, preventing other people from scrolling through your Princess Data Pad.

NOTE: Don't forget your Password. If you do, you will not be able to access any of your files (You may want to write it down in a special place).

Press **QUIT** or **MENU** to return to the Main Screen.

## Stuff



Press **MENU** to see symbols for the seven functions.

Use the left or right **ARROW** followed by **ENTER** to select the sixth symbol, Stuff.

This file has room for fifty (50) characters on one continuous line. Type as much stuff as you can in fifty characters. Use abbreviations. Press **ENTER** when you are finished.

To see your **STUFF** list, press the **DOWN ARROW** key. Then, press the **RIGHT ARROW** key to scroll through the line. Press the **LEFT ARROW** key to scroll back.

Press **QUIT** or **MENU** to return to the Main Screen.

SELECT



STUFF



CHRISSEY IS T,



THE MOST AW



## Troubleshooting

### SYMPTOM

Unit will not function after initial battery insertion.

Unit freezes or will not turn off.

The screen becomes dim, cursor movement slows or functions do not work consistently.

### SOLUTION

RESET button on the back of the unit **MUST** be pressed before using for the first time.

Press the RESET button on the back side of unit

"AAA" Batteries require replacement. Under normal use, "AAA" batteries may need replacement every 2-3 weeks. The back up button cell battery should last at least 2 years.

## Cautions

High temperature will destroy the unit. Do not leave unit in direct sunlight.

Do not press the liquid crystal display and avoid heavy shock or the display may fail.

Replace batteries when the screen becomes dim.

Do not use a pencil or pin to press the reset button. Use a ball-point pen.

Clean only with a piece of soft dry cloth.

Do not mix old and new batteries.

Do not mix alkaline, standard or rechargeable batteries.

## Defects or Damage

If a part of your game is damaged or something has been left out, **DO NOT RETURN THE GAME TO THE STORE**. The store doesn't have replacement parts. Instead, write to us at:

**TIGER ELECTRONICS, INC. REPAIR DEPT.  
980 Woodlands Parkway,  
Vernon Hills, Illinois 60061, U.S.A.**

In your note, mention the name of your game, the game's model number, and tell us briefly what the problem is. Also, include sales slip, date, place of purchase, price paid, and your return address. We will do our best to help.

## **90-DAY LIMITED WARRANTY**

Tiger Electronics, Inc. (TEI) warrants to the original consumer purchaser of any of its electronic games or toys that the product will be free of defects in material or workmanship for 90 days from the date of original purchase.

During this 90-day warranty period, the product will either be repaired or replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase or to TEI when returned prepaid and insured with proof of date of purchase.

Product returned to TEI without original receipt or after the 90-day warranty has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at our option) for a service charge of US\$10.00. Make check or money order payable to Tiger Electronics, Inc.

TEI will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.  
980 Woodlands Parkway  
Vernon Hills, Illinois 60061 U.S.A.

1. Pack the product carefully in the original box or use a good-quality carton with packing materials.
2. Include a letter with a complete description of the defect, a check if product is beyond the 90-day warranty, and your printed name, address and telephone number.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damages resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.