

INSTRUCTIONS

Princess Dear Diary...The Magical Electronic Diary for Girls!

Contents

A Quick Look at Princess Dear Diary	p.2
How to Change the Batteries Without	4 19
Losing Your Stuff	p.3-5
The Buttons You Will Use	p.6-7
Features:	p
Clock/Alarm	p.8
Things to Remember	p.9
Calculator	p.10-11
Things to Do	p.12
Friends & Family	p.13-14
Password The Password and American	p.15-16
Stuff	p.17
Troubleshooting	p.18
Cautions	p.19
Warranty	p.20-21

A Quick Look at Princess Dear Diary



This is the **THINGS TO REMEMBER** list. You can save dated messages of fifteen characters each.



This is the **CALCULATOR**. You use the number keys, arrow buttons for functions, SPACE or AC for CLEAR and ENTER for the EQUAL SIGN.



This list is **THINGS TO DO**. You can save messages for an exact time and date.



This list is **FRIENDS & FAMILY**. You can save the names, phone numbers and birthdays of special people.



This is your **PASSWORD**. You can create a four character password to protect your files from nosy people.



This list is for other **STUFF**. You can save one list that holds up to fifty characters.



This function lets you set the **CLOCK**, and/or ALARM and change them both.

How to Change the Batteries Without Losing Your Stuff

 
The Princess Dear Diary has main batteries and a backup battery. The main batteries are two AAA batteries that must be installed before you can use Princess Dear Diary. The backup battery is a CR2032 "button cell" battery about the size of a nickel. It provides power to hold your information if the AAA batteries discharge completely. Never remove all of the batteries or all of your information will be erased!

Replacing the Main Batteries

With your parents' help, open the battery compartment door using a phillips blade screwdriver.



Slide open the cover to expose the AAA battery compartment.




2


Load the batteries, making sure the +'s and -'s line up.



 
Slide the cover closed



 ....and replace the door to complete the installation.



 You MUST press RESET before initial use or after replacing batteries



For proper function:

- Do not mix old and new batteries
- Do not mix alkaline, standard (earbon-zinc) or rechargeable (nickelcadmium) batteries
- Do not use rechargeable batteries

CAUTION: BATTERIES SHOULD BE REPLACED BY AN ADULT.

 
Replacing the Backup Battery

Note: This battery was installed at the factory and should not need changing for 24 months after you begin using the Princess Dear Diary under normal use.


Remove a screw holding the small cover plate.



With your parents' help, remove the CR2032 button cell battery and replace it with one of the same type (available in most hardware stores.)



Replace the cover plate.

 

The Buttons You Will Use



Press **EDIT** when you want to change information that is in Princess Dear Diary and is showing on the display. You can then add or remove information using the keyboard.

Press **DELETE** when you want to erase a character at the underline cursor or erase an item from your Things to Do, Things to Remember, Friends & Family or Stufflists.

Press **SEARCH** when you have a list in Princess Dear Diary and you want to look through it. If you press a **letter followed by SEARCH** you will see the first word that begins with that letter. (Very useful for finding Zack's number in the telephone directory.) If you press **SEARCH** in the **THINGS TO REMEMBER** mode, you will see your list in chronological order.

Press **QUIT** to stop editing or reading the current list and back up one level closer to the main menu.

Press MENU to jump right to the main selection menu.

Press the **UP**, **DOWN**, **LEFT** and **RIGHT** ARROWS to make the calculator divide, add, multiply and subtract. The label shows the function matched with each button.

Press AC to clear the display and memory in the calculator.

Press **ENTER** to make a selection when Princess Dear Diary asks you to. In the calculator, use **ENTER** for the equal sign.

 
Press the **ON** key to access the CLOCK/ALARM feature. Press Enter and the entire menu is shown.

Press the OFF key to turn off menu icons.

Note: The clock, day and date will always remain on the screen for quick reference.

Reset Operation:

- By pressing the reset button, you can delete all the data previously input. A message on screen will ask you, CLEARALL?Y/N.
- By pressing Y(yes) all data will be deleted, N(no) will return you to the clock display screen.
- Be sure to press the reset button <u>before</u> you use PRINCESS DEAR DIARY for the first time and after replacing batteries.




Clock/Alarm




Press **MENU** to see symbols for the seven functions.

 Use the left or right ARROW followed by ENTER to select the far right symbol, Clock/Alarm.



 
and mountagene presents fifter on Press EDIT, the screen will show CLOCK/ALARM Press "C" for Clock.



Enter the Date using keys 0-9. Use two digits for the month, two digits for the day and the last two digits of the year. Press ENTER when date is correct.



 Enter the Time using keys 0-9. Use two digits for the hour and two digits for the minute. Press AM/PM to activate AM or PM mode. Press ENTER when time is correct.



To access the Alarm function, go back to the screen that shows CLOCK/ ALARM and press A for alarm. Enter the Alarm Time using keys 0-9. Press ENTER when alarm is correct. Press AM/PM to activate AM or PM mode.



To activate the alarm. select ON/OFF using the arrows keys. Press ENTER to save the



alarm.

Press QUIT or MENU to return to the Main Screen.

Note: When alarm rings on the time you select, press any key to turn it off.

Things to Remember



Press MENU to see symbols for the seven functions.

Use the left or right ARROW followed by ENTER to select the far left symbol, Things to Remember.



 
Enter the Date to Remember using keys 0-9. Press
ENTER when date is correct.



Enter the Thing to Remember. Press **ENTER** when the message is correct.




Continue entering your list. To look at your list, press **DOWN ARROW**. The first message and date appear.



Press the DOWN ARROW to view/recall your list. The list will automatically sort by placing the earliest date first.

Press QUIT or MENU to return to the Main Screen.

 Calculator



Press **MENU** to see symbols for the seven functions.

Use the left or right AR-ROW followed by ENTER to select the second symbol, Calculator.



Use the number keys and function keys to enter your



Use ENTER as the equal sign.
Use SPACE or AC to clear memory.

For example:

600 ÷ 25 = (divide is up arrow) (= is ENTER)

Display shows: 24 (the correct result)

Next example : clear memory (clear is AC or SPACE)

13 + 11 = (plus is down arrow) (= is ENTER) Display shows: 24 (the correct result)

continuing the example with the last result:

continuing the example with the last result.

x 25 = (multiply is left arrow) (= is ENTER)

Display shows: 600 (the correct result)

Press QUIT or MENU to return to the Main Screen.

Things to Do

Press MENU to see symbols for the seven functions. Use the left or right ARROW followed by ENTER to select the third symbol. Things to Do.



Enter the Date to Remember using keys 0-9.
Press ENTER when the date is correct.



Enter the Time to Remember. Press **ENTER** when the time is correct.

Press **AM/PM** to activate AM or PM mode.



Enter the Thing To Do. Continue entering your list.



To look at your list, press **SEARCH**. The first date and time appear.



Press the **DOWN ARROW** to see your message... and again to see other messages.



Press **DELETE** to erase the message showing on the display.

Press QUIT or MENU to return to the Main Screen.

Friends & Family

Press **MENU** to see symbols for the seven functions. Use the left or right **ARROW** followed by **ENTER** to select the fourth symbol, Friends/Family.



Enter the Name of the first person on your list. Press ENTER when the name is correct. Princess Dear Diary will then alphabetize them.





Enter the the person's telephone number using keys 0-9, "-" and space. Press ENTER when the number is correct.



Enter the person's birthday using keys 0-9. Press ENTER when the birthday is correct.



Press **SEARCH** to scroll through your list. The first person will be displayed.



Then press the **DOWN ARROW** once to see the first person's birthday, and again to scroll through your list in alphabetical order.



A faster way to find a number is press the first letter (or letters) in the name followed by



Press QUIT or MENU to return to the Main Screen.

Password

 


Press MENU to see symbols for the seven functions. Use the left or right ARROW followed by ENTER to select the fifth symbol, Password.



Enter four characters that you want to be your password. Press **ENTER** when your password is correct.


Pylone






Princess Dear Diary will ask you to enter your password again to make sure it has the correct one. Press ENTER when your password is correct the second time.

 (Actual password will not appear on screen)
Select whether you want





 your password on (active) or off (inactive)... or if you want to edit it. Use the left/ right arrow keys to blink your choice and press ENTER to accept it.



Your password will protect your privacy, preventing other people from scrolling through your Princess Dear Diary.

NOTE: Don't forget your Password, If you do, you will not be able to access any of your files (You may want to write it down in a special place).

Press QUIT or MENU to return to the Main Screen.

 


Press **MENU** to see symbols for the seven functions.

 
Use the left or right
ARROW followed by
ENTER to select the sixth
symbol, Stuff.

This file has room for fifty (50) characters on one continuous line. Type as much stuff as you can in fifty characters. Use abbreviations. Press ENTER when you are finished.

To see your STUFF list, press the **DOWN ARROW** key. Then, press the **RIGHT ARROW** key to scroll through the line. Press the **LEFT ARROW** key to scroll back.







Press QUIT or MENU to return to the Main Screen.

Troubleshooting

SYMPTOM

Unit will not function after initial battery insertion.

Unit freezes or will not turn off.

The screen becomes dim, cursor movement slows or functions do not work consistently.

SOLUTION

RESET button on the back of the unit MUST be pressed before using for the first time.

Press the RESET button on the back side of unit

es (You may want to

"AAA" Batteries require replacement. Under normal use, "AAA" batteries may need replacement every 2-3 weeks. The back up button cell battery should last at least 2 years.

Cautions

High temperature will destroy the unit. Do not leave unit in direct sunlight.

Do not press the liquid crystal display and avoid heavy shock or the display may fail.

Replace batteries when the screen becomes dim.

Do not use a pencil or pin to press the reset button. Use a ball-point pen.

Clean only with a piece of soft dry cloth.

Do not mix old and new batteries.

Do not mix alkaline, standard or rechargeable batteries.

Defects or Damage

If a part of your game is damaged or something has been left out, DO NOT RETURN THE GAME TO THE STORE. The store doesn't have replacement parts. Instead, write to us at:

TIGER ELECTRONICS, INC. REPAIR DEPT. 980 Woodlands Parkway,
Vernon Hills, Illinois 60061, U.S.A.

In your note, mention the name of your game, the game's model number, and tell us briefly what the problem is. Also, include sales slip, date, place of purchase, price paid, and your return address. We will do our best to help.

90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (TEI) warrants to the original consumer purchaser of any of its electronic games or toys that the product will be free of defects in material or workmanship for 90 days from the date of original purchase.

During this 90-day warranty period, the product will either be repaired or replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase or to TEI when returned prepaid and insured with proof of date of purchase.

Product returned to TEI without original receipt or after the 90-day warranty has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at our option) for a service charge of US\$10.00. Make check or money order payable to Tiger Electronics, Inc.

TEI will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept. 980 Woodlands Parkway
Vernon Hills, Illinois 6006l U.S.A.

- Pack the product carefully in the original box or use a good-quality carton with packing materials.
- Include a letter with a complete description of the defect, a check if product is beyond the 90-day warranty, and your printed name, address and telephone number.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damages resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

TGERILLETRONICS

TM & are Trademarks of Tiger Electronics, Inc.

1996 Tiger Electronics, Inc.
980 Woodlands Parkway, Vernon Hills, Illinois 60061
Tiger Electronics (UK) Llc.
Belvedere House, Victoria Avenue
Harrogate, North Yorkshire HG1 1EL, England.
PRINTED IN HONG HONG