

**PLAYSKOOL**  
baby

# Deluxe Baby Monitor

LETS YOU LISTEN TO BABY OR OLDER CHILDREN IN OR AROUND YOUR HOME.

 
Please read all instructions *carefully* before using product. *Retain all* instructions for future reference.

**CAUTION:** THIS PRODUCT CANNOT REPLACE ADULT SUPERVISION OF A CHILD OR FREQUENT, PERSONAL CHECKING OF A CHILD.

THE TRANSMITTER IS DESIGNED TO DETECT NORMAL SOUND LEVELS WITHIN A 10-FOOT RANGE. THIS PRODUCT IS NOT DESIGNED TO BE USED AS A MEDICAL MONITOR. IT IS IMPORTANT FOR ADULTS TO STAY WITHIN THE RECEIVER RANGE OF THE DELUXE BABY MONITOR AT ALL TIMES DURING USE TO DETECT NORMAL SOUNDS. SOUND TRANSMISSION SHOULD BE CHECKED AS OFTEN AS POSSIBLE. ALWAYS KEEP UNITS OUT OF REACH OF CHILDREN. THE TRANSMITTER SHOULD NEVER BE IN CRIB OR PLAYPEN.

**IMPORTANT: SOUND TRANSMISSION CHECK — IT IS ESSENTIAL THAT YOU CHECK THE SOUND RECEPTION OF THIS PRODUCT BEFORE USING IT. SOUND TRANSMISSION CHECKS MUST BE DONE ON A REGULAR BASIS. TO PROPERLY TEST THIS SYSTEM, ONE ADULT HOLDS AND MOVES THE RECEIVER TO VARIOUS LOCATIONS WHILE ANOTHER ADULT SPEAKS INTO THE TRANSMITTER FROM MAXIMUM RANGE. IF ONLY ONE ADULT IS ABLE TO PERFORM THIS TEST, PLACE A SOUND EMITTING DEVICE, SUCH AS A RADIO, A TICKING CLOCK, ETC. NEAR THE TRANSMITTER AND MOVE THE RECEIVER TO OTHER AREAS IN AND AROUND YOUR HOME.**

BE SURE TO READ ALL THE DIRECTIONS BEFORE USING THE DELUXE BABY MONITOR. IF ANY PROBLEM OR QUESTIONS ARISE, PLEASE REFER TO THE OWNER CHECKLIST.

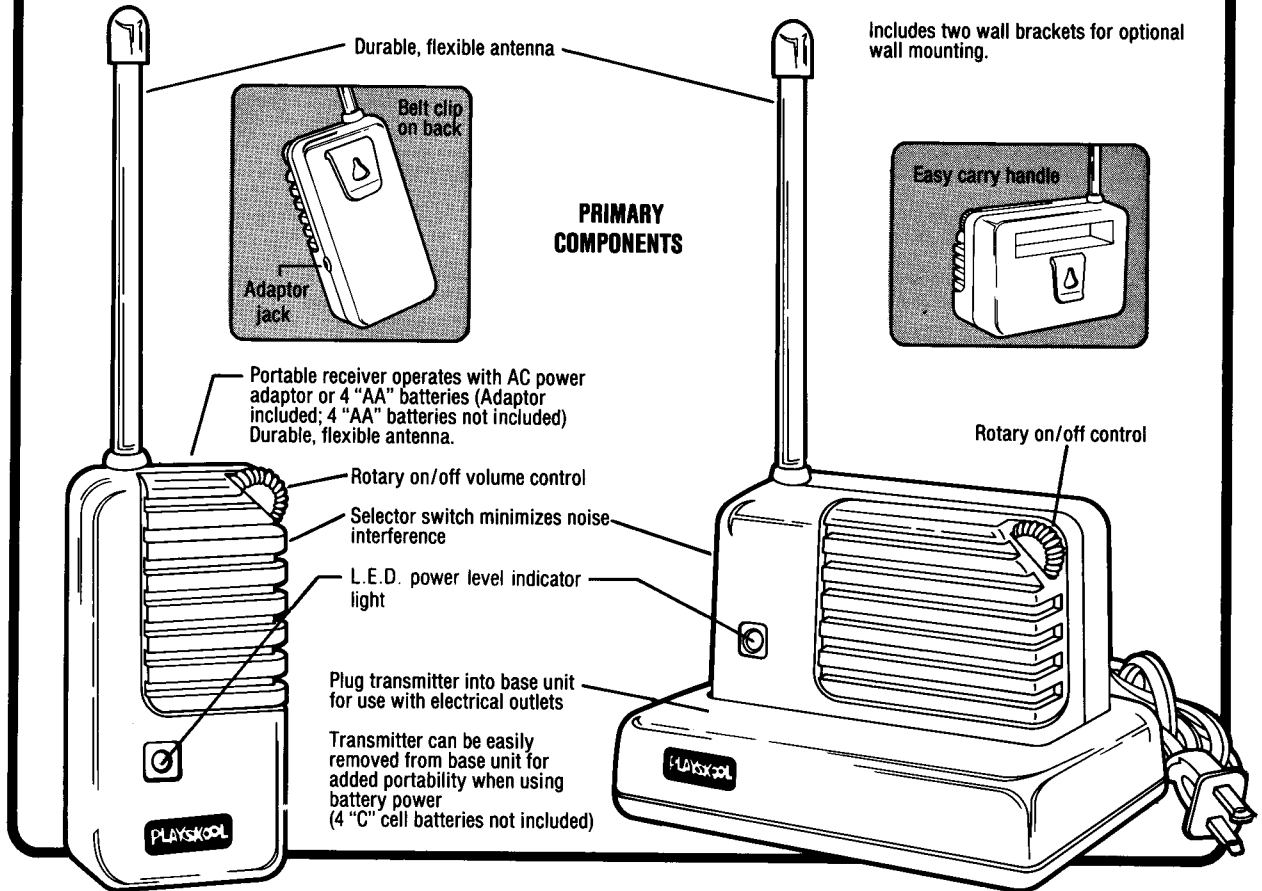

## SAFETY INSTRUCTIONS

- (1) **READ INSTRUCTIONS** - Thoroughly read all safety and operating instructions before using this appliance. Follow all warnings on this unit and in the operating instructions.
- (2) **SAVE INSTRUCTIONS** - All instructions should be retained for future reference.
- (3) **NON-USE PERIODS** - When left unused, the power cord should be unplugged and batteries removed until the product is ready to be used again.
- (4) **WATER & MOISTURE** - Keep product away from all water related areas.
- (5) **WALL MOUNTING** - Please follow recommended instructions for wall mounting.
- (6) **POWER-CORD PROTECTION** - Power-supply cords should be free of any entanglements and areas where people might come in contact with them.
- (7) **HEAT** - Locate the unit away from heat sources such as radiators, stoves or other appliances that produce heat.
- (8) **VENTILATION** - Proper ventilation of the transmitter, power base, receiver and AC adaptor must be maintained at all times. For example, the unit should not be positioned on a bed, sofa, rug or similar surface, that may block the ventilation openings, or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- (9) **CLEANING** - The unit should be kept free of dust. Use a dry, 100% cotton cloth when cleaning. Remember, do not apply water.
- (10) **POWER SOURCES** - The unit should be connected to a power supply only of the type described in the operating instructions.
- (11) **SERVICING** - The user should not attempt to service the appliance beyond that described in the Owner's Checklist. All other servicing should be referred to qualified service personnel at Playskool, Inc.

### ONE YEAR WARRANTY

Playskool, Inc. warrants to the original purchaser of this product that the product will be free of defects in material or workmanship for one year from the date of original purchase. If proved defective, it will be replaced, not necessarily with new product or new parts, or repaired at our option at no charge, if forwarded PREPAID to our Consumer Services Department; during the warranty period. The address is:

Consumer Returns - Deluxe Baby Monitor  
c/o Playskool, Inc.  
450 Division Street  
Pawtucket, RI 02860

This warranty does not cover damage resulting from accidents, unreasonable use, neglect, improper service or other causes not arising out of defects in material and workmanship.

Playskool, Inc. will not be liable for loss of the product or other incidental or consequential costs, expenses, or damages incurred by the original purchaser. Any implied warranties are limited in duration to the one year period from the original date of purchase. Any replaced or repaired product will not be subject to further warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

 
Use only the adaptor supplied. Use of any other adaptor voids warranty. The electronic components are not designed for consumer repair. Evidence of any attempt at consumer repair will void the warranty. Please do not include batteries when returning the Deluxe Baby Monitor.

## NORMAL OPERATION

The transmitter operates on standard household current (120V AC) or 4 "C" size batteries (not included) for added portability. The receiver operates with either 120V AC outlet (by using the AC adaptor provided) or with 4 "AA" size batteries (not included). For best performance, alkaline batteries are recommended for use with both the receiver and transmitter. To insure best reception, keep both units upright. Always keep units out of reach of children.

### (A) TRANSMITTER

Plug the transmitter into a standard 120V AC outlet. Be sure to place out of child's reach but within 10 feet of the crib or play area. The transmitter should never be in the crib or playpen. To increase the performance and operating range, place the transmitter within 6 feet of the child so the microphone pickup is directed toward the crib or play area. Make sure the transmitter is not covered or obstructed from picking up sound.

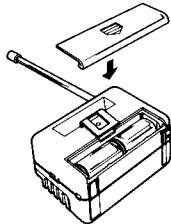

**BATTERY INSTALLATION:** Transmitter can be easily removed from base unit for added portability when using battery power. Hold transmitter face down. Using a Phillips head screwdriver, unscrew battery cover and lift off. Insert 4 "C" size non-rechargeable alkaline batteries, 1.5V each, as indicated within the battery compartment. Put battery cover back in place; replace and tighten screw. The minimum battery operating time is 80 hours continuously.

**NOTE:** There is no need to remove batteries while transmitter is installed in power base.

### ON/OFF

The transmitter is turned on and off by turning on/off control, located in the upper right corner of the transmitter.

 
### L.E.D. LIGHT

The transmitter has adequate battery or electrical power when the light is on. If the light fails to go on, or if any other inconsistencies occur, such as flickering or dimming, refer to Owner's Checklist for instructions into correcting the problem.

**NOTE:** Both transmitter and receiver must be on in order to transmit and receive sound. Turn both units off when not in use.

### (B) RECEIVER

Portable receiver operates on standard 120V AC outlet with AC power adaptor included or on 4 "AA" batteries, not included. It is important for adults to stay within the receiver range of the Deluxe Baby Monitor at all times during use.

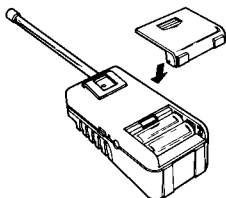

**BATTERY INSTALLATION:** Hold receiver face down. Using a Phillips head screwdriver, unscrew the battery cover and lift off. Insert 4 "AA" size non-rechargeable alkaline batteries, 1.5V each, as indicated within the battery compartment. Put battery cover back in place; replace and tighten screw. The minimum battery operating time is 18 hours continuously. Remove the batteries if the unit will not be used for a long period of time.

**AC ADAPTOR:** To use adaptor, plug connector into jack located on the side of the receiver and plug adaptor into 120V AC standard wall outlet. The supplied AC adaptor has a minimum rating of 6V DC, 200mA.

**NOTE:** Battery may be left in receiver during use with AC adaptor.

### ON/OFF VOLUME

Turn thumbwheel, located in the upper right corner of the receiver, to an acceptable volume level. To turn receiver off, rotate the thumbwheel until you hear a click and power indicator light goes off.

### L.E.D. LIGHT

The receiver has adequate power when the light is on. If the light fails to go on, or if any other inconsistencies occur, such as flickering or dimming, then refer to the Owner's Checklist for instructions into correcting the problem.

### RANGE

When the receiver is moved too far from the transmitter, an increase in static noise will occur. To eliminate the static, move the receiver closer to the transmitter. Actual distances will vary depending upon surroundings. The effective indoor range is 150 feet.

**NOTE:** Moving receiver too close to transmitter may cause feedback (shrill noise).

### (C) FREQUENCY

Upon purchasing the Deluxe Baby Monitor, check frequency selectors on the transmitter and the receiver, both should be at the same position. For example, both selector switches are set to either the A position or both to the C position. To reduce noise interference which results in static, we have installed a second frequency. Such interference may occur from other devices which transmit through the public air waves. For example, cordless telephones may disrupt the sound reception by transmitting on the same frequency. If this does occur, simply move the receiver to the other frequency position. If disruption on both frequencies occurs, or if any further problems develop consult Owner's Checklist.

### WALL MOUNTING

To mount the Deluxe Baby Monitor on the wall, simply fasten using 2 small nails (1 inch long with approximately 1/4" head) into the stud of a nearby wall. Next, slip the belt clip into the bracket slot and gently slide down. Remove by sliding unit up and out.

## OWNER'S CHECKLIST

**IMPORTANT** If you have a problem with this product, first check to see that:

- Both units are on
- Both units are plugged in and/or have good batteries
- Volume is turned up on receiver
- Frequency settings on both transmitter and receiver are at the same position
- Standard 120V AC outlet(s) are functioning properly

PROBLEM	POSSIBLE REASON	CORRECTION
No sound (even with both units on)	<ul style="list-style-type: none"> <li>● Dead batteries</li> <li>● Frequency switches not at same setting</li> <li>● AC adaptor not properly connected to wall outlet or receiver</li> <li>● Transmitter not properly connected to power base</li> <li>● AC plug of power base not properly connected to wall outlet</li> </ul>	<ul style="list-style-type: none"> <li>● Replace batteries</li> <li>● Recheck frequency switches</li> <li>● Recheck AC adaptor connectors</li> <li>● Recheck power base connections</li> <li>● Recheck connections of AC plug of power base</li> </ul>
L.E.D. power light dimming or not working	<ul style="list-style-type: none"> <li>● Dead Batteries</li> <li>● Unit is not on</li> <li>● AC adaptor not properly connected to wall outlet or receiver</li> <li>● Transmitter not properly connected to power base</li> <li>● AC plug of power base not properly connected to wall outlet</li> </ul>	<ul style="list-style-type: none"> <li>● Replace batteries</li> <li>● Recheck on/off switches of both transmitter and receiver</li> <li>● Recheck AC adaptor connections</li> <li>● Recheck power base connections</li> <li>● Recheck connections of AC plug of power base</li> </ul>
Very weak reception	<ul style="list-style-type: none"> <li>● Out of range</li> <li>● Weak batteries</li> </ul>	<ul style="list-style-type: none"> <li>● Move receiver closer to transmitter</li> <li>● Replace batteries</li> </ul>
Buzzing, interference, static, etc.	<ul style="list-style-type: none"> <li>● Interference from other Deluxe Baby Monitors, cordless telephones, walkie-talkies, etc.</li> <li>● Interference from household appliances</li> <li>● Out of range</li> </ul>	<ul style="list-style-type: none"> <li>● Change the frequencies on both the transmitter and the receiver to the second position</li> <li>● Eliminate cause of static</li> <li>● Move receiver closer to transmitter</li> </ul>
Decreased range	<ul style="list-style-type: none"> <li>● Weak batteries</li> <li>● Unit(s) near metal concentration</li> <li>● Antenna(s) covered</li> <li>● Unit(s) laying on its side</li> </ul>	<ul style="list-style-type: none"> <li>● Replace batteries</li> <li>● Test while moving unit to different locations</li> <li>● Remove obstructions</li> <li>● Keep unit(s) upright</li> </ul>
Feedback (shrill noise)	<ul style="list-style-type: none"> <li>● Receiver too close to transmitter</li> <li>● Volume too high</li> </ul>	<ul style="list-style-type: none"> <li>● Move receiver further away from transmitter; rechecking sound transmission</li> <li>● Lower the volume</li> </ul>

This unit contains no user serviceable parts. If problem persists, please refer to warranty information.

## 5590 DELUXE BABY MONITOR

### LED INDICATOR LIGHT

Both transmitter and receiver have adequate power when the light is on. If either or both lights fail to go on, or if any other inconsistencies occur, such as flickering or dimming then refer to Owners Checklist for instructions to correct the problem.

### FREQUENCY

Your Deluxe Baby Monitor has either A/B or C/D frequency options on both the transmitter and the receiver. Check the frequency selectors to make sure that both are in the same position. For example, both selector switches are set to either the A position or the C position. We have installed a second frequency to reduce noise interference which results in static. Such interference may occur from other devices which transmit through the public airwaves. For example, cordless telephones may disrupt the sound reception by transmitting on the same frequency as the monitor. Set selectors to the second position (either the B position or the D position). If disruption on both frequencies occur, or if any further problems develop, consult the Owners Checklist.

PRINTED IN HONG KONG

H-91