 


TIGER
ELECTRONICS
Ages 4 and up

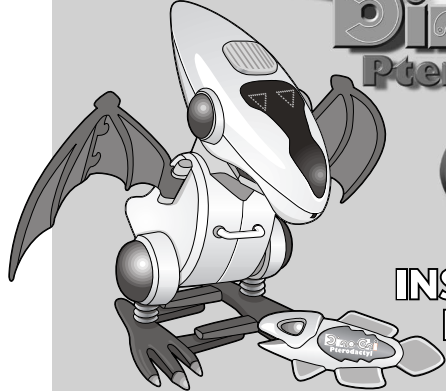 


INSTRUCTION MANUAL



Dino-Chi Pterodactyl, the Interactive Dinosaur, is a new type of friend! Dino-Chi Pterodactyl expresses his emotions, through his bright expressive eyes, by the way he screeches and makes other fun noises, the way he opens and closes his mouth, moves his wings and even by the joyful way he walks towards you! Of course, when he's in battle mode against another Dino-Chi, he really shows his stuff! Enjoy hours of playful singing, walking and real dinosaur sounds. Dino-Chi uses advanced technology to create realistic emotional responses that adapt and change as you play with him. The more you play with Dino-Chi, the happier he becomes - he may even sing a special song for you!

We communicate!

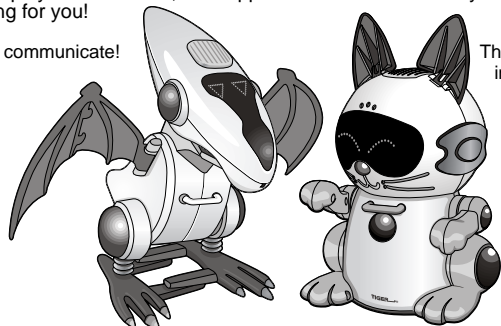


This means we interact with other Robo-Chi Pets!

CHECKLIST

The following items are included in this package:
1 - Dino-Chi Pterodactyl, the Interactive Dinosaur
1 - Dino-Chi food
1 - Instruction manual

 
If anything is missing, please contact the Tiger Electronics' Customer Service department and we will send you any missing item.

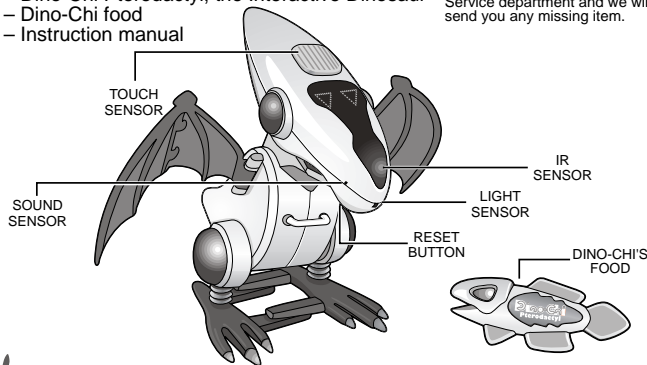

BATTERY INSTALLATION

IMPORTANT: Battery installation should be done by an adult. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries.

 1. Unscrew and remove the battery compartment door on Dino-Chi's back.
2. Insert 3 "AAA"/LR03 batteries as shown inside the battery compartment.
3. Attach the battery compartment door and fasten the screw.
4. If there is any malfunction, please press the **RESET** button located underneath Dino-Chi's nose (see **RESET** section for more details).

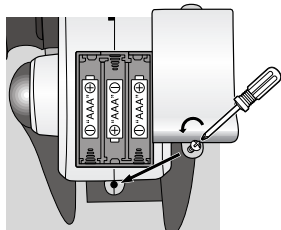

NOTE: Dino-Chi will begin to move as soon as you install the batteries. There is no on/off switch. To turn off, either remove the batteries or see the section titled "**SLEEP**".

HELPFUL TIP: Dino-Chi is a mechanical, robotic toy. The mechanical sound you hear when Dino-Chi moves is normal.

To ensure proper function:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries is only to be charged under adult supervision, (if removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Make sure you replace with new batteries at the first sign of erratic operation.
- Do not dispose of batteries in fire, batteries may explode or leak.

CAUTION:

- As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect.
- Make sure the batteries are inserted correctly and follow the toy and battery manufacturer's instructions.

SET UP

Dino-Chi Pterodactyl will play the best on a smooth, flat surface. Make certain the area is clear of obstacles so Dino-Chi can stand, flap his wings and walk forwards. Dino-Chi should be played with indoors.

DINO-CHI'S SENSORS

Dino-Chi Pterodactyl is very unpredictable. Activate one of Dino-Chi's sensors to see what he will do! Dino-Chi has three sensors: light sensor, sound sensor and a touch sensor.

To activate the **LIGHT** sensor:

 
- WAIT** until Dino-Chi stops moving.
- Slowly pass your hand in front of Dino-Chi's nose.
- When you move your hand away from Dino-Chi's nose, Dino-Chi will respond.

To activate the **SOUND** sensor:

- WAIT** until Dino-Chi stops moving.
- Simply clap your hands or make a loud sound. Dino-Chi will respond.


To activate the **TOUCH** sensor:

- WAIT** until Dino-Chi stops moving.
- Simply press the button on top of Dino-Chi's head. If you press the head button once, Dino-Chi will respond. If you press the head button twice, Dino-Chi will respond. Press the head button a few times quickly to see what Dino-Chi will do. Dino-Chi loves to play and be happy.

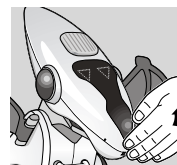

YOUR DINO-CHI'S EYES

 Dino-Chi's eyes are very expressive. The illustrations below identify his moods!

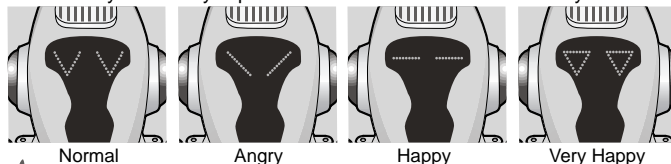


DINO-CHI'S BIORHYTHM


Graphs shown below represent the 8 biorhythm levels of Dino-Chi Pterodactyl. Each level lasts about 30 minutes and determines Dino-Chi's feelings and behavior. For example, when Dino-Chi is in level 1 he will be angry most of the time, and will probably have angry eyes. In level 8, Dino-Chi will be happy almost all of the time, and might sing you special songs!

Remember: If Dino-Chi is angry, to make him happy again you must play with him! Don't forget, Dino-Chi has three different sensors that need attention! (Refer to Dino-Chi's Sensor's section.)

 
Level 1: Dino-Chi is very angry and needs much care and affection.




Level 2: Dino-Chi is still angry, maybe feeding Dino-Chi his food will help!

 


Level 3: Remember to watch Dino-Chi's eyes. They tell you how he feels.

 


Level 4: Getting happier, Dino-Chi loves to be petted!

 


Level 5: Dino-Chi hears when you clap or say "Good Dinosaur!"

 

 
Level 6 (Home position): Dino-Chi starts at this level when reset.



Level 7: Dino-Chi is very happy. He might even sing you a special song!

 

Level 8: Congratulations on being a World-Class Dino-Chi owner.

 

Watch for his special tricks!

 
Here's something else you're going to like-in addition to singing, Dino-Chi likes to imitate the sounds of a slot machine. Now THAT'S funny!

DINO-CHI'S FOOD

Dino-Chi loves to be cared for and the more you take care of Dino-Chi, the happier he will be. Feed Dino-Chi his food by holding the head of the food in front of Dino-Chi's mouth. Dino-Chi will respond with happy eyes, by moving forward towards you and with special chewing sounds. Dino-Chi is very smart. When he has eaten enough, he will refuse to eat when he is "full".

- Do not place the food INSIDE of Dino-Chi's mouth -hold the food in front of Dino-Chi's mouth to simulate feeding.
- Dino-Chi's food does NOT require batteries.
- Do not attempt to open the food.
- Avoid placing the food close to any magnetic-sensitive object like a cassette tape, video tape, magnetic disk, credit card, etc.

WARNING: Dino-Chi's food is a toy. Dino-Chi's food is not intended for use by a live animal.

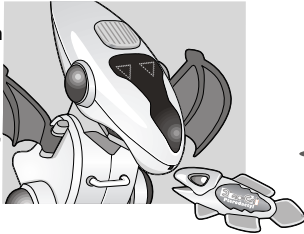

SLEEPING

Because Dino-Chi is a young dinosaur, he needs his sleep. Just like a real dinosaur, Dino-Chi will fall asleep when it is dark or when no one is playing with him. When Dino-Chi gets tired, he will move his head down and lower his wings. His eyes will flash and close. You may even hear a little dino-snore!

Sometimes it takes Dino-Chi a long time to fall asleep. First, he will make noises and screech to try to get your attention. His eyes may even start to flash, depending on his mood. If he doesn't get your attention after 3 minutes, he will crouch down and snore. Then if he still doesn't get your attention after the snoring, he will fall into a deep sleep.

To wake up Dino-Chi when he is in a deep sleep, press his head button. If Dino-Chi was angry when he fell asleep, it may take him a little while to completely wake up so you may need to press his head button more than once. If Dino-Chi was happy when he fell asleep, he will quickly wake up.

COMMUNICATION MODE WITH ANOTHER DINO-CHI OR ANY ROBO-CHI

Dino-Chi Pterodactyl will screech or walk if it senses other Robo-chi nearby in the following ways:

1. When both Robo-chi are happy, your Dino-Chi will screech, then open and close his mouth!
2. When both Robo-chi are angry, your Dino-Chi will screech and walk towards the other Robo-chi!
3. If neither of the above is happening, then your Dino-Chi Pterodactyl will just screech and his eyes will flash!

To enter the Communication mode:
Please follow the sequence below:

 
1. Place two creatures so they face each other and are approximately 6" - 12" apart.
2. Wait for both creatures to stop moving.
3. Press the head button ONCE on BOTH CREATURES at the SAME TIME.
4. The dinosaurs will sense who is stronger. The stronger dinosaur will move forwards and push the other Dino-Chi/Robo-Chi!
5. Both creatures will automatically return to normal play mode after they do "battle" for approximately 2 minutes.
6. If you want Robo-Chis to "communicate" again, begin with Step 1 above.

BATTLE MODE

1. Set two Dino-Chi's face to face to start the battle!
2. Press the button on the top of your Dino-Chi Pterodactyl's head five times while giving him food!
3. Your Dino-Chi Pterodactyl will move forward to attack, screeching and pushing the other Dino-Chi! How much he attacks will be influenced by his biorhythm (how angry he is) and his hunger level (how hungry he is)!
4. If you want Dino-Chi to "battle" again, begin with Step 1 above.


RESET

Press the **RESET** button only if Dino-Chi's movements seem to be malfunctioning. To press the **RESET** button, tilt back Dino-Chi's head and press the **RESET** button located under Dino-Chi's nose. Press the **RESET** button once with a ballpoint pen. Do not press the **RESET** button with any sharp instrument.

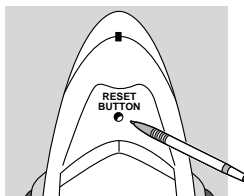

DINO-CHI PTERODACTYL'S WING

 Dino-Chi Pterodactyl's wings are designed to be easily re-attached if they become detached. To reassemble, simply align both notches on the wing and hinge.

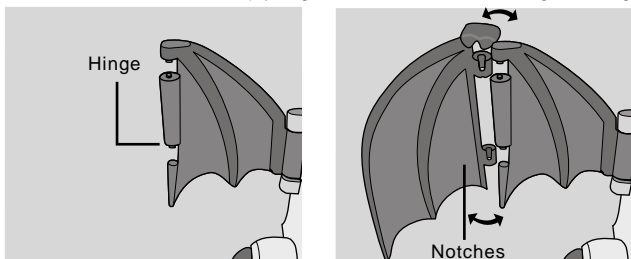

TAKING CARE OF YOUR DINO-CHI PTERODACTYL

To protect your DINO-CHI PTERODACTYL, follow these instructions:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe gently with a barely damp, soft cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker openings.

CLEANING INSTRUCTIONS



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Clean only with a piece of soft dry cloth.

TROUBLESHOOTING

Your Dino-Chi friend is designed to provide hours of fun play. If his actions become erratic and you are having trouble, check to make certain that Dino-Chi Pterodactyl has fresh batteries and then call Tiger Electronics Customer Service Department at 1-800-844-3733.

If you can't see Dino-Chi's eyes, he may be asleep (see section entitled "SLEEPING") or check to make certain there are fresh batteries.

You can wake up Dino-Chi by pressing the head sensor. If he was angry when he fell asleep, it may take multiple head presses to wake him up.

To wake up Dino-Chi when he is snoring, hold his special food in front of his mouth or press his head button.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com.

90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (TIGER) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER.

Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of US\$17.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.

All product returned must be shipped prepaid and insured for loss or damage to:

TIGER REPAIR DEPARTMENT
1000 N. Butterfield Road, Unit 1023
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

TIGER
ELECTRONICS
A Division of Hasbro, Inc.
Where Technology Comes to Play!™

©, TM, & © 2001 Tiger Electronics, Ltd. All Rights Reserved.
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.
©, TM, & © 2001 Tiger Electronics UK Ltd. All Rights Reserved.
Belvedere House, Victoria Avenue, Harrogate, North Yorkshire, United Kingdom HG1 1EL.

© SEGA TOYS 2001
PRINTED IN CHINA

200103880IWTI-01